

05-30-00

PTO/SB/05 (12/93)

Approved for use through 09/30/00. OMB 0651-0033

Patent and Trademark Office: U.S. DEPARTMENT OF COMMERCE

Under the Paperwork Reduction Act of 1995, no persons are required to respond to a collection of information unless it displays a valid OMB control number.

UTILITY PATENT APPLICATION TRANSMITTAL

(Only for new nonprovisional applications under 37 CFR 1.53(b))

Attorney Docket No.: FN-3012

First Named Inventor: Tripathy *et al.*

Title: Element Management System with Automatic Remote Backup of Network Elements' Local Storage

Express Mail Label No. _____

APPLICATION ELEMENTS

See MPEP Chapter 600 concerning utility patent application contents

ADDRESS TO:

Assistant Commissioner for Patents
Box Patent Application
Washington, DC 20231

1. Fee Transmittal Form (e.g., PTO/SB/17)
(Submit an original, and a duplicate for fee processing)

2. X Specification Total pages 125
(preferred arrangement set forth below)

- Descriptive title of the Invention
- Cross References to Related Applications
- Statement Regarding Fed sponsored R&D
- Reference to Microfiche Appendix
- Background of the Invention
- Brief Summary of the Invention
- Brief Description of the Drawings (if filed)
- Detailed Description
- Claim(s)
- Abstract of the Disclosure

3. X Drawing(s) (35USC d113) Total pages 44

4. Oath of Declaration Total pages

a. Newly Executed (original or copy)

b. Copy from a prior application (37 CFR 1.63(d))
(for continuation/divisional with Box 17 completed)

i. Deletion of inventor(s) (Signed statement attached deleting inventor(s) named in the prior application, see 37, C.F.R. 1.63(d)(2) and 1.33(b).)

5. Incorporation by Reference (useable if Box 4b is checked)
The entire disclosure of the prior application, from which a copy of the oath or declaration is supplied under Box 4b, is considered to be part of the disclosure of the accompanying application and is hereby incorporated by reference therein.

6. Microfiche Computer Program (Appendix)

7. Nucleotide and/or Amino Acid Sequence Submission (if applicable, all necessary)
a. Computer Readable Copy
b. Paper Copy (identical to computer copy)
c. Statement verifying identity of above copies

8. Assignment Papers (cover sheet & Documents(s))

9. 37 CFR §3.73(b) Statement (when there is an assignee)
 Power of Attorney

10. English Translation Document (if applicable)

11. Information Disclosure Statement (IDS)/PTO-1449
 Copies of IDS Citations

12. Preliminary Amendment

13. Return Receipt Postcard (MPEP 503) (Should be specifically itemized)

14. *Small Entity Statement(s) (PTO/SB/09-12)
 Statement filed in prior application -Status still proper and desired

15. Certified Copy of Priority Document(s).

16. Other:

* A new statement is required to be entitled to pay small entity fees, except where one has been filed in a prior application and is being relied upon.

17. If a CONTINUING APPLICATION, check appropriate box and supply the requisite information below and in a preliminary amendment:

 Continuation Divisional Continuation-in-part (CIP) of prior application No: 60/135,883 filed 5/26/99.

Prior application information: Examiner: Group / Art Unit:

18. CORRESPONDENCE ADDRESS: Name: Groover & Associates p.c.
Address: 17000 Preston Road, Suite 230, Dallas, Texas 75248 (Dallas County)
Phone: (972) 380-6333, fax (972) 380-4445

Signature

Betty Formby
Betty Formby, Reg.No.36,536, Date: May 25, 2000

Element Management System with Automatic Remote Backup of Network Elements' Local Storage

U.S. Patent Application of:

Niranjan Tripathy,
Gilbert Lévesque,
Salim Galou,

Inventor

Inventor

Inventor

Fujitsu Network Communications, Inc.,

Assignee

Attorney's Docket No. FN-3012

Groover & Associates P.C.

Element Management System with Automatic Remote Backup of Network Elements' Local Storage

Cross-Reference to Other Application

This application claims priority from U.S. provisional application
5 60/135,883 filed 05/26/99, which is hereby incorporated by reference.

Background and Summary of the Invention

The present application relates to telecommunication systems,
and particularly to element management systems which remotely
manage telecommunications network elements.

Background: Telecommunications Network Structure

The advance of modern telecommunications technology, and the
increasing use of data bandwidth by many businesses, has resulted in
an increasing amount of traffic flowing to an increasing number of
nodes. The data bandwidths which can be handled by fiber optic lines
15 have made long-distance data transmission much cheaper, but have
required complex electronics for combining substreams of data and
routing each to its proper destination. The telecommunications
infrastructure includes a wide variety of network elements, each of
which may include a number of complex programmable subsystems.
20 With the explosive growth in technological capabilities, many vendors
have been making rapid improvements in their network element
components.

Telecommunications networks are complex to design, build, and
maintain. Ever increasing demands for improvements, greater
25 bandwidth, ease of use, and interoperability add to this complexity and

require increasingly capable network management. Service providers require network management systems that can accommodate equipment and components that comply with a variety of interface standards.

Background: Developments in Diversity of Network Elements

5 It should be noted that the terms "network element" and "element manager" are also sometimes used in reference to computer networks rather than telecommunications networks. However, the requirements for element management in such networks are vastly different from those relevant to telecommunications networks. First,
10 telecommunications networks are normally have a far larger number of nodes. Second, data stream routing is the primary purpose of telecommunications networks, while in computing networks switching is performed merely when required to link resources demanded by a particular task. (Indeed a WAN will typically be implemented using
15 data channels provided by a telecommunications network operator, so it can be seen that the telecommunications network, in such cases is regarded as a more "fundamental" level on which the connectivity of the WAN can be allowed to depend.) Third, the reliability requirements of telecommunications networks are extremely high, and
20 can be much higher than those of some computer networks. Fourth, a telecommunications network typically includes far more nodes which are physically remote. Fifth, the ratio of processor operations to data bits transmitted is typically different by many orders of magnitude.

25 The network elements are each a complex system which includes many complex programmable subsystems. These programmable subsystems have local memories which store their programming and maintain a record of their operating history. The data in these many local memories is important for auditing system integrity and

reliability.

Background: Element Management Systems (EMSs)

5 Element management systems are used by telecommunications system operators to monitor telecommunications network elements, and change signal switching and routing as required. Conventionally a single "network element" is considered to include a number of independently programmable switching cards (typically one or more shelves full, i.e. tens of cards). Since each card is itself a complex programmable system, the total programmability of a modern network
10 element is very large.

15 Element management is not a trivial task, since each network element includes many complex programmable subsystems, and since very high reliability is required. Element management is rapidly becoming more difficult, since the number of possible programmed states in each network element is steadily increasing.

20 For example, a typical card might have four bidirectional OC-3 interfaces, for a total bandwidth of more than half a gigabaud in each direction. Each OC-3 data stream is resolved into three STS-1 data streams, which in turn are each resolved into 28 data streams at T1 rate (approximately 1.5 million bits per second each). Thus the card can redirect 84 different channels within each of its four data connections. Even without cross-connect options, the theoretically possible number of in/out switching states is 336 factorial ($336 \times 335 \times 334 \times \dots \times 3 \times 2 \times 1$). The theoretically possible number of switching states for a network
25 element which includes 30 such cards will be in the neighborhood of this number raised to the 30th power, which is a very large number (of the order of 10^{21138}).

As the demand for bandwidth increases, hierarchical switching

relations are appearing. For example, currently proposed WDM cards would handle routing of 168 OC-192 channels, each carrying about 10 gigabaud (ten billion bits per second). Each of those OC-192 data streams would then be further manipulated by an OC-192 switching card, which would divide the OC-192 data streams down into (for example) OC-3 data streams, for routing to an OC-3 switching card. (For comparison, ordinary voice connections require only about 56 kilobits per second each, which is much smaller than the smallest data channel of the OC-3 card mentioned above.)

An opposite trend, which also makes element management more difficult, is the larger size of networks. Telecommunications networks underwent a fundamental change in their locational economics in the last decades of the 20th century. This change began when microwave links replaced copper, but in recent years has been driven by the very high bandwidths provided by fiber optic trunk lines. In this new era of locational economics, the physical distance between signal origination and destination points became much less important than it had been previously; and a corollary of this was that economies of scale drove telecommunications networks to increasingly larger sizes (whether measured geographically, or by numbers of nodes, or by bandwidth switched).

The trend to larger networks has also been driven by the increasingly global span of telecommunications carriers. Large carriers have networks which extend over tens of thousands of miles, and they need reliable tools for monitoring and controlling these very large and very far-flung networks.

The larger sizes of networks, in turn, mean that a state-of-the-art network element management system must be able to cope with thousands of network elements, each containing tens of cards which

each are programmable to switch hundreds of channels.

A further pressure on element management systems is applied by customer demand for fast response: a corporate user of bandwidth which requests additional capacity will be severely hampered if the response is not prompt.

The telecommunications network is never static, but is continually changing, in response to operator inputs as well as to equipment changes. Conventionally the operator inputs which command changes have been stored in a log file; but this results in a large text file which is extremely difficult to search. While in theory such a large text file can be searched for debugging or to ascertain the current state, in practice the present inventors have found that this is difficult.

Conventional element management systems (EMSs) have been vendor-specific, so that a network management system must interface to multiple different EMSs. (A model of this interface structure is shown in **Figure 1A**.)

Background: Cross-Connect Management

The number of links in a complex cross-connect cannot usefully be viewed at once, so an operator interface for cross-connect management must provide some way to reduce the number of links seen at once. This is typically done by using multiple windows to view different subsets of links in detail. However, the increasing number of windows means the operators have more difficulty in bringing up the appropriate display view to see the selected link in detail.

Background: Network, Service, and Business Management; TMN

The TMN architecture is a reference model for a hierarchical telecommunications management approach. Its purpose is to partition the functional areas of management into layers. See e.g. ITU-T Recommendation M.3010; Divakara K. Udupa, TMN: Telecommunications Management Network (1999); and the Internet-published tutorial articles http://www.webproforum.com/acrobat/fund_telecom.pdf, <http://www.webproforum.com/acrobat/oss.pdf>, <http://www.webproforum.com/acrobat/tmn.pdf>, <http://www.webproforum.com/acrobat/ems.pdf>; all of which are hereby incorporated by reference.

The TMN architecture identifies five functional levels of telecommunications management: business management layer (BML), service management layer (SML), network management layer (NML), element management layer (EML), and the (increasingly intelligent) NEs in the network element layer (NEL). TMN segregates (or at least distinguishes) the management responsibilities based on these layers. This makes it possible to distribute these functions or applications over the multiple disciplines of a service provider and use different operating systems, different databases, and different programming languages. In the TMN architecture, the element management layer is the only low-level interface to the network elements, but needs to give the higher layers smooth access to information about the network elements.

Background: CORBA

One important component of the software architecture for modern telecommunications has been the object-oriented software relations defined by CORBA (Common Object Request Brokered Architecture). This standard is particularly useful in

telecommunications, where it provides a basic framework for interfacing between element management functions and other functions (e.g. network management software and system management software functions).

5 **Background: Optical Telecommunications Standards and Terminology**

 The role of telecommunications network management is changing due to new requirements for speed, increased bandwidth, and capacity to carry video, digital, and internet data. To provide the needed
10 functions, protocols such as ATM, SONET, and SDH are emerging. Network management systems must accommodate these new technologies and standards.

 The demand for bandwidth has driven many service providers to use optical communication systems. A typical set of standards for
15 optical synchronization and interconnectivity is SONET (Synchronous Optical Network). SONET is a family of fiber-optic transmission rates designed to transport many digital signals with different capacities and to provide a design standard for manufacturers. These design standards provide an optical interface that allows interoperating of transmission
20 products from different multiple vendors, supports new broadband services, and allows enhanced OAM&P (Operations, Administration, Maintenance, and Provisioning).

 SONET has a base rate of 51.84 Mbps, with higher rates being multiples of the base rate. The architecture has four layers, these
25 layers being topped by ATM (Asynchronous Transfer Mode) layers. The photonic layer is the physical layer and includes specifications for the fiber optics, transmitter characteristics (such as dispersion of the transmitter), and receiver characteristics (such as sensitivity). The

section layer converts electric signals to photonic signals and creates SONET frames. The line layer performs functions such as synchronization, multiplexing of data to SONET frames, switching, etc. The path layer performs end to end transport of data.

- 5 Open Systems Interconnection (OSI) is an internationally accepted framework for communication standards between different systems made by different vendors. The OSI model is designed to create an open system networking environment where any vendor's computer system can freely share data with other systems on the
- 10 network. The model organizes the communication process into seven different categories and places these categories in a layered sequence based on their relation to the user. Layers 7-4 deal with end to end communications, and layers 3-1 deal with network access.

15 **Element Management System with Automatic Remote Backup of Network Elements' Local Storage**

- 20 The present inventors have realized that the element management system can itself be used to perform automatic remote backup of the network elements. A backup procedure is launched on a programmed schedule, to maintain a centrally located copy of the local data stored in the network elements (or their subcomponents).

 In one class of embodiments, the operating database of the network elements is stored in a "Software Repository" at a centralized location. The number of databases from each network element that can be stored in the software repository is customizable.

Brief Description of the Drawings

The disclosed inventions will be described with reference to the accompanying drawings, which show important sample embodiments of the invention and which are incorporated in the specification hereof by reference, wherein:

Figure 1 shows NETSMART connectivity to NEs.

Figure 1a shows a network management diagram with vendors using vendor specific or standard interfaces to communicate with a multi-vendor network.

Figure 1b shows the typical layer architecture for management of telecommunication networks.

Figure 2 shows NETSMART window layout.

Figure 3 shows NETSMART topology with drop-down file menu.

Figure 4 shows the filter dialog, a sample of NETSMART dialog elements.

Figure 5 shows the topology manager (with NEs created).

Figure 6 shows the topology search NE dialog.

Figure 7 shows the result of selection using the search NE dialog.

Figure 8 shows the link report in the topology manager/

Figure 9 shows OC-192 2F-BLSR.

Figure 10 shows the configuration of the equipment tab view.

Figure 11 shows the configuration of the properties view.

Figure 12 shows the systemadministration view from the administration manager window.

Figure 13 shows the address mangement view from the administration manager window.

Figure 14 shows the all-view of the address list.

Figure 15 shows the NEU management view.

Figure 16 shows the concept of installing generics from a local

machine.

Figure 17 shows installation of generics from a remote machine.

Figure 18 show sthe remote memory backup and restore window.

Figure 19 shows the crossconnects: DS0 XC tab.

5 **Figure 20** shows the crossconnects: FASTLANE XC tab.

Figure 21 shows the crossconnects: SONET XC tab.

Figure 22 shows the crossconnects: SONET XC tab hairpinning view.

Figure 23 shows the crossconnects: SONET XC tab.

Figure 24 shows the crossconnects: crossconnect report.

10 **Figure 25** shows the crossconnects: DS0 XC tab.

Figure 26 shows the managing facilities dialog.

Figure 27 shows the interface tab: INA attributes view.

Figure 28 show sthe PM element view (from NETSMART menu): monitors tab.

15 **Figure 29** shows the performance manager elelemt view--registers tab.

Figure 30 shows the performance manager element view--database tab.

Figure 31 shows the performance manger equipment view.

Figure 32 shows the performance manager groups/facilities view.

Figure 33 shows the crossconnect report dialog (by crossconnect type).

20 **Figure 34** shows the architecture components of NETSMART.

Figure 35 shows the NETSMART process architecture.

Figure 36 shows the a hardware architecture for one embodiment of the present application.

Figure 37 shows the NETSMART server architecture.

25 **Figure 38** shows a meta model class diagram.

Figure 39 shows a meta base assembly class diagram.

Figure 40 shows a meta base assembly state transition diagram.

Figure 41 shows a meta node class diagram.

Figure 42 shows a meta assembly loading diagram.

Detailed Description of the Preferred Embodiment

The numerous innovative teachings of the present application will be described with particular reference to the presently preferred embodiment (by way of example, and not of limitation).

5 Overview of NETSMART®

NETSMART is a true carrier-class network management system capable of managing very large Fujitsu-based SONET deployments while simultaneously supporting many active users. NETSMART helps build a business by providing the tools to monitor, provision, and
10 troubleshoot the network with unprecedented scalability, graphical interface simplicity, and reliability. As with other user-friendly network management software products, the NETSMART system has an easy-to-use, intuitive graphical user interface (GUI) that allows the user to display a hierarchical view of the network down to the shelf and card
15 level. NETSMART will also permit the user to obtain graphical control over surveillance, provisioning, software download (SWDL), remote memory backup (RMBU), and remote memory restore (RMR). This feature-rich interface allows the user to perform operational tasks without entering data or TL1 commands. Point and click operations
20 allow the user to accomplish the vast majority of all tasks without typing.

The NETSMART system runs on SUN® Enterprise servers sized to meet system requirements. It supports Fujitsu's FLM add/drop multiplexers, FACTR® universal transport and access platform (all the
25 way down to DS0 level), FLASH™-192 lightwave add/drop multiplexers, and FLASHWAVE wavelength division multiplexer (WDM).

NE Support

NETSMART supports many earlier NE releases. For those NEs not directly supported by this version of NETSMART, NETSMART also provides backward and forward NE compatibility.

- 5 *Backward compatibility* allows NETSMART to manage an NE as if its software were at a higher release level than it actually is.

Forward compatibility allows NETSMART to manage an NE as if its software were at a lower release level than it actually is.

- 10 NETSMART also provides Fujitsu Generic Support (FGS) for unknown Fujitsu NEs. FGS includes:

- Login/logoff
- Receive, store, and display alarms
- Display of generic NE icon on the Topology Display
- Allow/inhibit alarm reports

15 **NETSMART Features**

NETSMART combines the functions of both the element management and network management layers of the Telecommunications Management Network model to provide comprehensive management capabilities to the users of Fujitsu networking products.

General Application Features

NETSMART provides the following general application features as part of a comprehensive and robust element and network management solution:

- 25 ● Management of up to 4000 NEs from a single server platform
- Support for OSI DCN connectivity
 - TL1 command line and batch file support

- Generic NE icon capability
 - Distributed and scalable architecture
 - Support for up to 50 simultaneous users
 - Support for IP DCN connectivity
- 5 ● TL1 console allows users to monitor TL1 communication between the NETSMART server and one or more managed NEs
- Intelligent uninterrupted power supply (UPS) support for greatly decreased start-up times after power failure and for enhanced protection from file system corruption

10 **Configuration Management**

NETSMART provides the following configuration management features to support easy and rapid provisioning and inventory management for both individual NEs and entire transport networks.

Flexible Topology Management

- 15 ● Topological link and physical link views
- User-defined groups of NEs with the ability to easily move NEs between groups
 - Tree-widget view of groups, similar to Windows® Explorer, allowing easy viewing and manipulation of managed NEs
- 20 ● Tabular view of network information

Comprehensive Network Element Management

- NE definition, profiles, and configuration autodiscovery
 - Add user-defined NE or group attributes
 - User-defined NE audit and reconciliation
- 25 – Select autonomous messages to be allowed upon NETSMART login

- Manual or automatic database reconciliation; option to update NE or NETSMART.
- NE shelf display with visual indications of equipment states
- GUI-based provisioning of attributes and services states for shelves, plug-in units, and facilities
- GUI-based cross-connect management, providing comprehensive management tools, including redline, DS0, hairpinning, FASTLANE™, and transmux cross-connect management
 - Toolbar shortcuts (1-way, 2-way, 2-way add/drop, 1-way drop and continue, 2-way drop and continue)
 - Bulk cross-connect operations
 - Ability to assign a name to cross-connects
- DWDM wavelength management reports

Network element software management

- Remote NE software upgrades via OSI DCN
- Remote NE database backup and restoration via OSI DCN
 - Ability to restore database to a different NE for rapid NE turn-up
- Remote NE software upgrades via IP DCN (FLASH-192 Release 4.2 and FLM 2400 Release 14.2BS only)
- Remote NE database backup and restoration via IP DCN (FLASH-192 Release 4.2 and FLM 2400 Release 14.2BS only)

Full-Featured Network Inventory Management

- Network wide inventory of NEs, shown in Figure 5: TID, NE type, release level, *audit* state, DCN type.
- NE level inventory reports: CLEI code, part number, equipment service state, date of manufacture, etc.

- Equipment *find* function: Network-wide search for CLEI code or part number

Fault Management

5 NETSMART provides the following network surveillance and troubleshooting features to allow fast and reliable tracking of network alarms and to provide network operators with tools to quickly and easily isolate network troubles.

Network Surveillance

- 10 ● An alarm banner at the top of the Topology window containing summary alarm counts and one-click access to alarm reports
- An active alarm list containing current alarms, standing conditions, alarm acknowledgment information, and alarm record annotations
- 15 ● An alarm history log showing cleared alarms and cleared standing conditions.
- A transient condition log maintaining records of transient condition alarms (TCAs) received from managed NEs.
- and transient conditions
- Alarm-sensitive topology map and shelf views
- 20 ● Audible alarm indications
- Customized alarm viewing options allowing user-defined sorting, filtering, column display/placement, and report layout
- One-click navigation from alarm record to Shelf view.

Network Troubleshooting

- 25 ● Protection switch operation and release
- Facility loopback operation and release
- STS path trace

- DWDM section trace for the detection and isolation of errors between DWDM fiber facilities

Performance Management

NETSMART provides the following performance management (PM) features to support rapid and accurate detection, isolation, and correction of network performance problems:

- Enabling and disabling performance measurement collection from the NETSMART GUI
- Collection of both equipment- and facility-related measures with a 15-minute resolution
- Selection and display of PM information through customized NETSMART reports
- Printing and storage to external files through the NETSMART GUI

Security Management

NETSMART provides the following security management features, which allow quick and accurate administration of user privileges while ensuring robust operation within a secure network operations environment.

- GUI-based functional user profile management allows the customizing of roles through the combination of individual application features.
- Common user roles, such as server admin, client admin, cross-connect user, and alarms user are predefined and available out of the box.
- GUI-based user account management, including the ability to enable and disable accounts either on an on-demand or scheduled basis, are provided.
- Comprehensive security reporting, including reports listing defined users, users with active sessions, and historical user activity is provided.

Platform Requirements

The recommended platform configurations for NETSMART 1.2.2 are:

- The server should be sized (CPU and memory) to meet application requirements (number of NEs, number of users) with an even number of CPUs and with 2 GB of memory for each pair of CPUs.

The disk size, tape and monitor can vary.

Detailed Description of NETSMART

NETSMART is the next-generation network element management software application for the Fujitsu FLM, FACTR®, and FLASH® product lines. In addition, Fujitsu network elements (NEs) that are not fully supported by NETSMART, but conform to a set

of basic TL1 commands, are minimally supported for alarm and configuration purposes. The NETSMART client/server configuration supports up to 25 simultaneous users. Further details can be found in the NETSMART 1.2 Installation and Administration Guide (FJTU-320-940-150) and NETSMART 1.2 Users Guide (FJTU-320-940-100), both of which are hereby incorporated by reference.

The graphical user interface (GUI) allows:

- Display and update of network topology
- Creation of uniquely named NE nodes, groups of NEs, and links
- Propagation of alarms to network topology icons
- Management of NE configurations, including cross-connects
- Monitoring of alarms
- Performance of troubleshooting procedures
- Execution of remote NE memory backup and software downloads
- Management of user security
- Retrieval of performance management reports
- Wavelength management

NETSMART is designed to operate on a dedicated Sun® server/workstation. The application uses the TL1 Operational Support System (OSS) language over an Open Systems Interconnect (OSI) protocol stack to communicate with remote NEs. Management of NEs is accomplished over a combination of wide area networks (WANs), local area networks (LANs), and data communications channels (DCCs), as shown in the example configuration, **Figure 1**.

Network Elements Supported

NETSMART software supports Fujitsu NE releases at three different levels:

Full Support: All NETSMART functions are available.

Forward-Compatible Support:

- Download forward-compatible release level to the NE
- Log on and maintain a session with the NE
- Monitor alarms from the NE (new alarm types may not be recognized)
- Display the shelf view of the NE
- Provision the NE capabilities that were available in the previous release
- Perform remote memory backup and restore (if the NE supports it)
- Support other features previously supported

Backward-Compatible Support: NETSMART treats an earlier release of an NE as the

immediate later major release and processes autonomous messages and command responses as if they were from the more recent version of the NE. Commands that cannot be carried out by the earlier release would be denied, but NETSMART would continue to function.

5 **Using NETSMART**

The following section describes:

- The common desktop environment (CDE);
- How to start the NETSMART™ application on a server and a client;
- How to log on and off;
- 10 • How to turn off the workstation.

Common Desktop Environment

- The CDE is a basic component of the Sun UNIX platform and provides access to start and stop the desktop applications, one of which is NETSMART. The CDE toolbar is located at the bottom of the computer screen. The server CDE toolbar has the Heartbeat icon on the left that provides access to administration type functions. These functions are covered in the NETSMART Administration and Installation Guide. To learn about the various applications available through the toolbar, access the Help menu by clicking the books and question mark icon next to the trash can icon. Several topics display that explain the CDE and its applications.

20 **NETSMART User Levels**

Three levels of NETSMART users are defined:

System Administrator—is the top-level UNIX operator. The System Administrator is responsible for loading the NETSMART software onto the server and other related tasks.

- NETSMART User Administrator**—is the top-level NETSMART operator. The NETSMART User Administrator has all NETSMART privileges within the application, including the ability to create other NETSMART user accounts.

- NETSMART User**—is the operator-level user. The rights of these users are defined by a role description, which is classified by the NETSMART User Administrator. For example, an Alarms User is restricted to using only those commands related to responding to alarms. This user will not be allowed to perform cross-connects.

Starting the NETSMART Application

A central station called the server runs the NETSMART server application and,

optionally, the client user interface(s). After NETSMART is started on the server, it can be started on the client(s). Each client can perform functions independently of the other clients. Running NETSMART on a client has the following effects:

- Only the client initiating the request will receive a response.
- Autonomous alarms sent from the NE will be received by all workstations.
- Depending on the user security level, a user can configure NEs; however, only one user at a time can access the following functions: log on an NE, log off an NE, add NE, delete NE, software download, and NE security.

NETSMART automatically logs on the NEs defined as autologon before the user logs on NETSMART. As each NE is logged on, its alarm status is downloaded to NETSMART.

Exiting the NETSMART Application

Exiting NETSMART closes the NETSMART user interface software program. The network is not affected and the NETSMART server will continue to monitor the network. Normally NETSMART runs continuously on the Sun workstation. However, if it becomes necessary to turn off the server, shutdown procedures are included in the System Administration and Installation Guide.

The NETSMART™ user interface allows quick identification of and response to alarm conditions in a monitored network. The system uses windows and a mouse to minimize keyboard use and training requirements for users.

NETSMART Window Layout

The Topology window (**Figure 2**) displays after the user has logged on the NETSMART application. As additional operations are started up, additional windows can be opened, including multiple occurrences of the same window. Windows can be resized and moved to allow multiple views of the network. For example, a shelf that is in an alarmed state can be displayed in one window and a listing of related alarms can be displayed in another. **Figure 2** is an example of different element positions in the major NETSMART windows. The NETSMART window elements are:

Title bar—The title in the title bar can reflect the top-level element, the component, and the federation being viewed or the type of report or operation being performed. For example, the topology map displays "NETSMART:federation1:Topology" to reflect the top level of network elements, the component, and the federation. If the view was switched to the DSO XC tab for an NE in the Configuration Manager, the title reflects the NE TID, such as "FLM150J." Log Managers will display the type of log, such as "Activity Log."

- 5 1. **Menu bar**—The menu bar wording defines categories of NETSMART commands. Clicking and holding down the cursor on a menu word displays a drop-down list of the available commands for that category. Continuing to hold down the button, dragging the pointer to highlight the desired command, and then releasing the button causes the command to start executing.
- 10 2. **Toolbar**—The toolbar displays the tools, which are command buttons that provide quick access to frequently used functions. For example, on the Topology window, this area is used for NE logon, NE logoff, deleting an NE, adding a ring, and adding a chain. On the right-hand side of the toolbar are the four alarm condition tools. The alarm tools display the number of current alarms and will flash if there are alarms that have not been cleared or acknowledged.
- 15 3. **Tree**—In the Topology window, this area displays a hierarchical list of NEs and groups of NEs. In the Configuration window, this area lists cards or facilities, depending on the selection. In the Security window, this area lists users, roles, or user sessions.
- 20 4. **Graphical area**—This area is used to display large graphical information such as network maps, shelf views, icons, or reports. Dialog and message boxes can also be displayed on top of this area.
- 25 5. **Icons**—An icon is a graphic representation of an object. Icons are described in legends that are available on related windows and are described in Appendix A of this document.
6. **Status bar**—The status bar is used to display useful information such as the results of the last command or the current status of the selected NE.
7. **Scroll bars**—Scroll bars can be used to reposition a portion of the window when the displayed information exceeds the size of the window. Either clicking on an arrow or dragging the scroll button will move the display.

30 **NETSMART Window Elements**
 Several types of Windows elements may appear in the NETSMART window area when commands are selected. These elements are:

- 35 1. **Dialogs**—NETSMART uses dialogs to request information from the user. After supplying the requested information, click on a command button to execute the command. The Tab and SHIFT+Tab keys move the cursor between entry fields in the box.
2. **Message Boxes**—A message box is displayed to explain why a command cannot

be completed, to inform the user of an action in progress, or to remind the user of the possible consequences of a choice.

3. **Command buttons**—Such as *OK*, *Cancel*, *Apply*, and *Help* (located across the bottom of a dialog or message boxes) initiate an immediate action when chosen.

5 4. **Reports**—NETSMART can display data about NEs, provisioning parameters, or conditions in a tabular form. Often that data can be saved as a file and/or printed.

Menu Conventions

Many NETSMART commands are available from the toolbar or from NETSMART menus (**Figure 3**). There are three types of NETSMART menus:

- 10 • Main menu, the horizontal list of command names located immediately below the window title
- Associated drop-down menus for each main menu selection
 - Pop-up menus, usually displayed from a mouse right-click action

NETSMART Dialog Elements

15 NETSMART dialog elements are the building blocks that are used on the base dialog window to add functionality to each dialog. Different dialogs contain different elements to reflect the particular action(s) to be caused by activating the dialog information.

Dialog Title

20 Most NETSMART dialogs have a dialog title or name displayed in the top portion of the dialog border. In some instances, the dialog title may contain the name of a selected element, rather than a constant single title. Other dialogs may have both a constant title and a variable name of a selected element.

Dialog Entities

25 A dialog may contain field labels, data/text entry fields, radio buttons, check boxes, list boxes, drop-down menus, slider bars, and command buttons.

The data/text entry field is designed for the user to type information.

Radio buttons are mutually exclusive groups of buttons. Selecting one button in the group will deselect all other buttons in the group. Check boxes are used to indicate one or more choices.

30 List boxes display a list of values from which the user can select a single value or a group of values. Contiguous (adjacent) groups of values are selected by holding down the SHIFT key while selecting the values with the mouse. Noncontiguous groups of values are

selected by holding down the CONTROL key while selecting the values with the mouse.

Drop-down menus are menus that display when a selection is made from a list box (Figure 4).

- 5 Slider bars are used to set levels. For example, the NETSMART General User Preference dialog uses a slider bar to set the number of minutes that NETSMART can be idle before the NETSMART application screen locks.

Command buttons are located at the bottom of dialog boxes. They are used to indicate what action NETSMART should take with the information that the user entered in the dialog.

10 NETSMART Message Boxes

NETSMART message boxes are a form of dialog designed to alert the user to an impending condition that may alter the current state of NETSMART or NETSMART elements. Message boxes can be one of three types:

- 15 **Acknowledgement**—displays a message that must be acknowledged before continuing. This is usually a "wake-up" type of message and is not associated with any potentially system-affecting actions.

Decision—requires the user to decide how to proceed by selecting a command button.

- 20 **In Progress**—Displays a message stating that an event is occurring and a moving bar to indicate that the process is still continuing. Closing the message box does not stop the process.

NETSMART PROCEDURES

- 25 The Topology window displays when NETSMART is started for the first time. If no network elements (NEs) have been created, no NEs will display in the Topology window on start-up. **Figure 5** shows Topology with NEs already created.

- 30 ***Note:** Most of the main NETSMART™ windows are accessed through the different software managers. These managers are listed on and accessed through the NETSMART menu. Therefore, in the following procedures, the relevant manager is indicated in the first steps. If the proper manager window is not open, it can be opened by selecting the NETSMART menu option and then clicking the appropriate manager option.*

A variety of methods can be used to perform these functions; however, the procedures here are written to offer the most direct methods. References to applicable windows are included in the procedures. As NEs are created, they are, by default,

autodiscovered and logged on. NEs will not be automatically discovered if the user specifically deactivates the default Auto Logon field during NE creation.

Some dialogs are available from several different manager screens because of their general nature. They allow the user to set environmental preferences and lock/unlock the NETSMART screens for security purposes.

Create and Manage NEs

This section describes how NEs are added, modified, maintained and deleted in the NETSMART database. Only Fujitsu NEs are supported in this release and they must have already been physically configured in the network using either TL1 commands or the FLEXR® interface. Fujitsu NEs that are not currently in the supported list, but comply with Telcordia TL1 grammar, are supported as generic NEs for commands such as ACT-USER, RTRV-ALM-ALL, and INH-DBREPT-ALL.

Find NE or Group

This procedure helps to locate an NE or a group of NEs.

Add an NE

This procedure adds an NE definition to the NETSMART database. However, to become active, the NE must already be physically in the network and configured using either the FLEXR interface or TL1 commands.

Clone an NE

Use the Clone NE dialog to make a copy of an existing NE definition. Make changes to the clone to identify a new NE in the network.

Edit NE Parameters

Editing an NE allows changes to be made to some basic NE parameters in the NETSMART database.

***Note:** The contents of the User ID and Password fields cannot be changed for an active NE. If these are to be changed, the NE must be logged off and deleted and added once again with the new User ID and Password information.*

Delete an NE

***Note:** NEs should not be deleted during logon (the NE icon background is white). Wait until the server has finished logging on, then proceed with the delete*

operation. Deleting an NE during logon could cause the NE to be deleted partially. If the NE is partially deleted, you need to restart NETSMART to resolve the problem.

- 5 Deleting an NE logs the user off the NE and removes it from the NETSMART database. Deleting an NE also deletes any links associated with the NE. The NE is still physically in the network, but is removed from the NETSMART database.

Log On an NE

- 10 The user must log on an NE to perform configuration changes and receive alarm information. Only NEs that are in an inactive state can be logged on. If this is the first time this NE has been logged on, autodiscovery is invoked (NETSMART communicates with the NE database and loads the configuration information into the NETSMART database). If you select *Auto Logon* in the Add NE dialog, the log-on process will start as soon as you click *Ok* or *Apply* in the Add NE dialog.

Log Off an NE

- 15 Logging off an NE ends communications between NETSMART and this NE, but the NE is still defined in the NETSMART database and is functioning in the network.

Audit an NE

- 20 Auditing an NE compares the information contained in the NETSMART database with the information stored in the NE. The results of the audit are displayed. When you audit an NE using the following procedure, the Audit/Reconcile level that you set will apply only to this audit. The Audit level that you set when you created or edited an NE will apply only when the NE is restarted.

View the NE State

The current state of any NE in the network can be viewed.

- 25 **Resynchronize an NE**

- 30 Database resynchronization ensures consistency between the NE database and the NETSMART database. Resynchronization involves retrieving the entire database or distinct portions of that database from the NE and comparing this information with that contained in the NETSMART database. Either the NE database or the NETSMART database may be the master data source, depending on the type of data.

Resynchronization can be a time and resource intensive process.

Managing Groups of NEs

Groups are used to organize NEs and partition the network. A group icon can represent one or more NEs or groups of NEs. The background color of the group icon reflects a highest unacknowledged alarm level of NEs in the group.

5 Find a Group of NEs

Finding a single NE and a group of NEs is accomplished using the same dialog.

Add a Group Definition

A group definition can be created and then a group of NEs can be defined or moved into the new group.

10 Edit Group Parameters

Editing a group allows the user to change group parameters. The group parent can also be changed either by dragging the group icon under a new parent in the tree area or by typing a new parent name in the Parent Group field on the Edit Group dialog.

Delete a Group Definition

15 *Note: Deleting a parent group results in deletion of all groups under the parent group.*

This selection deletes a group definition from the NETSMART database. If the group has NEs assigned, a warning is displayed and must be acknowledged before the delete is completed. The group icon will be removed from the topology map and tree structure.

20

Use a Different Background Map for Each NE Group

A different background map can be established for each group of NEs so that when the group is selected, the NEs will be displayed on an appropriate map. The map file(s) must be in "jpg" format and must be accessible by the server. The file can be on a server drive, on a CD ROM or on a floppy disk that has been placed in the floppy disk drive (use the UNIX volcheck command to recognize the floppy disk).

25

Search NE Dialog

The Search NE dialog displays whenever the related *Search* button is selected in another dialog that requires an NE name be provided (for example, in the Add Link dialog).

30 The following procedure assumes that you are currently working in a dialog with a *Search*

button. **Figure 6** shows the Topology Search NE Dialog.

Search Group Dialog

5 The Search Group dialog displays whenever you click on the related *Search* button in another dialog that requires a group name be provided (for example, in the Add NE dialog). The following procedure assumes that you are currently working in a dialog with a *Search* button.

Connect NEs (Links, Chains, Rings)

10 Network Elements (NEs) are connected to provide various telecommunications services. Connection procedures add information about the different types of connections to the NETSMART database. They do not affect the NEs and physical network because the work defined in these procedures must be completed by on-site field technicians.

15 Within NETSMART, a single connection between two NEs is referred to as a physical link. The display of this information on the topology map is referred to as a logical link. There may be more than one physical link between two NEs, but it will be displayed as a single line on the topology map unless the connections form a ring. If a ring is formed using only two NEs, both links are displayed as angled lines, showing as a diamond pattern.

In NETSMART, a link in one direction only is a unidirectional link. A link in both directions is a bidirectional link.

20 In NETSMART, a connection is fully protected only if there are two separate routes and these routes do not share any link. A connection is partially protected if there are two separate routes but these routes do share a link.

Add a Link

25 A link represents a physical connection between two NEs, including generic NEs. This procedure adds the link information to the NETSMART database to represent the connections in the network. It does not affect the networks.

***Note:** The selected group and NE will determine the contents of the fields on the Add Link dialog.*

Tasks:

- 30
- 1 From the NETSMART Topology window, log on all NEs to be included in the link.
 - 2 Select *Add Link* from the *Edit* menu or select the *Link* tool from the toolbar.
 - 3 Using the *Search* button, select information in the following fields:

Group 1—Use this field along with the *Search* button to select a parent group.

NE1—Use this field along with the *Search* button to select an NE. After the NE

has been selected, available ports are displayed in the Linkable Termination Ports section of this dialog.

Group 2—Use this field along with the *Search* button to select a parent group.

NE 2—Use this field along with the *Search* button to select an NE. After the NE has been selected, available ports are displayed in the Linkable Termination Ports section of this dialog.

Linkable Termination Ports—This field displays a graphic representation of the ports that are available for connection for both selected NEs. If a connection is already in use, the box is grayed out. If a link needs to be created to a generic NE, the facility (for example, HS1-1, 1-P) port must be typed into the text field at the top of the Linkable Termination Ports area, followed by a carriage return.

Under each text field, a set of boxes is displayed. Each box displays the RATE (for example OC3), AID (for example 1P) and two direction buttons: Tx (Transmit) and Rx (Receive). Direction buttons are used to make the connection. These buttons also indicate if a port is unidirectional or bidirectional. If both Tx and Rx are enabled, the port is bidirectional. If either Tx or Rx is grayed out, the port is unidirectional.

4 Make a connection between the NEs using one of the following methods:

- To create a unidirectional link from Tx to Rx, click on the *Tx* button for a linkable port for the first NE to select it. Then move the mouse to the linkable port for the other NE and click on the *Rx* button if it is not grayed out. A line displays showing the link, and the Tx and Rx buttons for those ports will be grayed out.
- To create a unidirectional link from Rx to Tx, click on the *Rx* button for a linkable port for the first NE to select it. Then move the mouse to the linkable port for the other NE and click on the *Tx* button. A line displays showing the link, and the Tx and Rx buttons for those ports will be grayed out.
- To create two unidirectional links for a bidirectional port at the same time, click in an area in the box outside the Tx or Rx buttons for a bidirectional port for the first NE. Then move the mouse to a bidirectional port for the other NE and click in an area in the box outside the Tx or Rx buttons. A line displays showing the link, and the Tx and Rx buttons for those ports will be grayed out.

Once a link is successfully created, connection lines will indicate link direction(s), as shown in Figure 7. Additional links can be added until all connections have been defined.

Note: To deselect a box or button, click on it.

5 If the last connection needs to be removed (and *Apply* or *Ok* has not been selected), click

- 5 *Undo*. If all connections need to be removed, click on *Clear All*.
- 6 Click *Apply* to add this link information and leave the Add Link window displayed. Click *Ok* to add the link information and close the Add Link dialog.
- 7 From the *View* menu, select *Graphical* to return to the Topology map display. The link displays on the topology map.

Display Link Information

10 A link represents a physical connection between two NEs. This is NETSMART database information and may not reflect actual physical network connections. To display the link information for a single link, double-click on the link or right-click and select *Link Report* from the menu.

To display the link information for all the links, from the NETSMART Topology window, select *Links Report* from the *View* menu. The tabular view of the Links report (**Figure 8**) displays.

Note the new features of the Link reports in this release:

- 15 • An *EditName* tool can be used to change a physical link name.
- Multiple selection of rows can be used with the *Delete* and *EditName* operations.
- To select a row on the Link Report, click on the row header (numbered from 1 up to the number of physical links displayed) and the row will become highlighted.

For multiple selections, two options are available:

- 20 • Hold down the SHIFT key and click on the desired rows to select a contiguous set of records.
- Hold down the CTRL key and click on the desired rows to select a non contiguous set of records.

25 To view the Display Link dialog for the two NEs in the selected physical link, double-click on a row.

The Link Report toolbar offers the following functions:

- Print** Print up to 100 lines of the current information. Refer to Printing Overview for more information.
- 30 **Filter** Display a dialog where you can specify criteria to filter the information in the display. Refer to Filtering Tabular Information for more information.
- Sort** Display a dialog where you can specify criteria to sort the information in the display. Refer to Sorting Information.
- Columns** Display a dialog where you can specify information to be shown or hidden. Refer to Setting Column Displays for more information.
- 35 **Deselect** Deselect any selected rows.

Reload Update the display with information from the database.

Delete Delete selected physical links from the database.

EditName Change the name for selected physical links. Use the Edit Name dialog to type a new link name. Click on Ok to confirm the change(s).

5 **Edit a Link Name**

The link name defaults to the format <TID>:<port>:<Tx or Rx>::<TID>:<port>:<Tx or Rx> of the connection (for example, FLASH-G:HS1-1:Tx::FLASH-F:HS1-2:Rx). This link name can be changed to reflect user preference.

Delete a Link

- 10 A link can consist of a number of connections between two NEs. This procedure describes how to select an individual connection within a link before deleting the information from the NETSMART database. The procedure does not affect the actual physical connections, so links are referred to as "topology links."

Add a Chain

- 15 Chains use high-speed links to connect terminal and linear NEs. This procedure describes adding the link information to the NETSMART database. The actual physical connections are not performed using this procedure. All NEs that will be included in the chain must be logged on. Generic NEs cannot be included in a chain because the NE type cannot be accurately determined. An NE at the end of a chain must be configured as a terminal type of NE.

- 20 The Add Chain function is a "best-effort" operation. If two or more of the NEs specified in the list of TIDs encounter a compatibility error during ring creation, a dialog box will display. This dialog reports which links were created successfully and which links encountered errors. The chain will be displayed as lines between NEs. To access the Add Chain dialog, first display the Topology window, and ensure that all NEs targeted for the chain have been autodiscovered.

- 25 When the dialog closes, the chain displays on the Topology map. The corresponding links are added to the NETSMART database. Those links that were created will be displayed on the Topology map. For those links that generated errors, one or more of the following self-explanatory error messages may display:

- The configurations for the specified NEs are not compatible.
- High-speed links already exist between two or more of the specified NEs.

- High-speed rates are not compatible for two or more of the specified NEs.
- The directions of the high-speed ports are not compatible for two or more of the specified NEs.
- The payloads of the high-speed ports are not compatible for two or more of the specified NEs.
- The port sequences of the high-speed ports are not compatible for two or more of the specified NEs.

Add a Ring

A ring provides alternative routing in case of a single failure within a network.

10 This procedure adds a ring definition to the NETSMART database. The actual physical connections are not performed using this procedure.

The Add Ring function is a "best-effort" operation. If two or more of the NEs specified in the list of TIDs encounter a compatibility error during ring creation, a dialog box will display, reporting which links were created successfully and which links encountered errors. Those links that were created will be displayed on the Topology map. For those links that generated the errors, one or more of the following self-explanatory error messages may display:

- The configurations for the specified NEs are not compatible.
- High-speed links already exist between two or more of the specified NEs.
- High-speed rates are not compatible for two or more of the specified NEs.
- Directions of the high-speed ports are not compatible for two or more of the specified NEs.
- Payloads of the high-speed ports are not compatible for two or more of the specified NEs.
- Port sequences of the high-speed ports are not compatible for two or more of the specified NEs.

Build a BLSR

A bidirectional line switched ring provides alternative routing in case of a single network failure as shown in **Figure 9**, OC-192 2F-BLSR. The BLSR provides ring protection switching by detecting OC-192 line-level failures. Ring protection involves bridging (transmitting identical traffic on both the working and protection channels) and switching (selecting traffic from the protection channel instead of the working channel). In a bridge and switch, the 96 working time slots (1 through 96) are bridged onto the 96 protection time slots (97 through 192) and transmitted away from the failure.

Each 2F-BLSR can contain up to 16 nodes, labeled uniquely 0 through 15 in the

ring. The ring topology table contains the order of the nodes in the ring.

Squelching prevents traffic misconnections during node failure by inserting STS-1 path AIS at the switching nodes into the time slots. Each node on the ring has the identities of the entry and exit nodes for all services passing through the node. The squelch table keeps track of these entry and exit points by time slot.

Only the channels that are added or dropped at the isolated nodes or used for extra traffic need to be squelched. The squelch table has an entry for each STS-1 time slot that the node is terminating or passing through and the source and destination node IDs.

Note: The squelch table may take some time to display because the information is retrieved from the NE.

Add a Node to a BLSR

Nodes may occasionally need to be added to a BLSR. This procedure adds a node to an existing BLSR definition in the NETSMART database.

Delete a Node from a BLSR

Nodes may occasionally need to be deleted from a BLSR. This procedure deletes a node from an existing BLSR definition in the NETSMART database.

Set/Release Loopbacks

A loopback tests the transmit and receive capabilities of the facilities at both remote and local terminals. A loopback test causes the transmitted signal to be returned to the sending device after passing through all or a portion of a data communications link or NE.

Loopback testing is not available on all NE components. An NE component is a facility, equipment and/or termination point. If the NE component is available, right-click on the NE component in the tree area to display a menu containing *Loopback*.

The NE must be placed in a maintenance state before a loopback can be performed.

Placing an NE in maintenance state is not service affecting. However, once an NE has been placed in a maintenance state, actions performed on that NE may be service affecting (a loopback, for instance, is service affecting).

Set and Get a Path Trace

Path trace is a signal sent on the SONET overhead and is only supported at the EML layer. It allows the user to assign a unique path trace message to the transmit NE and the destination NE.

Tracing a path involves assigning the outgoing trace message (TRC) at the transmit

NE, assigning the same message for the incoming trace message (EXPTRC) at the path destination NE, and viewing results in the incoming trace (INCTRC). If the message is received correctly, the path trace is successful.

Note: Path tracing is not available on all NE components.

5 **Set and Get a Section Trace**

In SONET, the terms section, line and path refer to the subsections of a route that a signal takes when traveling from origin to destination.

10 A section is the segment of fiber between two repeater NEs. It is possible for a signal to be corrupted or degraded over the span of a section. To troubleshoot a particular section for signal quality problems, a test signal can be sent on the section and the returned signal is compared to an expected trace. This is the essence of section trace.

Use the Section Trace window to view and modify the attributes related to section trace on a selected facility on an NE.

Note: Section trace is not available on all NEs.

15 **Protection Switching**

Protection switching allows a transfer of service between working and protection facilities or equipment. Protection switching allows plug-ins to be removed and replaced without affecting traffic. This feature also allows editing of the FFP attributes of facilities and equipment within the optical facility and equipment protection groups.

20 *Note: Protection switching is not available on all facilities and equipment.*

Synchronize Timing

25 Timing attributes that will define the synchronization timing source for the NE and the facility over which the output clock signal is sent, can be set by the user. The synchronization reference can also be switched to another source. Choices of primary, secondary or internal clock references are available to an NE.

Note: It is dangerous to set the NE timing reference to internal clock timing reference. NEs using internal clock reference can easily become out-of-sync with other NEs.

Note: Synchronization switching is not available on all NEs.

30 **Equipment Maintenance**

NETSMART can be used to perform basic maintenance on the NE hardware. These include:

- Adding and deleting a shelf for an existing NE
- Provisioning a plug-in unit
- Modifying equipment parameters
- Creating and deleting equipment protection groups (EPGs)

5 **Add a Shelf to an Existing NE**

The shelf should be installed on an NE before adding it to NETSMART. A NETSMART user can add or remove shelves from an existing NE. For instance, to add a new Narrowband shelf (NBS) to an existing FACTR NE, NETSMART will need to autodiscover the shelf and its components such as slots, cards, facilities and cross connects.

10 **Delete a Shelf from an Existing NE**

A NETSMART user can remove shelves from an existing NE.

Note: All crossconnects must be removed before a shelf can be deleted.

Provision a Plug-In Unit (Put In Service)

- 15 A main shelf for a FLASH-192 (Release 2.1) or a FACTR Common shelf (CMS) or NBS can have some plug-in slots provisioned. The shelf must already be installed, but the plug-in does not need to be installed. Provisioning can also be accomplished by selecting the card or port and changing the required attribute to In Service (IS). **Figure 10** shows the Equipment Tab View for Provisioning.

Modify Equipment (Card and Port Attributes)

- 20 Individual cards and ports have attributes that can be modified. These attributes are shown in blue on the Properties window for the card or port. Values that are displayed in red are critical. Changing a critical value will trigger an automatic resynchronization.

Tasks

- 1 Log on the NE to be provisioned.
- 25 2 From the Configuration Manager window, select the *Equipment* tab.
- 3 Open the tree. From the tree area, select the card or port to be modified. The view in the window changes to the *Properties* view. Otherwise, select the card in the graphical shelf view, then right-click to display a menu where you can select *Display Properties*. The *Properties* view (**Figure 11**) displays.
- 30 4 Modifiable attributes are shown in red and blue. Black text cannot be changed. In the *Value* column, click on the selection to be changed. A button appears to the right of the text. Type or select an option. Click on the button to display a drop-down

list of available options. Select an option from the list. Repeat this step for all attributes that need to be changed for this card or port.

- 5 Click on the *Modify* tool, or select the *Update* option from the *Operations* menu. The Modify Attributes Operation progress dialog displays. When it closes, the attributes have been changed.

Create or Delete an EPG

Redundant equipment provides a level of protection against failure of certain plug-in units. For some types of NEs like FLASH-192s, EPGs can be activated or deactivated using this procedure. For FLM and similar NEs, EPG are automatically created and cannot be deleted or modified.

Using the Administration Manager

The Administration Manager provides the ability to:

- View administrative details about a selected NE.
 - Manage NE addressing.
 - 15 View information about NE use.
- Select *Administration Manager* from the NETSMART menu to display administration management tabs.

Use the System Administration Tab

- 20 The *System Administration* tab displays details about the different NETSMART processes that are running on the server. The NETSMART version that is currently installed and the most recent start time are shown in the heading.

Process monitoring can be enabled or disabled.

- 25 System monitoring checks the status of the servers (active or inactive) You would disable monitoring only in extreme cases such as an urgent need for resources. If monitoring is enabled (the default setting) and a server goes down, NETSMART will detect state, and issues a message and attempts to restart the server. If monitoring is disabled and a server goes down, NETSMART will not detect its state change and will not issue a message or attempt to restart the server. **Figure 12** shows the Administration Managerview.

Administration Manager Set Password Dialog

- 30 From the *System* menu, select the *FTP* submenu. There are two cascading selections, *Set Password*, and *Show Password*. Select *Set Password* to change the password for security protection during an FTP transmission.

Use the Address Management Tab

The Address Management tab provides details about each NE. Information includes the TID, the communications protocol, the originating address type and the address.

- 5 All system-resolved or manually created OSI addresses are defined as TARP (Target ID Address Resolution Protocol). All IP addresses are defined as NETSMART. When the server restarts, all NETSMART addresses are retained; all TARP addresses are lost and must be re-resolved as part of the login process.

From the NETSMART System Administration window, select the *Address Management* tab (**Figure 13**).

10 Add an OSI Address

Every NE in a NETSMART network configuration must have an OSI or an IP address. To enable communications within a ring configuration, the gateway NE must be configured as an IP NE.

- 15 If the NE is not a gateway NE, set an OSI address using the following procedure to configure an OSI NE:

View an OSI Address

Use this procedure to view an existing OSI address.

Add an IP Address

- 20 Every NE in a NETSMART network configuration must have an OSI or an IP address. When enabling communications within a ring configuration, the gateway NE must be configured as an OSI NE. If the NE is not a gateway NE, set an IP address for the NE. **Figure 14** shows the Administration Address List--All View.

View an IP Address

Use this procedure to view an existing IP address.

25 Delete an IP Address

Use this procedure to delete an existing IP address.

Use the NEU Management Tab

- 30 The NETSMART hardware platform being used will support a maximum number of NE units (NEUs). When this number is exceeded, the database may not function properly. The NEU Management tab provides information about this usage, allowing for

monitoring and managing network capacity.

The NETSMART NE Utilization window (**Figure 15**) is divided into three areas:

The top part of the window contains the window title. The Max Capacity field shows the maximum capacity of the network. The *Current Utilization* field shows the current NEU count for the network. The *Available Capacity* field shows how many more NEUs can be supported within this network.

The *Summary* portion of the window shows summary information, including the *Total Number Of NEs*, the number *Managed*, the number *Logged-in*, the number *Logged-out* and the number *Not Managed*.

The total number of NEs is the total count of NEs in the system. This includes NEs that are both managed and not managed. *Managed* NEs are those that the NETSMART system is aware of and has management control over. *Logged-in* are NEs that are logged in and active in NETSMART. *Logged-out* are NEs that are logged out and inactive. *Not Managed* are NEs that NETSMART is aware of but does not manage or control.

The *Details* portion of the window provides detail information, including the *NE Type*, the *NE Weight*, *Number of NEs* of this type in this network and the *NEU Count*. The capacity of NETSMART systems is based on Network Element Units (NEUs). Each type of NE is assigned an NEU value based on the number of objects to be managed.

Use the NEU Management view to monitor the number of NEUs currently logged on the system. Once the maximum capacity is reached, the system will deny creation of any new NEs.

Manage NE Software

This section provides procedures describing:

- How to download software generics to an NE
- How to perform NE memory backups
- How to restore Service Database files to the NE
- How to activate the software generics

NETSMART uses an intermediate database called Software Repository to store and retrieve generic and service database files. This section describes procedures you will perform to install and extract software generic and service database files using the Software Repository.

About the Software Repository

The Software Repository is an internal database that NETSMART maintains in

order to store software generic and service database files. It provides a way to extract files from the database to the file system. It also provides the means to remove generic and service database files from the database.

- 5 The Software Repository works off-line with the NE, so it is not necessary to log on to the NE to use this component. Once the generic or service database is installed in the repository, it can be downloaded to the NE using the Software Download (SWDL) component.

About Remote Memory Backup and Restore (RMBU)

- 10 Remote Memory Backup and Restore (RMBU) is used to make an NE memory backup and to restore the backup to the NE, when required. To use the SWDL and RMBU components, you must log on the NE. See Section Remote Memory Backup and Remote Memory Restore for details about using these features.

- 15 An RMBU Scheduler feature lets you schedule RMBU in advance. Scheduling options include weekly, monthly or one-time backups. See the *Installation and Administration Guide, Scheduling Remote Memory Backups for NEs* for details about using this feature.

Install Generics

- 20 Generics are software files that are specific to a particular NE and version. To upgrade the NE to a different version, the new version of the generics must be downloaded to the NE. Generics are supplied by Fujitsu Network Communications, Inc. (FNC) and are available to the customer:

- On a floppy diskette
 - On a CD ROM
 - From a local or remote machine, using FTP file transfer
- 25 See the *Installation and Administration Guide, Installing NE Software Generics* for procedures on installing software generics from a CD ROM or floppy.

Install Generics from a Local Machine

- 30 Installing generics from a local machine is a single-step process because generics were already copied into the NETSMART client machine file system. Whether the installation is done using FTP, floppy disk or CD ROM, the NETSMART server copies the generic files into the repository. **Figure 16** illustrates the concept.

Install Generics from a Remote Machine

Installing generics from a remote machine is a single-step process. Generics can be directly picked up from the remote machine. In the following information, generics are available on a remote machine (where the NETSMART client is not running) that is connected to the network. **Figure 17** illustrates the concept of installing generics from a remote machine. The following are required before installing generics from the Client machine:

- The remote machine must be running with the FTP Server daemon active.
- You need log on access to the machine.
- You need to know the directory path on the remote machine where the generics reside.

Extract Generics

If software generics are installed in the software repository, they can be extracted. The local file system can be extracted (where the NETSMART client is running) to any other remote machine where you have log on access, or can be copied onto a floppy disk or CD ROM for distribution purposes.

Remove Generics

If software generics are installed in the software repository, they can be removed. Be sure to remove the generics from the server machine.

Install the Service Database

You can install the service database files in the software repository for downloading to the NE in extreme cases such as NE memory corruption. To install the service database files, you need to have a valid set of database files from a previous NE backup created with the RMBU manager. Typically, if a memory backup of the NE has been taken, its service database files are stored in the software repository. It is possible that these files were extracted to the file system. In this case, install the files into the repository to download them to the NE.

Install from a Remote Machine

If the service database files are available on a remote machine file system, they can be installed directly into the software repository. The following are required before installing generics from the NETSMART client machine:

- The remote machine must be running with the FTP Server daemon active.
- You need log-on access to the machine.
- You need to know the directory path on the remote machine where the generics reside.

Extract the Service Database

If the service database files are installed in the software repository, they can be extracted so that they can be saved on the file system or copied onto a floppy disk or CD ROM for distribution purposes. Extract the files to the local file system (where the NETSMART client is running) or to any other remote machine where you have log-on access.

Remove the Service Database

If the service database is already installed in the software repository on the server machine, it can be removed. Be sure to remove the service database, as others (those using NETSMART servers) may want to use the machine.

Software Download

SWDL is used to download new generic software releases (software generics) onto an NE using File Transfer Access and Management (FTAM) and FTP. As a precondition for SWDL, the generic should be installed in the Software Repository. For details about installing the generic on the Software Repository, refer to Install Generics for more details.

During the Software Download process, files are copied to the RAM Disk on the NE in the first step and then onto the CPUs. There are three different categories of NEs.

OSI NEs

IP gateway NE

IP subtending NEs.

Software Download on an OSI NE

The SWDL to Open Systems Interconnect (OSI) NEs is accomplished in the following way.

The files are copied to the RAM Disk on the NE and then the files are copied to the standby memory of the NE, or

Files are copied from Network Management System (NMS) to the RAM Disk on the OSI NE using FTAM (for IP gateway NEs this is done using FTP). At this stage, the software download is in a pending state; it will become active when the software is activated. For activation information, refer to "Configuring Scheduled Remote Memory Backups".

Software Download on IP Gateway NE

SWDL on an IP gateway NE is accomplished in the same way as the OSI NE.

Software Download on IP Subtending NE

For subtending NEs, an IP gateway NE is used as a pass-through for the files to be copied from the NMS to the destination NE. The procedure is accomplished in three steps.

- 5 1. The files are copied from NMS to the IP gateway NE RAM Disk.
2. Then files are copied from the gateway NE RAM Disk onto the IP subtending NE RAM Disk.
3. Finally, files are copied from the subtending NE RAM Disk to the corresponding CPUs on the IP subtending NE.

10 Consecutive Operations

From a user perspective, software download can be initiated only on a single NE at a time. Initiating software download on several NEs at the same time is not supported; however, you can start software download on different NEs, running one after another. Software download cannot be initiated on any NE while the NE is performing a remote backup or a restore.

- 15 For IP subtending NEs, an IP gateway NE is used as a pass-through for copying the files. An IP Gateway NE can be a gateway for several NEs, meaning that all the NEs under this gateway NE are dependent on this gateway NE for software management operations.

20 Details Dialog

Once an NE is selected from the Software Download dialog and the download is started, you can monitor the download. Select the Details dialog by clicking the *Details* button in the Software Download dialog.

- 25 The Details dialog displays the number of files to be transferred in each step and also the number of files currently transferring. Status strings on the Details dialog help you to understand the operation.

An important string called *Failure Reason* is displayed on the Details window if the SWDL is aborted. The failure reason will help you to understand why the SWDL failed.

Abort Operation

- 30 After SWDL is started, the Software Download can be aborted. Select the *Abort* button to display a status string on the SWDL window, indicating that the abort has initiated. It may take several minutes for the abort operation to be completed, depending on the stage of the SWDL.

Once the abort is completed, the status string contents will change to inform the user that the abort has completed. The message will provide the time of the abort. You can now schedule an activation and set the validation time. For more details about activation, refer to “Configuring Scheduled Remote Memory Backups”.

5 **Remote Memory Backup**

Remote memory backup (RMBU) backs up the configuration database on an NE to the NETSMART database. At any time, only the last two versions of backup (per NE) are stored in the database. The backed-up NE configuration information can either be extracted onto any machine (with an active FTP daemon) or can be restored from the NE database. Refer to Extract the Service Database for details about extracting backed-up files onto a remote machine. Refer to Remote Memory Restore for details about restoring the NE database.

During the backup process, files are copied from CPUs to NE RAM Disk. There are three different categories of NEs.

- 15 OSI NEs
- IP gateway NE
- IP subtending NEs

Remote Memory Backups from an OSI NE

A remote memory backup from an OSI NE is accomplished in the following way:

20 The configuration files are copied to the RAM disk on the NE from active memory. The files are copied from the NE’s RAM disk to NETSMART using the OSI FTAM protocol.

Remote Memory Backup from an IP Gateway NE

A remote memory backup from an IP gateway NE is accomplished in the following way:

25 The configuration files are copied to the RAM disk on the NE from active memory. The files are copied from the NE’s RAM disk to NETSMART using the FTP protocol.

Remote Memory Backup from an IP Subtending NE

A remote memory backup from an IP subtending NE is accomplished in the following way:

30 The configuration files are copied to the RAM disk on the NE from active memory. Using the OSI FTAM protocol, the configuration files are copied from the subtending

NE's RAM disk to its gateway NE's RAM disk.
The configuration files are then copied to NETSMART using the FTP protocol.

Concurrent Operations

5 Backup can be initiated on up to 100 NEs. These NEs include OSI NEs, gateway NEs and IP subtending NEs. If backup is initiated on an IP subtending NE, this operation locks its gateway NE and transfers files through the gateway NE. If backup is initiated on multiple NEs within a ring, the gateway NE is shared across these backup operations.

At any time, backup for 10 NEs can be initiated in parallel. If backup for more than 10 NEs is requested, backups are serialized.

10 During either of the SWDL/RMR (Remote Memory Restore) operations on a gateway or subtending NE, you cannot initiate a backup on any of the NEs in that ring. If the NE database is being restored onto a gateway NE or a subtending NE, a backup cannot be initiated on any of the NEs in that ring.

Details Dialog

15 The Details dialog displays the number of files to be transferred in each step and also the number of files currently transferring. Status strings on the Details dialog help you to understand the operation.

An important string called *Failure Reason* is displayed on the Details window if the SWDL is aborted. The failure reason will help you to understand why the SWDL failed.

20 Abort Operation

You can select an NE and click the *AbortBkp* tool. Status messages for this NE indicate initiation and completion of the abort operation. **Figure 18** shows the Remote Memory Backup and Restore Window.

Remote Memory Restore

25 If database corruption occurs on an NE, remote memory restore allows a previously stored configuration database for that NE to be used. The configuration files for an NE are stored either from the backup operation or by installing NE database files from a remote machine (with the FTP daemon running). Refer to Remote Memory Backup for details about backing up NE configuration files from an NE. Refer to Remote Memory Restore
30 for details about installing these files.

Log on the NE to be restored. During the restore process, files are copied from NMS to NE RAM Disk and then onto CPUs. There are three different categories of NEs.

OSI NEs
IP gateway NE
IP subtending NEs

Remote Memory Restore to an OSI NE

- 5 A remote memory restore to an OSI NE is accomplished in the following way:
The configuration files are copied from NETSMART to the NE's RAM disk.
The configuration files are copied from the RAM disk on the NE to standby memory.
An activation of the standby memory needs to performed. Refer to Software Activation
for information on software activation.

Remote Memory Restore to an IP Gateway NE

- 10 A remote memory restore to an IP Gateway NE is accomplished in the following
way:
The configuration files are copied from NETSMART to the NE's RAM disk using the
FTP protocol.
15 The configuration files are copied from the RAM disk on the NE to standby memory.
An activation of the standby memory needs to performed. Refer to Software Activation
for more information on software activation.

Remote Memory Restore to an IP Subtending NE

- 20 A remote memory restore to an IP subtending NE is accomplished in the following
way:
The configuration files are copied from NETSMART to the gateway NE's RAM.
The configuration files are copied from the RAM disk on the gateway NE to the RAM
disk on the subtending NE using the OSI FTAM protocol.
25 The configuration files are copied from the RAM disk on the subtending NE to standby
memory.
An activation of the standby memory on the subtending NE needs to performed. Refer
to Software Activation for more information on software activation.

Consecutive Operations

- 30 A restore can be initiated on only one NE at a time. If any software management
operation is running on any NE in a ring, you cannot initiate a restore operation on any of
the NEs in that ring.

Backup Details Dialog

The Details dialog displays the number of files to be transferred in each step and also the number of files currently transferring. Status strings on the Details dialog help you to understand the restore operation. An important string called *Failure Reason* is displayed on the Details window if the restore operation is aborted. The failure reason will help you to understand why the restore failed.

Abort Backup Operation

While the restore process is active, you can select an NE and click on the *AbortBkp* tool to abort the backup process. Status messages for this NE indicate initiation and completion of the abort operation.

Software Activation

After the generic or database is loaded into memory, you need to schedule an activation.

Note: When activating either a software download or a remote memory restore, activation time can be selected based on the NE time. NETSMART reads the time from the TL1 response and places the NE time plus 2 minutes in the Time field. This is to prevent the SWDL or RMR activation time from being the exact current time. If this was the case, by the time the user finished selecting activation time, the time would now be in the past.

Managing Crossconnects

This section provides the procedures for creating NE crossconnects. Crossconnect commands perform changes to the network and update the NETSMART database. NE crossconnect management provides the ability to modify the route for a circuit by changing the NEs and links where a signal is carried. NETSMART's graphical crossconnection feature lets you create crossconnects using a mouse click interface and lets you view and report on an end-to-end circuit through a SONET network.

Circuits may span multiple NEs and multiple interconnected rings and virtual rings. You can select the appropriate pass-through, drop-and-continue and service selector to assign.

Pending, active and errored connection states are supported. A pending connection state is one in which the crossconnects associated with a connection are defined in the database, but have not been configured in the NEs. In an active connection, the crossconnects associated with a connection are defined in the database and also configured

in the NEs. An errored connection exists when there is a discrepancy between the definition of the connection in NETSMART and the actual crossconnects in NEs.

Crossconnect windows can be accessed from the Configuration Manager or by selecting *Crossconnect Manager* from the NETSMART menu. The crossconnect windows all bear the title "Configuration".

Add a DS0 Crossconnect

Use this procedure to create redline and regular DS0 crossconnects that drop off from the FACTR low-speed group (Group 3, 4, and 5) feeder to the Remote Digital Terminal (RDT) interface/NBS. T1 crossconnects are created using the procedure found in Add a T1 Crossconnect, below.

If the interface group is Integrated Network Access (INA) or TR-008 Mode I or III, the next available DS0 time slot will be presented. If the interface group is TR-303 or TR-008 Mode II, the next Call Reference Value (CRV) number will be presented, and can be overridden. NETSMART determines the DS0 facility AIDs and sends the appropriate TL1 commands. **Figure 19** shows the DS0 XC crossconnect tab.

Add a T1 Crossconnect

Use this procedure to create the redline and regular DS1 feeder side of an interface group and the T1 facility in the FACTR low-speed group (Groups 3, 4, and 5) feeder for DS0 services.

Crossconnects are limited by the following types of interface groups:

TR-008 (Mode I)—Choose an available feeder DS1 (A, B, C, or D).

TR-008 (Mode II or III)—Choose an available feeder DS1 (A or C).

TR-303—Choose an available DS1 (1 through 28).

INA—The T1 crossconnects are automatically created between the feeder of the INA interface group and the VT1 of the low-speed group when the first DS0 crossconnect is created. You cannot create them, but they can be displayed.

Tasks:

1 Log on the NE to be crossconnected.

- a. If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *DS0 XC* tab.
- b. If the crossconnect needs to be a redline, click the *Redline* tool or select *Redline* from the *Create XC* selection on the *Operations* menu.
- c. Click on the DS1 box to be connected, then drag the line to the port and click

again. A dotted black line appears.

Note: If the interface group or port (rectangle) is yellow, then it is already in use (possibly at a different speed).

- 5 d. To complete the connection, click the *Update* tool or select *Update NE* from the *Operations* menu. The Confirmation dialog displays

Add a FASTLANE Crossconnect

FASTLANE crossconnects are used to map Ethernet and DS3 UNI services into an STS-1. FASTLANE™ service is only available for functional groups 4 and 5 configured as D3U or LAN bridge port (LBP). At least one dedicated STS-1 channel across the SONET ring must be available to carry the FASTLANE traffic. Two types of FASTLANE crossconnects are supported:

Ethernet Port-Mapped Bridge (EPMB)—an entity connecting an EPMB to a ring-side Asynchronous Transfer Mode virtual channel (ATMVC)

15 **DS3 User Network Interface (D3UNI)**—an entity connected to a particular ATMVC supported by a D3 UNI port to a ring-side ATMVC Ethernet port provisioning and ATMVC provisioning are performed independently of establishing crossconnects. Create ring-side ATMVCs to create a path through the network between the switches. The D3 UNI ATMVC ports are created by NETSMART. The value is shown for the next available Virtual Channel Identifier (VCI). You may override that channel selection.

20 Tasks:

- 1 Log on the NE to be crossconnected
- 2 If the *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *FASTLANE XC* tab. The Fastlane XC view (**Figure 20**) displays.
- 25 3 Select *Create ring VC* from the *Operations* menu or right-click and select *Create Ring VC* from the drop-down menu. The Ring VC creation dialog displays.
- 4 Select or type values in the following fields:

Ring VC VPI (0-0)—Type the Virtual Path Identifier (VPI). Only 0 is valid. **Ring VC VCI (34-1023)**—Type the VCI of the virtual channel.

30 **PCR**—Type the Peak Cell Rate (PCR) per second.

SCR—Type the Sustained Cell Rate (SCR) per second.

Congestion Control—Select whether congestion control should be enabled or not.

AAL-Type—Select the ATM Adaptation Layer (AAL). Only AAL5 is valid.

From NE TID—The starting NE TID is the default value.

35 **To NE TID**—Select the ending NE TID from the list.

crossconnect.

Add a One-Way Service Selector Crossconnect

The one-way service selector is used for the BLSR configuration for FLASH-192 and FLM-2400 SONET NEs.

5 Tasks:

1 Log on the NE to be crossconnected

2 If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *SONET XC* tab. The SONET XC view (**Figure 23**) displays.

10 3 Select the *One Way* service selector tool. Click on the low-speed port, then click on the destination high-speed port. The crossconnect displays as a dotted line.

Note: The default Service Selector and Holdoff times can be changed at this time by right-clicking on a crossconnect and selecting the appropriate menu item.

15 4 To complete the crossconnect, click on the *Update* tool or select *Update NE* from the *Operations* menu.

Perform a Bridge on an Existing Crossconnect

Bridge crossconnect functionality is supported for BLSR configurations of FLASH-192 and FLM 2400 SONET NEs. By setting up a bridge, traffic from one termination point is routed to two other termination points. Bridge and roll operations are performed on two

20 NEs to complete the entire task. First do a bridge on a crossconnect on one NE and then do the roll on the other NE. After the roll is performed, clear the bridge on the first NE.

1 Log on the NE whose path is to be modified.

2 If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *SONET XC* tab. The SONET XC view displays.

25

3 Select the 1-way drop crossconnect to be bridged.

4 Click the *Bridge* tool or select *Bridge* from the *Operations* menu.

5 Select the destination time slot. The display will show the new bridge connection as a dotted line on the window when the operation is completed.

30 6 To complete the connection, click the *Update NE* tool or select *Update NE* from the *Operations* menu.

Perform a Roll on an Existing Crossconnect

Roll crossconnect functionality is supported for the FLASH-192 and FLM 2400 SONET NEs. On an FLM 2400 SONET NE, this functionality is available only when the NE is configured as a BLSR. Rolling facilitates switching the source AID from one time slot to another time slot without loss of signal. Traffic is buffered by the NE during the roll operation.

The roll operation can be performed by selecting a 1-way crossconnect and then clicking the *Roll* tool or by selecting the *Roll* menu item from the *Operations* menu. After you select *Roll*, rubber banding starts and you can select a new origination point. A pending roll crossconnect is created. You can then activate the roll crossconnect, which results in deletion of the original crossconnect and creation of a new roll crossconnect. Bridge and roll operations are performed on two NEs to complete the entire task.

First set a bridge on a crossconnect on one NE and then set a roll on the other NE. After the roll is performed, clear the bridge on the first NE.

1 Log on the NE whose path is to be modified.

2 If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *SONET XC* tab. The SONET XC view displays.

3 Select the 1-way crossconnect to be rolled from.

4 Click the *Roll* tool or select *Roll* from the *Operations* menu. A prompt displays directing you to select the destination time slot.

5 Select the destination time slot. The display will show the new connection as a dotted line on the window when the operation is completed. The old connection will be displayed as a solid line.

6 To complete the connection, click the *Update NE* tool or select *Update NE* from the *Operations* menu.

Crossconnect Confirmation

The same dialog displays to confirm all types of crossconnects.

1 To complete the crossconnect, click on the *Update* tool or select *Update NE* from the *Operations* menu. The crossconnect Confirmation dialog displays.

2 Verify the connections. If the connections are correct, click *Ok*. If the crossconnect was created successfully on the NE, the line(s) will change from dashed to solid. If the crossconnect on the NE fails, the crossconnect lines will remain dotted. If connections are not correct, click *Cancel* and then change the connections. The

Confirm Connection dialog displays, indicating the success or failure of the crossconnect.

- 3 Click the *Close* button to close the Crossconnect Report. **Figure 24** shows the Crossconnect Report.

5 Update the Crossconnect Name

Crossconnects are not given a name when they are created. The name can be structured to conform to the user's own network naming convention; however, crossconnect names must be alphanumeric, with no special characters. Several crossconnects can be updated at the same time.

- 10 **Note:** *A crossconnect name must be alphanumeric and cannot contain any special characters.*

- 1 Log on the NE with the crossconnect(s).

- 2 If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the *SONET XC* tab. The SONET XC view displays.

- 3 Select the crossconnect that needs a new name. Select *Set Name* from the *Operations* menu, or right-click on the crossconnect and choose *Set Name...* . The Set Crossconnect Names dialog displays.

- 4 Type a new name.

- 20 5 Select the *Set All* button to move the crossconnect name to the *Crossconnect Name* field in the Set Crossconnect Names dialog. Click *Ok* to close the Set Crossconnect Names dialog.

- 6 The cross-connect displays as a dotted line. Click on the *Update* tool. The Confirmation dialog displays. Verify that the information is correct and click *Ok*.

- 25 7 The Messages dialog box displays with the new name shown in the table. Click *Ok*.

Adding Redline Designation to an Existing Crossconnect

Adding a redline designation to a crossconnect indicates that it is a critical circuit and care should be taken when changes or disconnects are issued that affect the crossconnect.

- 30 1 Log on the NE with the crossconnect(s)
- 2 From the Configuration Manager, select the *SONET XC* tab or *DS0 XC* tab, depending on the type of crossconnect to be redlined. **Figure 25** shows the DS0 XC display.

- 3 Select the crossconnect that needs to be redlined. Click the *SetRedl* tool or select *Set Redline* from the *Operations* menu. Multiple crossconnects can be chosen by holding down the SHIFT and CTRL keys, then clicking on the crossconnect lines. The crossconnect line will change to a dotted red line.
- 5 4 To complete the redline designation, click on the *Update* tool or select *Update NE* from the *Operations* menu.

Delete a Crossconnect

Most crossconnects can be deleted using this procedure. If the crossconnect is redlined, the redlining must be removed, as described this procedure.

- 10 1 Log on the NE where the crossconnect is to be deleted.
- 2 If *Crossconnect Manager* was selected from the NETSMART menu, the Configuration window displays. In the Configuration window, select the appropriate tab: *SONET XC*, *DS0*, or *FASTLANE*.
- 15 3 If the crossconnect is redlined, the redline designation must be removed first. Select the crossconnect and click the *NoRed* tool or select *Unset Redline* from the *Operations* menu. Click on the *Update NE* tool or select *Update NE* from the *Operations* menu. The Confirmation dialog displays.
- 4 Click *Ok* to remove the redline.
- 20 5 Click on the crossconnect to be deleted. Multiple crossconnects can be selected by holding down the CTRL and SHIFT keys and then clicking on each crossconnect to be deleted.
- 6 Click on the *DelXC* tool or select *Delete XC* from the *Operations* menu. The crossconnect line changes from solid to dashed, indicating a pending change of state.
- 25 7 After all crossconnects have been marked for deletion in the GUI, make the changes to the NE by clicking the *Update* tool or select *Update NE* from the *Operations* menu. The crossconnect Confirmation dialog displays.
- 8 Verify that the appropriate crossconnects are listed, then click *Ok* to complete the deletion. If the crossconnections are not correct, click *Cancel* and reselect the connections. If you cancel the deletion, click the *Undo* tool to reinstate the connection.
- 30

Changing SSDEF

The Service Selector Definition (SSDEF) is, by default, set to Insert. To reset the

SSDEF to *Thru*, perform the following procedure:

- 1 Log on the NE where the SSDEF is to be reset. Access the appropriate crossconnect window.
- 2 Right-click on a crossconnect to display a menu.
- 5 3 Select *Set SS to Thru*. The menu selection *Set SS to Thru* changes to *Set SS to Insert*. You can toggle this selection between the two items. Only the inactive selection will display in the menu..

Changing the Holdoff Timer Value

- The holdoff timer is used to set the time interval after a protection switch when the NE will check the traffic origin and reset to that origin if possible. To change the holdoff timer value, perform the following procedure:
- 10 1 Log on the NE where the holdoff timer is to be set. Access the appropriate crossconnect window.

- 2 Right-click on a crossconnect to display a menu.
- 15 3 Select *Holdoff Timer*. Type a value for the reset interval.

Trace from a Time Slot

If you are viewing a crossconnect with one termination point, but no crossconnect visible, you can discover the other end of this crossconnect.

- 1 Log on the NE. Access the appropriate crossconnect window.
- 20 2 Right-click to select a crossconnect and display a menu where you will choose *Trace XC*. A label will display beside the crossconnect termination point where you right-clicked. This label identifies the other end of this crossconnect..

Manage Facilities

- This section provides the procedures for defining and managing facilities for FLASH-192, FLM and FLASHWAVE NEs. Primary states for facilities are: In Service (IS), Out of Service Autonomous (OOS-AU), Out of Service Management or Memory Administration (OOS-MA) and Out of Service Autonomous Management (OOS-AUMA). Facilities can also have a secondary state of Out of Service Management Unassigned (OOS-MA:UAS) when they are manually deleted.
- 25

- 30 Facilities can have secondary states of active (ACTI), normal (NR), abnormal

(ANR), standby-hot (STBH), supporting entity outage (SGEO), facility failure (FAF), unassigned (UAS), and automatic in service (AINS).

Add a Facility (FLASHWAVE or FLASH-192)

Use this procedure to add fiber facilities for a FLASHWAVE or FLASH-192 NE.

- 5 *Note: Facilities cannot be created unless supporting equipment has been created.*
 Note: When creating or modifying OC-48/OC-192 facilities in a Transponder type of FLASHWAVE NE a message will ask you to provide directional attribute information. Always input the attributes (UNI or BI, for example) in upper case.

- 10 1 From any tab in the Configuration Manager, select the *Managing Facilities...* option from the *NE* menu. The Managing Facilities dialog displays (**Figure 26**, Managing Facilities Dialog).
- 2 Click on the rate and select the rate from the *Rate* drop-down list. Select the shelf from the *Shelf* drop-down list. Select the facility in the *Non-existing Facilities* column. Click the *Create* tool.
- 15 *Note: If there are no nonexistent (deleted) facilities, there will be nothing in this list*
- 3 If this facility has any key attributes whose value should be specified at creation time, a dialog containing the key attributes will display. Enter the values for these attributes and click *Ok*.
- 20 4 The selected attributes of the selected facility will display in the Attributes table. Click the *Create* tool. A Manage Facilities message box displays: Creating Facilities. The facility will be moved from the *Non-existing* to the *Existing* column and will be activated.

Modify a Facility

- 25 This procedure allows you to modify facilities.

Note: When creating or modifying OC-48/OC-192 facilities in a Transponder type of FLASHWAVE NE a message will ask you to provide directional attribute information. Always input the attributes (UNI or BI, for example) in upper case.

- 30 1 From the Configuration Manager, select the *Groups/Facilities* tab.
- 2 Select the facility from the expanded tree or from the graphic area. The Attributes view displays. This display will vary slightly, depending on the command origin (issued from the tree or graphic area).

- 3 Modify the required values shown in blue or red, then click the *Modify* tool or select the *Update* option from the *Operations* menu. Available operations include *InServ*, *OOSMA*, *OOSMT*, *InServ*, *Operate PSW* and *Release PSW* (the particular operation(s) available will depend on the facility). The same options can also be
- 5 chosen from the *Operations* menu.
- 4 The values will be modified in the NE and the NETSMART database **Delete a Facility**. This procedure allows you to delete facilities for a FLASHWAVE or FLASH-192 NE.

Delete a Facility

- 10 1 From any tab in the Configuration Manager, select the *Managing Facilities* option from the *NE* menu. The Managing Facilities dialog displays.
- 2 Select the shelf from the *Shelf* drop-down list. Click on the rate and select a rate from the *Rate* drop-down list. Select the facility in the *Existing Facilities* column. Click the *Create* tool.
- 15 *Note: If there are no existing (created) facilities, there will be nothing in this list.*
- 3 A confirmation dialog displays. Click *Ok* to delete the facility. The facility will be moved from the *Existing Facilities* to the *Non-existing Facilities* column and will be deactivated

Activate an FFP Group (FLASH-192)

- 20 Fiber Facility Protection (FFP) groups are available for FLASH-192. The equipment and the facilities to support the FFP group must already be created. A list of FFP pairs is displayed and you will select the FFP to be created.
- Note: Changing FFP groups may change system configurations, which can cause system configuration inconsistencies.*

- 25 1 From any tab in the Configuration Manager, select the *Manage FFP* option from the *NE* menu. The Manage FFP dialog displays.
- 2 Select the shelf from the *Shelf* drop-down list. Click on the rate and select the rate from the *Rate* drop-down list. Select the FFP in the *Non-existing FFP* column.
- Note: The list will be empty If there are no nonexisting (deleted) FFPs.*
- 30 3 Click the *Create* tool.
- 4 The FFP will move from the *Non-Existing FFP* to the *Existing FFP* column and will become active.

Modify (or View) an FFP Group

The FFP group attributes for NEs can be modified, by performing the following tasks:

- 1 From the Configuration Manager, select the *FFP* tab
- 5 2 Select the FFP group from the expanded tree or double-click on the FFP in the graphic area. The *Attributes* tab for the group displays.
- 3 Modify the required values shown in blue and red by clicking on the value, then select the new option from the drop-down list.
- 4 Click the *Modify* tool to download the changes to the NE. The changed values will be
- 10 displayed in the *Value* column.

Deactivate an FFP Group (FLASH-192)

Active FFPs for a FLASH-192 can be deactivated, by performing the following tasks:

- 1 In any tab in the Configuration Manager, select the *Manage FFP* option from the *NE*
- 15 menu. The Manage FFP dialog displays.
- 2 Select the shelf from the *Shelf* drop-down list.
- 3 Select the rate from the *Rate* drop-down list.
- 4 Select the FFP in the *Existing FFP* column.
- 5 Select *Delete* from the *Edit* menu. The FFP will be moved from the *Existing FFP* to the
- 20 *Non-Existing FFP* column and will be deactivated.

Managing Wavelengths

Use the NETSMART Wavelength Management feature to produce a report about wavelength inventory in your network. The report includes:

- Wavelength (in nm)
- 25 Frequency (in THz)
- Part number for narrowband optics or transponder card
- AID
- Wavelength availability and primary status
- OCN WLR (Optical Carrier Level n Wavelength Received)
- 30 OCN OPR (Optical Carrier Level n Optical Power Received)
- WCH OPT (Wavelength Channel Optical Power Transmitted)
- WDM OPR (Wavelength Division Multiplexer Optical Power Received)

WDM OPT (Wavelength Division Multiplexer Optical Power Transmitted)

Note: To avoid confusion, the window display is static (is not updated) once the view is requested. You must use the Reload tool or the Reload NE List command to redisplay the window and view updated information.

5 Wavelength Support

The following wavelengths are supported:

	Wavelength (nm)	Frequency (THz)	10G Part Number
10	1535.82	195.2	08
	1536.60	195.1	09
	1537.39	195	10
	1538.18	194.9	11
	1538.97	194.8	12
	1539.76	194.7	13
	1540.55	194.6	14
	1541.34	194.5	15
	1542.14	194.4	16

Produce a Wavelength Inventory Report

The Wavelength Management window can be started from any application with a NETSMART menu item.

	Wavelength (nm)	Frequency (THz)	10G Part Number.
20	1542.93	194.3	17
	1543.73	194.2	18
	1544.52	194.1	19
	1545.32	194	20
25	1546.11	193.9	21
	1546.91	193.8	22
	1547.71	193.7	23
	1548.51	193.6	24
	1549.31	193.5	25
30	1550.11	193.4	26
	1550.91	193.3	27
	1551.72	193.2	28
	1552.52	193.1	29
	1553.32	193	30

	1554.13	192.9	31
	1554.94	192.8	32
	1555.74	192.7	33
	1556.55	192.6	34
5	1557.36	192.5	35
	1558.17	192.4	36
	1558.98	192.3	37
	1559.79	192.2	38
	1560.60	192.1	39

- 10 If you open this window from the Topology window, the following selections are available:
 - Select a number of NEs.
 - Select a number of groups.
 - Select a number of NEs and groups.
 - Select the Network group.
- 15 If any of these selections are made, the Wavelength Management window displays with only the selected FLASHWAVE terminals. Otherwise, all existing FLASHWAVE terminals are displayed. To produce a wavelength inventory report, perform the following tasks:
 - 1 From the NETSMART menu, select *Wavelength Management*. The Wavelength Management window displays.
- 20
 - 2 The list area contains a list of all FLASHWAVE terminal NEs. Click on an NE to display its data.
 - 3 To filter the columns of the data display, select the *Filter* tool from the toolbar.
 - 4 Click on the first button below the *Field* label. A list of values to filter with displays. Values include *Wavelength (nm)*, *Frequency (THz)*, *Transponder or IO G part #*, *AID*, *Status*, *OCN WLR*, *OCN OPR*, *WCH OPT*, *WDM OPR*, and *WDM OPT*.
- 25 Click to select one of these values.
- 5 Once a filtering value has been selected, the *Test* button becomes active. Click on the *Test* button to display a series of values to test against for filtering; one of:
 - contains*
 - !contains*
 - starts with*
 - !starts with*
 - ends with*
 - ends with*
- 30

- 6 Click to select one of the values listed above. Boolean values can be used to filter by selecting one of *and* / *or* from the *Logic* button.
- 7 Once all filtering values are selected, click *Ok* to redisplay the Wavelength Management values with the filter(s) applied.

5 **NGDLC Services**

Next generation digital loop carrier (NGDLC) systems enable carriers to provide integrated access between the customer premises and the public network. NGDLC supports concentration of switched traffic and grooming of non-switched traffic.

- 10 You may view and edit Next Generation Digital Loop Carrier services including the TR-008, TR-303, or INA interface groups for a FACTR NE. Each of these groups is created by autodiscovery. Choose the mode (I, II, or III), the mapping sequence (D1D or D4) and the bypass pair option (1 or 2). TR-303 defines an interface between a central office switch and a remote terminal to handle all call processing and operational functions for the DLC system. TR-303 is a versatile interface supporting a large number of subscribers and transport bandwidth, providing carriers with the ability to choose a concentration ratio geared to traffic engineering guidelines. For TR-303 DS0s, the NETSMART user can see the assigned Call Reference Value (CRV), which is a number between 1 and 2016 that is assigned to a TR-303 DS0.

Edit a TR-008 or TR-303 Interface Group

- 20 This procedure edits TR-008 and TR-303 parameters for those NEs that support these interfaces. It also places the interface in service or, for maintenance purposes, out of service. Placing an NE in maintenance state is not service affecting. However, once an NE has been placed in a maintenance state, actions performed on that NE may be service affecting (a loopback, for instance, is service affecting).
- 25
 - 1 Log on the NE.
 - 2 From the Configuration Manager, select the *Interface Type* tab. The Interface Type tab displays.
 - 3 A blue dot in the upper right-hand corner indicates that an interface group has children. Double-click the *TR-008* or *TR-303* box in the graphical area or, in the expanded tree, select the item that corresponds to the interface to be modified. The Attributes dialog displays.
- 30
 - 4 Click on the interface option to be changed. Only interface options displayed in blue can be changed. Select the new option from the drop-down list

5 Click the *Modify* tool or select the *Update* option from the *Operations* menu to make the changes.

6 Click to select the tool for the correct operation: *InServ*, *OOSMA*, *OOSMT*. The same options can also be chosen from the *Operations* menu.

5 **Edit an INA Interface Group**

This procedure allows the user to modify INA interface attributes and put T1s in service or take them out of service for maintenance. Placing an NE in maintenance state is not service affecting. However, once an NE has been placed in a maintenance state, actions performed on that NE may be service affecting (a loopback, for instance, is service affecting).

1 Log on the NE.

2 From the Configuration Manager, select the *Interface Type* tab.

3 A plus sign to the left of an interface group indicates that this interface group has children. Expand the tree list and select the T1 to be modified.

15 4 The Attributes dialog (**Figure 27**) displays.

5 Only interface options displayed in red or blue can be changed. Select a new option from the drop-down list that is displayed when the value is clicked.

6 Click the *Modify* tool to complete the changes.

20 7 Click to select the tool for the correct operation: *InServ*, *OOSMA*, or *OOSMT*. The same options can also be chosen from the *Operations* menu.

Performance Management

Performance Management is an optional feature and is started using a different NETSMART command than the regular startup command. If you cannot access this feature, please contact your NETSMART administrator. For information about enabling and disabling Performance Management, refer to "NETSMART Optional Features" in the *NETSMART Installation and Administration Guide* (FJTU-320-940-150).

25 A NETSMART user needs a way of accessing the PM Monitoring parameters on a Network Element (NE) to determine how an NE is performing in the network. The PM feature provides the mechanism for the user to query and set PM Monitoring parameters on one or more NE(s). A comprehensive listing of PM parameters for each NE can be found in the appropriate NE manual. Most PM operations may be applied to one or more NE(s), to multiple cards or facilities on a single NE, or to a single card or facility on a single NE. Use Performance Manager to:

30

- Enable and disable a performance monitoring report
- Retrieve performance monitor reporting status
- Initialize the performance registers for an NE
- Set individual threshold values
- 5 Retrieve current threshold values
- Retrieve historical performance data

Operations that can be applied only to a single card or facility on a single NE are:

- Setting of individual threshold values
- Retrieval of current threshold values
- 10 Retrieval of performance data

Management Procedures

This section describes the procedures for using the Performance Manager. Performance Manager is supported for the following NEs:

- FLASH-192 (02.03)
- 15 FLASH-192 (04.02)
- FLASHWAVE (02.01)
- FLASHWAVE (01.03)
- FLM 2400 ADM (14.02S).
- FLM 2400 ADM (14.02BS)
- 20 FLM 600 ADM (14.02)

You can display the Performance Manager window in three different views, depending on how the window is accessed. Views include: Element View, Equipment View and Groups/Facilities View.

- Element View:** Accessing Performance Manager from the Topology window displays the
- 25 Element View.

Equipment View: Accessing Performance Manager from the Configuration Manager - Equipment Tab displays the Equipment View.

Groups/Facilities View: Accessing Performance Manager from the Configuration Manager Groups/Facilities tab displays the Groups/Facilities View.

- 30 **Performance Manager Element View**

To display Performance Manager in Element View, select an NE or several NEs in the Topology window and then select *Performance Management* from the NETSMART

menu. If no NEs are selected, a list of available NEs will be displayed in the Performance Manager window after it is launched. The view is divided into two main parts. The *Selection* area in the top portion of the view displays selected elements in the *Selected Elements* list. Radio buttons to the right of the *Interval* label are used to define a monitoring interval. The bottom portion of the view displays monitoring data.

Start and Stop Monitoring

Note: If the Performance Manager was started from a selected NE or NEs, there will be no elements in the Available Elements list and the selected NE(s) will be displayed in the Selected Elements list. If you started Performance Management from the NETSMART menu with no NE selected, all NEs will be displayed in the Available Elements list. The following information assumes that Performance Management was selected from the Operations menu with no NE selected (all NEs will appear in the Available Elements list).

- 1 To begin monitoring, select the *Monitors* tab in the Performance Manager window. This is the default tab for the Element view.
 - 2 To select NEs to monitor, select an item in the *Available Elements* column and use the *Add* button to add it to the *Selected Elements* column.
 - 3 To remove an item from the *Selected Elements* column, highlight the item in the *Selected Elements* column and click the *Remove* button. After the in-progress message bar disappears, the entry is added to the monitoring data area. Verify the status of the initialization in the third column.
 - 4 To add all items to the *Selected Elements* column, click the *Add All* button.
 - 5 To remove all the items in the *Selected Elements* column, click the *Remove All* button. After the in-progress message bar disappears, the entry stays in the list, but the status is changed to *Disable*.
- Note: When it is impossible to use a selection, that selection is grayed-out. For example, in PM Element View (from NE): Monitors Tab the Add and Add All buttons cannot be used because there is nothing in the Available Elements: list to add. The Remove button cannot be used until an element in the Selected Elements: list is selected.*
- 6 Define the interval for monitoring using the *Interval* radio button. Options are *15 Min.* (15-minute intervals) or *1 Day*. The default value is 15 minutes. If you select *15 Min.*, data is retrieved from the NE 15-minute registers. If you select *1 Day*, data is retrieved from the NE 1-day registers

7 Click the *Mon On* tool in the toolbar or select *Turn Performance Monitoring On* from the *Operations* menu (**Figure 28**).

8 To stop monitoring, select the *Monitors* tab and then click the *Mon Off* tool in the toolbar or select *Turn Performance Monitoring Off* from the *Operations* menu.

5 Initialize Registers

To reset all registers to zero values, you will initialize the registers. To initialize registers:

1 Select the *Registers* tab in the Element view (**Figure 29**).

10 2 To select NEs to initialize, select an item in the *Available Elements* column and use the *Add* button to add it to the *Selected Elements* column.

3 To remove an item from the *Selected Elements* column, highlight the item in the *Selected Elements* column and click the *Remove* button.

4 To add all items to the *Selected Elements* column, click the *Add All* button.

15 5 To remove all the items in the *Selected Elements* column, click the *Remove All* button.
Note: When it is impossible to use a selection, that selection is grayed out. For example, in PM Element View (from NE): Monitors Tab the Add and Add All buttons cannot be used because there is nothing in the Available Elements: list to add. The Remove button cannot be used until an element in the Selected Elements: list is selected.

20 6 Select the *Init* tool in the toolbar or select *Initialize Performance Registers* from the *Operations* menu. Selecting this option will initialize all the registers in the NEs to zero (Initialized)

Retrieve Performance Data

Occasionally you will want to retrieve performance data for reporting or analysis.

25 To retrieve performance data, perform the following tasks:

1 Select the *Database* tab in the Element view (**Figure 30**).

2 Select the element(s) from the *Available Elements* list.

3 Use the *Add* button to add it to the *Selected Elements* column.

30 4 To remove an item from the *Selected Elements* column, highlight the item in the *Selected Elements* column and click the *Remove* button.

5 To add all items to the *Selected Elements* column, click the *Add All* button.

6 To remove all the items in the *Selected Elements* column, click the *Remove All* button.

Note: When it is impossible to use a selection, that selection is grayed out. For example, in PM Element View (from NE): Monitors Tab the Add and Add All buttons cannot be used because there is nothing in the Available Elements: list to add. The Remove button cannot be used until an element in the Selected Elements: list is selected.

7 Select or type values in the following fields:

Interval—Displays the time period interval. Possible options are *15 Min.* or *1 Day*. The default is 15 minutes. If you select *15 Min.* the collected data will be divided into 15-minute periods. If you select *1 Day*, the collected data will be reported in 1-day periods.

NMS Start Date—Select the date when NETSMART started receiving data from the NE. A default format is provided.

NMS Start Time—Select the time when NETSMART started receiving data from the NE.

NMS End Date—Select the date when NETSMART stopped receiving data from the NE.

NMS End Time—Select the time when NETSMART stopped receiving data from the NE.

8 Select *Reload* from the *Operations* menu or click the *Reload* tool from the toolbar to start retrieving data.

Performance Manager Equipment View

To display the Performance Manager Equipment view, select a card in the Configuration Manager Equipment tab and then click on the *Retrieve* tool in the toolbar. Otherwise, right-click to display a pop-up menu and then select *Display PM* from the pop-up menu. If a card does not have PM registers, the PM tool will not be displayed in the toolbar **Figure 31** shows the Performance Manager Equipment view. The Equipment view displays only the Registers tab and facilitates setting register thresholds and retrieving current performance registers. Fields in the display include:

NMS Time—NETSMART time.

NE Time—The time on the NE.

AID Type—Type of Access Identifier.

AID—Access Identifier name.

Register—Register name.

Value—Value of the register that was retrieved.

Range—Allowable range for the register Value.

Threshold—Indicator to the NE to regenerate the threshold report if the threshold was exceeded.

Default Threshold—When an NE is first started, this is the default value set by the NE. This value can be reset using the procedure described in “Set Threshold”.

5 **Validity**—This value is valid only for FLASH-192 and FLASHWAVE NEs. Under normal operating conditions, this value should be FALSE. PM registers are accumulated in 15-minute intervals; if any data being reported is not for the full 15-minute interval this value will be reported as TRUE.

10 **Location**—This value indicates where the data is coming from (near-end or far-end). Equipment registers will always be far-end.

Direction—For equipment, this will always report N/A as the physical characteristics of equipment have no direction. Typically the value reported for facilities will be Tx or Rx.

15 **Time Interval**—This value is always N/A for equipment. For facilities the time reporting interval will be displayed as either 15 MIN or 1 DAY.

20 **Index**—This value will always be 0 for equipment. For facilities, the current register (0) plus previous registers 1 to 32 will be displayed. The Monitors and Database tabs cannot be selected, because equipment registers are not counters; they are current operating levels for items such as Laser Bias Current Normalized (LBCN). Because of this, monitoring cannot be turned on or off and the database will not contain any historical data.

Set Threshold

25 Performance monitoring registers can, potentially, be collected for thousands of circuits, creating an overwhelming amount of data. To limit this data, thresholds for data collection can be set. If these thresholds are not crossed, the assumption is that the NE performance is acceptable. A default threshold value exists for each register. The threshold for any register can be set and changed. To set thresholds:

- 1 Select equipment from the *Available Equipment* list and click the *Add* button to add the equipment to the *Selected Equipment* list
- 30 2 Select a numbered row in the report and then click the *Set* tool in the toolbar. The Set Thresholds dialog displays.
- 3 Type a new value for the threshold. Threshold ranges are NE-dependent and are displayed when you select the row that you will set registers for. You can also refer to the *System Engineering* section of the *Fujitsu Network Communications* web site

for the TL1 threshold value specification for each NE.

4 Click *OK* to select the threshold and close the dialog.

Retrieve New Data

To retrieve new performance data:

- 5 1 Select equipment from the *Available Equipment* list and click the *Add* button to add them to the *Selected Equipment* list.
- 2 Select the *Reload* tool from the toolbar. The Reload tool updates the report for the equipment contained in the *Selected Equipment* list and for the values specified in the *Location*, *Direction*, *Time Interval*, and *Index fields*.

10 Performance Manager Groups/Facilities View

To display Performance Manager in the Groups/Facilities View, select a facility in the *Configuration Manager Groups/Facilities* tab and then click on the *Retrieve* tool in the toolbar. Otherwise, right-click to display the pop-up menu and then select *Display Performance* from that pop-up menu. The *Monitor* tab is the default initial display.

- 15 If a facility has PM registers, when that facility is selected, the PM tool will become active in the toolbar. **Figure 32** shows the Performance Manager window in the Groups/Facilities view. The Groups/Facilities view contains the *Monitors*, *Registers*, and *Database* tabs and allows you to turn reporting *on* or *off*, to *retrieve* current PM registers from the facility and to retrieve historical data from the database. The *Monitors* tab is grayed-out on any group/facility that does not support performance monitoring. By default, the facility selected in Configuration Manager is the one displayed in Performance Manager and the *Interval* option is set to *15 Min.* (the default). Fields in the display include:
- 20 **NMS Time**—NETSMART time.

- NE Time**—The time on the NE.
- 25 **AID Type**—Type of Access Identifier.
- AID**—Access Identifier name.
- Register**—Register name.
- Value**—Value of the register that was retrieved.
- Range**—Allowable range for the register Value.

- 30 **Threshold**—Indicator to the NE to regenerate the threshold report if the threshold was exceeded.

Default Threshold—When an NE is first started, this is the default value set by the NE. This value can be reset using the procedure described in “Set Threshold”.

Validity—This value is valid only for FLASH-192 and FLASHWAVE NEs. Under normal operating conditions, this value should be FALSE. PM registers are accumulated in 15-minute intervals; if any data being reported is not for the full 15-minute interval this value will be reported as TRUE.

5 **Location**—This value indicates where the data is coming from (near-end NEND or far-end FEND).

Direction—Typically the value reported for facilities will be Tx or Rx.

Time Interval—For facilities the time reporting interval will be displayed as either 15 MIN or 1 DAY.

10 **Index**—For facilities, the current register (0) plus previous registers 1 to 32 will be displayed

Start and Stop Monitoring

15 1 To start monitoring, select the *Monitors* tab in the Performance Manager Groups/Facilities view. The reporting status is automatically retrieved and displayed.

2 To select NEs for monitoring, select an item in the *Available Facilities* list and use the *Add* button to add it to the *Selected Facilities* list. By default, the facility that is selected when Performance Manager is launched is already in the *Selected Facilities* list.

20 3 To remove an item from the *Selected Facilities* column, highlight it in the *Selected Facilities* column and click the *Remove* button.

4 To add all the items to the *Selected Facilities* column, click the *Add All* button.

5 To remove all the items in the *Selected Facilities* column, click the *Remove All* button.

25 6 Choose the location by selecting one of the *Location* radio buttons. Possible choices are *NEND* (near-end) or *FEND* (far-end).

7 Choose the direction by selecting one of the *Direction* radio buttons. Possible choices are *Receive*, *Transmit* or *NA* (Not Applicable). This list is dynamically updated based on the selected facility.

30 8 Select the interval for monitoring using the *Interval:* radio button. Options are *15 Min.* or *1 Day*. The default is 15 minutes. If you select *15 Min.*, data is retrieved from the NE 15-minute registers. If you select *1 Day*, data is retrieved from the NE 1-day registers.

9 In the *Start Index* and *End Index* fields, select a value between 0 and 32 for registers. 0 is the current register and there may be up to 32 previous registers. The *End Index*

value must always be higher than the *Start Index* value.

10 Click the *Mon On* tool in the toolbar to start monitoring.

11 To stop monitoring, select the *Monitors* tab and then click the *Mon Off* tool in the toolbar

5 Initialize Performance Registers

To initialize performance registers:

1 Select the *Registers* tab in the Groups/Facilities view.

2 Select the *Init* tool in the toolbar. Selecting this option will initialize all the selected NE facility registers to zero.

10 Retrieve Register Data

To retrieve register data, select the *Registers* tab in the PM Groups/Facilities view. Once this tab is selected, a command is sent to the NE to retrieve register data for the selected facility. This data is displayed using the default parameters for *Location*, *Direction*, *Interval* and *Start* and *Stop* Indexes.

15 Reload Register Data in the Report

To reload new register data while in the *Registers* tab:

1 Select the facilities from the *Available Facilities* list and click the *Add* button to add them to the *Selected Facilities* list.

20 **2** Choose the location by selecting one of the *Location* radio buttons. Possible choices are *NEND* (near-end) or *FEND* (far-end).

3 Choose the direction by selecting one of the *Direction* radio buttons. Possible choices are *Receive*, *Transmit* or *NA* (Not Applicable). This list is dynamically updated based on the selected facility.

25 **4** Select the interval for monitoring using the *Interval* radio button. Options are *15 Min.* or *1 Day*. The default is 15 Min. If you select *15 Min.*, data is retrieved from the NE 15-minute registers. If you select *1 Day*, data is retrieved from the NE 1-day registers.

30 **5** In the *Start Index* and *End Index* fields of the *Registers* tab, select a value between 0 and 32 for registers. 0 is the current register and there may be up to 32 previous registers. The *End Index* value must always be higher than the *Start Index* value. These choices may be dynamically updated, depending on the selected type of

facility.

- 6 Select the *Reload* tool in the toolbar. Selecting this tool will reload the register data for the selected facility for the index selected in Step 2 and will display the results in the window..

5 **Set Threshold**

You can set and change the current threshold for any register. To set thresholds, from the Performance Manager:

- 1 Select the *Registers* tab in the Groups/Facilities view.
- 2 Select facilities from the *Available Facilities* list and use the *Add* button to add them to the *Selected Facilities* list.
- 3 Select a numbered row in the report and then click the *Set* tool in the toolbar. After the Set Thresholds dialog displays, type a new value for the threshold.
- 4 Click *Ok* to save the changes and close the dialog..

Retrieve Historical Data

- 15 To retrieve historical data for the selected facility in the Facility View:

- 1 Select the *Database* tab in the Groups/Facilities view.
- 2 Select elements from the *Available Elements* list and click the *Add* button to add them to the *Selected Elements* list. Select *Add All* to add all elements.
- 3 Select the interval for monitoring using the *Interval* radio button. Options are *15 Min.* or *1 Day*. The default is 15 minutes. If you select *15 Min.*, data is retrieved from the NE 15-minute registers. If you select *1 Day*, data is retrieved from the NE 1-day registers.
- 4 Type values in the following fields:
 - 25 **NMS Start Date**—Select the date when NETSMART started receiving data from the NE.
 - NMS Start Time**—Select the time when NETSMART started receiving data from the NE.
 - NMS End Date**—Select the date when NETSMART stopped receiving data from the NE.
 - 30 **NMS End Time**—Select the time when NETSMART stopped receiving data from the NE.
- 5 Click the *Reload* tool from the toolbar to begin retrieving data. The resulting report is

updated for the elements in the *Selected Elements* list and for the specified *Interval*, *NMS Start Date*, *NMS Start Time*, *NMS End Date*, and *NMS End Time*.

TL1 Command and Batch Processing

5 This section provides the procedures for entering and executing both batch and online TL1 commands. Batch TL1 commands can be saved as a file and executed at a later time.

To start the TL-1 Editor, from the Configuration Manager NETSMART menu, select *TL1 Editor*. The Raw TL-1 / TL-1 Batch window displays. There are three main display areas on this window.

10 The upper part will contain any commands that were typed in the *TL1 Command* text entry area

The middle part will contain any results/responses generated by this command.

15 The lower part contains the *TL1 Command* text entry area, the *Active Sessions* list area and the list of saved batch files. This procedure refers to the upper portion of this window as the history area and the middle portion is referred to as the results/responses area. The lower portion of the window is referred to as the batch listing area.

Enter Single TL1 Commands

20 Use the Raw TL-1 / TL-1 Batch window to enter and execute individual TL1 commands. Using individual TL1 commands is the simplest way to interact with a single NE and will ensure that the command executes properly before using it in a batch file (especially one that will be executed on multiple NEs). When executing time-consuming TL1 commands, it is best to use a TL1 batch (when individual TL1 commands are sent for execution, the TL1 Editor remains busy waiting for command response).

25 1 In the Raw TL-1 / TL-1 Batch Window, type in the TL1 command in the *TL1 Command* field.

30 2 Press the ENTER key to execute the command. The command displays in the history area of the TL1 window. The command and the results display in the results/responses area of the TL1 window. Each TL1 session corresponds to a user ID that is logged on a specific NE. Multiple sessions can exist. An active session must exist to send a command. If no sessions exist, one can be created by issuing the ACT-USER TL1 command.

Enter TL1 Commands in Batch Mode

TL1 commands can be entered into a batch file for immediate execution or can be saved in a batch file for a scheduled execution. Before a batch can execute, at least one TID must be selected. In addition, the batch must have the *UID* and *Password* properties set before the batch can execute.

Batch commands can be exported as a file, in which case the *TID* and *Properties* values will not be retained. Importing a TL1 file into the TL-1 Batch Editor will override any existing commands in the editor. The command syntax for TL1 commands is described in *Bellcore document GR-831-CORE Issue 1* (November 1996).

- 1 In the Raw TL-1 / TL-1 Batch window, select *New* from the *Batch* menu to display the NETSMART TL-1 Batch Editor window, where you can create a new batch. To edit an existing batch, double-click on an existing batch in the batch listings at the bottom of the window or click on a batch name and select *Edit* from the *Batch* menu. The NETSMART TL-1 Batch Editor window displays (Figure 4-144).
- 2 Select *TIDs* from the *Batch* menu. The TID List dialog displays.
- 3 Select the TID(s) for the batch by clicking to highlight the TID to which the TL1 commands will be sent. Multiple TIDs can be selected. Click a second time on the TID to deselect any unwanted values.
- 4 If the TID that is needed is not in this list, type the name of the TID in the list to the left of the *Add TID to List* button.
- 5 Click the *Add TID to List* button to add the TID to the list. If there are no TIDs to add, this button is grayed out and unavailable.
- 6 Click *Ok* to select the TID(s).
- 7 Use the *Import Batch* tool to display the Import Batch dialog where the file to be imported can be identified, or use the *Export Batch* tool to display the Import Batch dialog where the location and file name for data to be exported can be identified.
- 8 Click to select the file to be imported or exported. Only one file at a time can be selected.
- 9 Click *OK* to select the file and close the dialog.
- 10 Click the mouse to place the cursor in the free-form area of the NETSMART TL-1 Batch Editor (the main part of the window) and type TL1 commands in this area.
- 11 To set the properties for the batch, click on the *Props* tool or select *Properties* from the *Batch* menu. The Batch Properties dialog displays. Values must be entered in the *UID* and *Password* fields for the batch to execute.
- 12 Select or type values in the following fields:

Name:—If this is a new batch, this field is blank. If this is an existing batch, this field displays the name of the batch. Data cannot be entered in this field.

Owner:—Displays the user name that logged on NETSMART. Data cannot be entered in this field.

5 **Privilege:**—Select *PRIVATE* if only the person who created the batch file can execute it or *PUBLIC* if any user with TL1 privileges can execute the batch file.

Send Mode:—Select *SERIAL* if the TL1 batch of commands is to be sent to one NE at a time or *PARALLEL* if the batch file is to be sent to all NEs in the TID list at the same time.

10 **UID:**—Type the user ID that will be used to create a new session for batch execution. This user ID must be valid for each TID that was selected using the TID List dialog. If a command within the batch file specifies another user ID, the user ID within the batch file will override this user ID.

Password:—Enter the password for the User ID that was typed in the *UID* field.

15 13 Click *Ok* to save the property settings or *Cancel* to close the dialog without making changes.

14 To save the batch file, click the *Save As* tool or select *Save As* from the *File* menu.

The Save As Dialog

20 Use the *Save As...* dialog to save a file with the existing name (overwrites the existing file) or to type a new filename and save the file with the new name.

1 When the *Save As...* dialog displays, type a value in the *Batch name* field. The file will be saved using this name.

25 2 In the Raw TL-1 / TL-1 Batch window, double-click to select a saved batch file from the listing area (the lowest portion of the TL1 window). If there is more than one session active, select the active session TID from the *Active Sessions* list. Click the *Send* tool or select *Send* from the *Batch* menu to transmit the TL1 commands.

Edit TL1 Batch Commands

30 The TL1 batch file can be edited and saved in the original file or in a new batch file for a scheduled execution. The new batch must have the *UID* and *Password* properties set before the batch can execute. Batch commands can be exported as a file, in which case the *TID* and *Properties* values will not be retained. Importing a TL1 file into the Batch Editor will override any existing commands in the editor. The command syntax for TL1 commands is described in *Bellcore document GR-831-CORE Issue 1* (November 1996),

which is hereby incorporated by reference.

- 1 In the Raw TL-1 / TL-1 Batch window, either double-click on an existing batch in the batch listings at the bottom of the window or click on a batch name and select *Edit* from the *Batch* menu. The NETSMART TL-1 Batch Editor window displays.
- 5 2 To add or change TIDs, select *TIDs* from the *Batch* menu. The TID List dialog displays.
- 3 Select the TID(s) for the batch by clicking to highlight the TID to which the TL1 commands will be sent. Multiple TIDs can be selected. Click a second time on the TID to deselect any unwanted values.
- 4 If the TID that is needed is not in this list, type the name of the TID in the list to the left of the *Add TID to List* button. Click the *Add TID to List* button to add the TID to the list. If there are no TIDs to add, this button is grayed out and unavailable.
- 10 5 Click *Ok* to select the TID(s).
- 6 Use the *Import Batch* tool to display the Import Batch dialog where the file to be imported can be identified, or use the *Export Batch* tool to display the Import Batch dialog where the location and file name for data to be exported can be identified.
- 15 7 Click to select the file to be imported or exported. Only one file at a time can be selected.
- 8 Click *OK* to select the file and close the dialog.
- 9 Click the mouse to place the cursor in the free-form area of the NETSMART TL-1 Batch Editor (the main part of the window) and type TL1 commands in this area.
- 20 10 To modify the properties for the batch, click on the *Props* tool or select *Properties* from the *Batch* menu. The Batch Properties dialog displays. Values in the *UID* and *Password* fields must be changed so that the batch can execute.
- 11 Select or type to change values in the following fields:
- 25 **Name:**—If this is a new batch, this field is blank. If this is an existing batch, this field displays the name of the batch. Data cannot be entered in this field.
- Owner:**—Displays the user name that logged on to NETSMART. Data cannot be entered in this field.
- Privilege:**—Select *PRIVATE* if only the person who created the batch file can execute it or *PUBLIC* if any user with TL1 privileges can execute the batch file.
- 30 **Send Mode:**—Select *SERIAL* if the TL1 batch of commands is to be sent to one NE at a time or *PARALLEL* if the batch file is to be sent to all NEs in the TID list at the same time.
- UID:**—Type the user ID that will be used to create a new session for batch execution. This user ID must be valid for each TID that was selected using the TID
- 35

List dialog. If a command within the batch file specifies another user ID, the user ID within the batch file will override this user ID.

Password:—Enter the password for the User ID that was typed in the *UID* field.

- 5 12 Click *Ok* to save the property settings or *Cancel* to close the dialog without making changes.
- 13 To save the batch file, click the *Save As* tool or select *Save As* from the *File* menu.
- 14 When the *Save As...* dialog displays, type a value in the *Batch name* field or leave the old name if you do not want to change it. The file will be saved using this name.
- 10 15 In the Raw TL-1 / TL-1 Batch window, double-click to select a saved batch file from the listing area (the lowest portion of the TL1 window). If there is more than one session active, select the active session TID from the *Active Sessions* list. Click on the *Send* tool or select *Send* from the *Batch* menu to transmit the TL1 commands.

Using the TL1 Console

- 15 This section provides the procedures for using the TL1 Console. The TL1 Console window allows a user to view the TL1 activity generated due to a user's actions; for example, log on to NE, create crossconnect, etc. System-level TL1 activities include all the TL1 activities that are sent to or received from the NEs being managed, such as TL1 command and response, autonomous messages (REPT-*), raw TL1 command and response, and RTRV-HDR.

- 20 By default, all security roles defined in NETSMART have the *TL1Console* user function, which allows users to view the TL1 activities that they generated. The NetSmartUserAdmin role has the *TL1SuperConsole* function, which allows users to view the system TL1 activities. If the role includes the *TL1SuperConsole* user function, the user with this role can use the TL1 Console window to view system-level TL1 activities. As a
- 25 *TL1SuperConsole* user, up to five TL1 Console windows can be started. By default, the TL1 messages viewed by the *TL1Console* user include the command and response received from the NE. For information about viewing other TL1 record attributes or changing the order of the displayed attributes, refer to Section A.13.1, TL1 Console Rearrange Attributes Dialog. As a *TL1Console* user, you can start only one TL1 Console window.

- 30 For information about modifying the security roles, refer to Roles Tab. To start the TL1 Console, from the NETSMART menu, select *TL1 Console*. The TL1 Console window displays. As soon as you open the TL1 Console, the display of TL1 events begins and scrolls automatically to display additional events. The TL1 Console window displays a maximum of 1000 records at a time.

Display TL1 Messages

The display can be started, stopped or paused by selecting *Start*, *Stop* or *Pause* from the *Operations* menu or by selecting one of the *Start*, *Stop*, or *Pause* tools from the toolbar.

- 5 1 The TL1 console starts with the default setting, which displays TL1 messages. The server will start sending messages to the console. To add, remove, or rearrange the attributes to be displayed, use the *Rearrange Attributes* dialog. For more information, refer to *Rearrange TL1 Attributes*. If the display was paused earlier by selecting the *Pause* button, the console will display the messages that were sent during the pause and will then start to display new messages. If the display was stopped earlier by selecting the *Stop* button, the new real-time messages will begin to display. The *Start* button becomes active only when the display has been paused or stopped.
- 10
- 15 2 To pause the message display, select *Pause* from the *Operations* menu or click the *Pause* tool. This option pauses the display of TL1 events to the console. Internally, the messages are buffered for up to 1000 records; these records will be displayed when you select *Start* to restart the display.
- 20 3 To stop display of any messages in the console, select *Stop* from the *Operations* menu or select the *Stop* tool in the toolbar. The server stops sending messages to the console.

Rearrange TL1 Attributes

Adding, removing, or rearranging the attributes to be displayed in TL1 Console is accomplished by using the *Rearrange Attributes* dialog.

- 25 1 To open this dialog, select *Rearrange Log Attributes* from the *View* menu or click the *Rearran...* tool in the toolbar. The *Rearrange Attributes* dialog displays.
- 2 To add an attribute to the *Selected List*, highlight the attribute in the selections beneath the *Attribute List* and then click the *Add* button.
- 3 To remove an attribute from the *Selected List*, highlight the attribute in the *Selected List* and then click the *Remove* button.
- 30 4 To add or remove all attributes, use the *AddAll* button or the *RemoveAll* button. *TL1Msg* is the default item in the *Selected List* and cannot be removed.
- 5 To change the order of the attributes in the list, select an attribute and then click the *Up* button to move the attribute up in the list or the *Down* button to move the attribute

down in the list.

- 6 Click *OK* to save the settings and close this dialog or click *Cancel* to cancel all changes and close this dialog.

Filter TL1 Messages

- 5 Messages to be displayed in the TL1 Console can be filtered using the Filter TL1 Messages dialog.

- 1 To open the Filter TL1 Messages dialog, select *Filter* from the *Operations* menu in the TL1 Console window or click the *Filter* tool in the toolbar. The following dialog displays.

- 10 2 Messages can be filtered based on the NE TID or the message type. Select the filter from the *NE ID* drop-down list. To filter the TL1 message display based on the NE TID, select:

Starts with—If you want the NE to start with the specified value.

Ends With—If you want the NE to end with the specified value.

- 15 **Contains**—If you want the NE to contain the specified value. Type the text relevant to your *NE ID* selection in the *Value* field (for example, FLM) and check the *Case Sensitive* box to search for the NE using the case-sensitivity specified for the typed value.

- 20 3 To filter messages based on the message type, in the *Message Type* screen area, select the message type(s) that you want to be displayed in the TL1 Console window. The *TL1SuperConsole* user can filter all message types. The *TL1Console* user can only view and filter the following messages: *Command*, *Response* and *Acknowledgement*. The complete list of message types includes: *Unparsed*, *Send Raw*, *Autonomous*, *Received Raw*, *Command*, *Acknowledgement*, and *Response*.

- 25 4 Click *OK* to make the changes and close the dialog or click *Cancel* to close the dialog without making any changes.

Reports

This section provides the procedures for reporting information from the NETSMART databases. All the reports are similar in functionality and access methods.

30 Link Report

Use the Link Report window to view and edit physical link information in the NETSMART database. Read-only (view) functions include filtering and sorting of displayed

physical links. Edit functions include modification of physical link names and deletion of physical links from the system. The Link Report can be displayed as either:

· A global view (all physical links in the system)

- 5 A group link view (all physical links belonging to a particular link that is displayed on the Topology map window)

NETSMART Crossconnect Report

The crossconnect Report dialog displays a report containing information about a selected type of crossconnect.

- 10 1 In one of the *Crossconnect* tabs, select *Report* from the *Operations* menu or select the *Report* tool from the toolbar. In the cascade to the right of the *Report* menu label, select the type of crossconnect to report. The Crossconnect Report dialog (**Figure 33**) displays.
- 15 2 Use the tools on the toolbar or select *Operations* menu items to perform the following functions.
- Select the *Print* tool to display the Print dialog to print a report.
- Select the *Filter* tool to display the Filter dialog to filter the information displayed.
- Select the *Sort* tool to display the Sort dialog to sort the information displayed.
- 20 Select the *Columns* tool to display the Column Settings dialog to determine the columns to be displayed.
- Select the *Deselect* tool to remove the selection shading from any selected screen area(s). The tool will be grayed out and unavailable if no selection has been made.
- Select the *Reload* tool to reload information from the NETSMART database.
- 25 3 Once you have completed operations in this dialog, click *Close* to close the report.

NETSMART Crossconnect Trail Report

The Crossconnect Trail window displays a report containing information about all the crossconnects in all the NEs that are autodiscovered in the Topology window.

- 30 1 Access this dialog by selecting *Query NE* from the Topology view *Edit* Menu.
- 2 In the dialog, select *Crossconnect Name* from the choice box labeled *Query by* and type the Crossconnect name or another valid value in the adjoining text field. Wild card searches are allowed, so the entry can either be a name or part of a name followed

- by a % sign. A % sign can be entered alone, in which case all the crossconnects will be retrieved from the database. The text field cannot be left blank. Apostrophes cannot be used. The apostrophe interferes with Oracle semantics. For either of the two cases, a popup dialog prompts you to enter a name or to refrain from using an apostrophe in the search name.
- 5
- 3 Click *Ok* to produce the report or click *Cancel* to cancel and close this dialog.
- 4 The NETSMART Crossconnect Report window displays.
- 5 Use the tools on the toolbar or select *Operations* menu items to perform the following functions.
- 10 Select the *Print* tool or select *Print* from the *Operations* menu to display the Print dialog to print a report.
- Select the *Filter* tool or select *Filter* from the *Operations* menu to display the Filter dialog to filter the information displayed.
- Select the *Sort* tool or select *Sort* from the *Operations* menu to display the Sort dialog to sort the information displayed.
- 15 Select the *Columns* tool or select *Column Settings...* from the *Operations* menu to display the Column Settings dialog to determine the columns to be displayed.
- In a multipage report, use the *Previous* and *Next* tools to go to the previous and next page of the report.
- 20 Use the *DelXC* tool to delete a crossconnect.
- Select the *Deselect* tool or select *Deselect* from the *Operations* menu to remove the selection shading from any selected screen area(s). The tool and the menu selection will be grayed out and unavailable if no selection has been made.
- 25 Select the *Reload* tool to reload information from the NETSMART database.
- 6 When completing operations in this window, select *Close* from the *File* menu to close the report.

Delete a Crossconnect from the Trail Report

- 30 A crossconnect can be deleted from the NETSMART Crossconnect Trail Report. In the NETSMART Crossconnect Trail Report, each of the rows represents one crossconnect record. Crossconnects can be deleted from the NETSMART Crossconnect Trail Report by selecting the appropriate row(s).

- 1 After the NETSMART Crossconnect Trail Report displays, select the row(s) to delete

using the mouse. For multiple selections, you have two options:

- Hold down the SHIFT key and click on the desired rows to select a contiguous set of records.

- Hold down the CTRL key and click on the desired rows to select a non contiguous set of records.

2 Either select the tool labeled *DelXC* from the toolbar, or from the *Operations* menu select *Crossconnect*. From the *Crossconnect* runoff menu, select *Delete XC*.

3 Once the row(s) have been selected from the table in the report panel, select either the tool labeled *DelXC*, or from the *Operations* menu select *Crossconnect* and from the runoff menu select *Delete XC*. Some of the crossconnects may be redlined. If so, when the *Ok* button is clicked on the Confirmation dialog, an Information Message box indicates that some of the crossconnects selected could be set to redline, and asks whether you would like to delete the Crossconnects not redlined and skip the redlined ones. If the *Y* (Yes) option is selected, the unredlined crossconnects are deleted. If *N* (No) is selected, control is returned to the table in the Report from where the selections were made. If *Yes* was selected, the report will redisplay without the deleted crossconnect. If *Y* (Yes) is selected, the crossconnects should be deleted. However, there could be reasons for which the delete operation for a few crossconnects might fail. In that case a dialog provides a list of failed crossconnect deletes and the reason why that delete from the report failed.

4 To verify that the changes have been made, select *Report* from the *Operations* menu, then select the appropriate type of crossconnect. A report is displayed showing all the selected types of crossconnects.

Printing

This section describes the procedures associated with printing NETSMART information. This information includes:

Printing a report

Saving a report to a disk

Printing a graphical view

Selecting a table area for printing

Previewing print output

Setting up a page for printing

Printing Overview

Use the NETSMART Print dialog to enter print commands and to print reports to

a file or to a printer. The following describes page layout and wrapping:

By default, if a row is wider than a page, the data is wrapped inside the cell.

Table rows are wrapped into multiple table regions, but only one table region is printed on each page, regardless of how many table regions can fit into one page. Table rows that extend beyond a single page are broken into side-by-side pages on cell boundaries

A *Fit Page Width* button is provided in the Page Setup dialog. When this button is selected, regardless of how wide a table row is, the table width is set to the same as the page width.

Note: A maximum of 100 lines of output is produced for each report.

Print a Report

1 After displaying a tabular report, print the data by selecting either the *Print* option on the *File* menu or by selecting the *Print* tool from the toolbar. The *Print* option on the *File* menu is not always available. The NETSMART Print dialog displays.

2 Select or type values in the following fields:

Print To—Select the output format: *Printer*, *Text File*, or *PostScript File*.

Printer Command—For text/postscript file output, this field will be grayed-out and unavailable. For printed output, type any valid printer command(s) in this field.

File Name—If you are printing to a file, use this field to type a file name.

Orientation—For printer output, select whether the printed output should be in landscape or portrait format.

Paper Size—For printer output, select the size of paper for the printed report.

3 Use the *Preview...* button to display a print preview.

4 Use the *Setup...* button to set up printing parameters.

5 Click *Ok* to send the data to the specified output device.

6 Click *Apply* to apply the changes and leave the dialog open.

7 Click *Cancel* to close the dialog without sending the data to the output device.

Save a Report to a Disk

Certain tabular style reports can be saved to a disk in text file (.txt) or PostScript (.ps) format.

1 After displaying a tabular report, click the *Print* tool or select the *Print Table* option from the *File* menu. The NETSMART Print dialog displays.

2 Select or type values in the following fields:

- Print To**—Select one of *Text File* or *PostScript File*.
 - Printer Command**—For text/postscript file output, this field will be grayed-out and unavailable.
 - File Name**—Type the name of the file to be created. Click on the button to the right of this field to display the File Selection dialog where you can select a location for the file.
 - Orientation**—This field is grayed out and not available for text/postscript file output.
 - Paper Size**—This field is grayed out and not available for text/postscript file output.
- 3 Use the *Preview...* button to display a print preview.
 - 4 Use the *Setup...* button to set up printing parameters.
 - 5 Click *Ok* to save the data to the specified location.
 - 6 Click *Apply* to apply the changes and leave the dialog open.
 - 7 Click *Cancel* to close the dialog without saving any data.

Print a Graphical View

The *Print View* option on the *File* menu lets you print what you see on the screen. This option is available in components that have graphic images (such as Topology). It is also enabled in some components that produce reports. If this selection is not available, it is grayed-out.

- 1 After displaying a graphical view, print the view by selecting the *Print View* option on the *File* menu. The NETSMART Print dialog.
- 2 Select or type values in the following fields:
 - Print To**—Select the output format: *Printer*, *Text File* or *PostScript File*.
 - Printer Command**—For text/postscript file output, this field will be grayed-out and unavailable. For printed output, type any valid printer command(s) in this field.
 - File Name**—If you are printing to a file, use this field to type a file name.
 - Orientation**—For printer output, select whether the printed output should be in landscape or portrait format.
 - Paper Size**—For printer output, select the size of paper for the printed report.
- 3 Use the *Preview...* button to display a print preview.
- 4 Use the *Setup...* button to set up printing parameters.
- 5 Click *Ok* to send the data to the specified output device.

- 6 Click *Apply* to apply the changes and leave the dialog open.
- 7 Click *Cancel* to close the dialog without sending the data to the output device.

Print Area

Use the *Print Area* option on the *File* menu to select an area of a table for printing.

- 5 Both *Set Print Area* and *Clear Print Area* options may be available. The *Print Area* option is only available for tables.

- 1 Display the table that you want to print. Select *Print Area* from the *File* menu, and select *Set Print Area* from the *Print Area* menu.

- 2 Select a row or rows for printing. For multiple print elections, you have two options:

- 10 Hold down the SHIFT key and click on the desired rows to select a contiguous set of records.

Hold down the CTRL key and click on the desired rows to select a non-contiguous set of records. When you select an area for printing, no visual changes occur.

- 15 3 Click on the *File* menu, then select the *Print* menu item.

- 4 Process printing as normal. When printing, only the selected region is taken into account. For example, the *Print Preview* option will show only the selected region. The *Clear Print Area* option will clear the selected area..

Print Preview

- 20 Use the *Print Preview* option on the *File* menu to view what will be sent to the printer or file. The *Print Preview* option is available for any tabular data displayed on the screen.

Note: A maximum of 100 lines of tabular output is produced for each report.

- 25 1 After displaying a report with the appropriate data, select the *Print Preview* option from the *File* menu. The NETSMART Print Preview dialog displays.

- 2 Select the *Print* button to display the Print dialog.

- 3 Click the *Close* button to close the Print Preview dialog.

NETSMART Page Setup

- 30 Each Print dialog in NETSMART contains a *Setup...* button. Selecting this button displays a dialog where you can select parameters that affect printed output.

- 1 After displaying a report with the appropriate data, select the *Print* tool from the toolbar or click on one of the print options on the *File* menu. The NETSMART Print dialog displays.
- 2 Click to select the *Setup...* button. The NETSMART Page Setup dialog displays.
- 5 3 In the *Font* area in this dialog, click in the selection list to the right of the *Name* label and select the font name to be used for printing. In the selection list to the right of the *Style* label, select the font style to be used for printing. In the selection list to the right of the *Size* label, select the font size to be used for printing.
- 4 In the *Title* field, either select the default window title or type a new value that will be the title for the print output.
- 10 5 In the *Header* field, type a value that will be used as the header information for the print output.
- 6 In the *Footer* field, type a value that will be used as the footer information for the print output.
- 15 7 Check the *Fit Page Width* box to fit the print output within the page width.
- 8 Click *Ok* to send the output to the selected printer.
- 9 Click *Apply* to make the changes but keep this dialog open.
- 10 Click *Cancel* to close the dialog without printing.

Filtering Tabular Information

- 20 Use the *Filter* tool and/or select *Filter* from the *Operations* menu to refine the data that you want to see in a report or other tabular information. Many of the reports in NETSMART provide this option including the Log Manager and Fault Manager reports.

- 1 After displaying a report with the appropriate data, select the *Filter* tool from the toolbar or, if it is available, select the *Filter* option from the *Operations* menu. The Filter dialog displays.
- 25 2 Click on a button beneath the *Field* label to display a drop-down list to select a field.
- 3 Select a field to be filtered. The *Test* button becomes active. Click on this button to display a series of values to test against for filtering, one of:

- 30
 - *contains*
 - !contains*
 - starts with*
 - !starts with*
 - ends with*

!ends with

Click to select one of these values.

- 4 Use Boolean values to filter by selecting one of AND / OR from the choice boxes beneath the *Logic* button.
- 5 5 Once all filtering values are selected, click *Ok* to redisplay the information with the filter(s) applied.

Sorting Information

Use the Sort dialog to specify sorting criteria in most tabular views.

- 10 *Note: There are two types of Sort dialogs. One type allows you to sort using a single argument, while another type (the Fault Manager, for instance) allows selection of multiple sort arguments. In the second type (multiple arguments), it may sometimes appear that the data is not ordered correctly..*

- 1 Click on the *Sort* tool or select *Sort* from the *Operations* menu. The Sort dialog displays.
- 15 2 The sort will consider case on string sorts. To turn off case-sensitivity, select the *Ignore Case?* (valid only for strings) box at the top of the dialog.
- 3 Select the sort parameters. The order in which you select the *Sort By* buttons will determine the sort order.
- 4 Use the *Order* button to indicate the sort order for the *Sort By* parameters. Select one of
- 20 *Ascending* (lowest to highest) or *Descending* (highest to lowest).
- 5 Click *Ok* to begin the sort. The data will redisplay in the sort order that you specified.

Sorting by Time

- 25 In a tabular display, where data can be sorted on multiple criteria, the results of a sort may appear erroneous because the system measures time in milliseconds, while NETSMART reports time in seconds. For example, the following Sort dialog shows the sorting criteria that were used to sort Fault Manager alarms information. First, the time the alarm was raised was selected and then the severity of the alarm was selected. The resulting output looks to be incorrect for the 10:31:44 time slot. The results of the sort in the following figure shows that a condition (NA) is inserted between two major alarms. The
- 30 the condition was raised milliseconds before the second major alarm, so it appears in the list before the second major alarm.

Ordering Sort Parameters

The order in which the *Sort By* buttons are selected will determine the sort order. The first (top) sort parameter has precedence over the second, the second has precedence over the third, and so forth. When the sort takes place, the NMS Raise Time will be sorted first. Because the *Ascending* button was selected, the sort will be from the earliest time to the most recent time. Next, the severity level of each alarm will be sorted in descending order within each NMS raise time. Alarm conditions will be sorted next in descending order within each severity level (which was sorted within each NMS raise time). *Service Effect* is the last button selected, and will be sorted last. Because the *Ascending* button is selected, the processing will sort service effects in ascending order, within each condition.

10 **Cutting and Pasting Information**

Support for Copy and Paste is available in editable fields such as the ones in Edit NE and the Raw TL1 editor, using the system clipboard.

Use CTRL+C to copy the information, and CTRL+V to paste it into a text area. From tables, right clicking on a cell lets you see the text in a separate dialog. Select the text in this dialog that you want to copy and press CTRL+C to copy. The text can then be pasted by pressing CTRL+V in a text destination field. There is no menu item or toolbar tool to support this action.

Setting Column Displays

You can define which columns will be displayed and which will be hidden in most tabular views. To display the Column Settings dialog, either click on the *Columns* tool in the toolbar or select *Column Settings* from the *Operations* menu. Use the Column Settings dialog to specify display criteria. The order for column display can be changed by selecting the heading field and dragging the field to a different position in the display.

1 Click on the *Columns* tool or select *Column Settings* from the *Operations* menu. The Column Settings dialog displays.

2 By default, all columns are listed in the *Visible Columns* list. Click to select a column in the *Visible Columns* list and then select the *Hide* button to move the column to the *Hidden Columns* list. To show a hidden column, click to select a column in the *Hidden Columns* list and then select the *Show* button to move the column to the *Visible Columns* list.

3 Highlight a visible column and then use the *Move Up* or *Move Down* button to move the order of the column in the list. This will change the display order for the columns.

4 Click *Ok* to confirm the column settings.

View Logs

Use the Log Managers to view NETSMART logs. Available logs include:

· Activity Log Manager

Fault Manager

5 TL1 Log Manager

Transient Event Log Manager Each of these logs can be viewed from the NETSMART menu's *Log Manager* selection. All logs maintain a maximum of 30 days worth of records.

10 *Note: There are two types of Sort dialogs. One type allows you to sort using a single argument, while another type (the Fault Manager, for instance) allows you to select multiple sort arguments. In the second type (multiple arguments), it may sometimes appear that the data is not ordered correctly.*

View Activity Log

15 The Activity Log provides a summary list of operator activities and NE state changes. For performance reasons, the Activity Log is buffered and the user may experience a delay of at least 1 minute before the log appears in the database. This delay is to accommodate transient log messages. The Activity Log is sorted based on a descending timestamp order. The record with the newest timestamp is displayed first. Because the system measures time in milliseconds while NETSMART reports time in seconds, some sort ordering may appear erroneous.

1 From the NETSMART menu, select *Log Managers*. From the menu, select *Activity Log Manager* to display the Activity Log Manager window. The selected log displays. By default, the Activity log is sorted in Timestamp Descending order.

25 *Note: It takes approximately 30 seconds to 1 minute for an action to be added to the Activity Log.*

View Fault History Log

30 Once an NE alarm has been cleared, the record is stored in the Fault History database. For performance reasons, the Fault History Log is buffered and the user may experience a delay of at least 1 minute before the log appears in the database. This delay is to accommodate transient log messages.

1 From the NETSMART menu, select *Log Managers*. From the cascading menu to the right of *Log Managers* select the *Fault History Log Manager*. The following

window displays. The menu bar and toolbar for the Fault History Log Manager are identical to the Activity Log Manager.

View TL1 Commands

Both user-generated and NE-originated TL1 commands can be viewed in the TL1

5 Log.

1 From the NETSMART menu, select *Log Managers*. From the cascading menu to the right of *Log Managers* select *TL1 Log Manager*.

View Transient Events

10 The Transient Log Manager allows viewing, filtering and sorting of all the Transient Condition events from the Fault History log. Transient Condition records are those that are reported but do not have any clearing event associated with them. It is similar to the Fault History log manager except for the condition that is a Transient event. For performance reasons, the Transient Event Log report is buffered and the user may experience a delay of at least one minute before the log appears in the database.

15 1 From the NETSMART menu, select *Log Managers*. From the cascading menu to the right of *Log Managers* select *Transient Log Manager*. The toolbar and menu bar are the same the Activity Manager.

Introduction to Meta Model

This section provides overview and design information about Meta Model component of NETSMART. The Meta Model provides an instantiated means of describing any specific network element and generic. The meta model captures the physical and logical components that comprise the NE.

This meta model is used by the application to access meta information for an NE and any specific instance of a component supported by the NE. One challenge and objective for NETSMART is to provide a generic solution for introducing new NE assemblies. The design of the meta model was intended to satisfy this goal. Other applications within NETSMART also face this similar challenge.

It is been widely accepted that a network element suites a generic assembly tree pattern very well. Ideally, applications like auto discovery, auditing, reconciliation, database change handling, configuration management should all provide generic solutions (i.e. non-type specific). Type specific traversal is supported by the meta model for those applications that find it difficult to design generically.

Scope

This document describes the NE Meta Model design with some coverage on related applications (e.g. Autodiscovery). It does not cover details on aspects related to other components. It is acknowledged that additional requirements for the Meta Model will arise during the remaining development phases of NETSMART. The NE Meta Model is very flexible and extensible. It is expected that as additional requirements are identified they will be added to subsequent revisions of this document.

Overview

This section provides an overview for the Meta Model component of NETSMART. Meta Model is the core the data driven approach of NETSMART. Various semantic details of a network element are captured in Meta Model, such as different objects managed by network element (e.g shelves, equipment, facilities etc.), relationships between these objects, various attribute applicable to these managed objects etc. The containment hierarchies between managed objects is also captured in Meta Model. The meta model provides a type of management information base for the application. If something changes between two successive releases of a network element, it can be handled in Meta Model by just incorporating these changes to the network element model. Following are few examples of the kind of information captured in this component:

- Equipment contained in a shelf

- Different facilities available on a network element.
- Different values which an equipment attribute can take
- Working and Protect participant in an EPG or FFP

The following depict the major design objectives for the meta model.

- 5 • Easy introduction of new network elements.
- Allow the applications to traverse the meta model hierarchically and generically.
- Allow the applications to define various data model, and meta model, relationships which will help satisfy their specific requirements. Note: These may and probably will be unrelated to the assembly containment. For example, a MetaSection is a way to group MetaSlot(s) for alarm correlation but a MetaSection has nothing to do with the assembly hierarchy.
- 10 • Provide the application with the ability to design using typed interfaces while maintaining the models generically.

Each managed object on network element is represented by a Meta Object in the Meta Model which contains all relevant meta information about that managed object. There are different Meta Objects for different type of facilities, equipment, EPGs etc. Each Meta Object for a given NE type in the meta model, is identified by Meta Instance Id which is just a label given to Meta Objects for identification. If there are multiple Meta Objects of the same type (e.g. two STS1 facilities) which have same characteristics, they are mapped to the same Meta Component. Meta Component represents 'Type' of Meta Object. The attributes can be defined against a Meta Object as well as Meta Component. Attributes defined against a Meta Component are applicable to all Meta Objects related to that Meta Component. All common attributes of similar Meta Objects are defined against Meta Component whereas, if there are any specific attributes applicable to a particular Meta Object only, they can be defined against Meta Object itself. Meta Model also captures some information which does not pertain to network element directly, for example the name of the java class to be used for address translation for a particular NE is also captured in meta model.

In the overall picture of NETSMART, meta model resides in Application Server. Configuration Manager is the main user of meta model. All other components access meta model via Configuration Manager. The usage of meta model can be divided into two major parts:

- Autodiscovery/Resync/Audit/Reconcile
 - Providing specific meta information
- 35 The meta model knows nothing about the current state of a network element. It

maintains only a static representation of a network element. The Autodiscovery¹ application uses the meta model to drive the building of the dynamic view of the network element. Only the dynamic view of a network element provides current state. The dynamic view of a network element is captured in another component namely the Configuration Manager. Fundamentally, the dynamic view of a network element is a subset of the meta model containment tree. During autodiscovery, the containment hierarchy modeled in meta model is used to build the containment tree (dynamic view) of application objects in Configuration Manager. The containment hierarchy in meta model dictates the containment hierarchy in configuration manager. Only containment relationships in meta model are used for autodiscovery. Other relationships in the meta model relationship tree are not used during autodiscovery.

Once autodiscovery is done, configuration manager can obtain any specific meta information from meta model. For example, while displaying equipment and ports in configuration manager GUI, configuration manager needs to find out various ports supported by a particular equipment. This information is obtained by configuration manager from meta model on need basis. Another example is that when user wants to change some provisioning attribute on a facility or equipment, configuration manager GUI presents list of valid values for that attribute. This list of valid values is obtained from meta model on need basis.

Meta Model can be divided into two parts on broad basis:

- Meta Model Data
- Meta Model Engine

Meta Model data contains all the static modeling information about the network element. It models all the Meta Objects, relationships between them, various applicable attributes on Meta Objects, valid values for these attributes etc. This data is captured in oracle database tables as per the data model. Initially, this data is recorded in .db files, one corresponding to each table in data model. These .db files are loaded into oracle database using some awk scripts during NETSMART installation. Once this data is loaded into oracle data-base, during Application server startup this information is read by Meta Model engine and cached in memory in form of relationship tree. Once loaded into memory, Meta Model engine uses this cache for future refer-ence. It is possible to delay loading of this information into memory Meta Model engine is the executable part in meta model which

¹ Autodiscovery is the process of obtaining configuration information from NE and persisting in Configuration Manager.

implements all the interfaces exposed. It also implements semantic interpretation of Meta Model data, loading of meta model data from database to memory.

Feature Dependencies

- 5 In order to be able to support autodiscovery, Meta Model is dependent on support from COMMS for that NE type.

Process Overview

This section addresses process of adding support for a new network element assembly. Following are main steps involved in supporting new network element in netsmart from meta-model point of view:

- 10 • Understanding the network element : This involves reading the documentation (e.g. Architecture and design documents, TL1 document etc.) available on network element to be supported. This helps build the general understanding of the network element. This also involves trying TL1 commands on the NE and/or interacting with NE people to clarify some behavioral doubts.
- 15 • Modeling meta objects and relations : This involves abstracting the containment and other relation-ships between various objects to be modeled. Various relationships and objects to be supported depends on the NETSMART requirements. NETSMART RSA dictates the type and level of support required in NETSMART for a network element. Please refer to Appendix A for list of various objects and relationships commonly modeled for network assemblies. It may be required to modeled additional relationships or objects depending on the requirements defined by RSA. This object-relation-ship model is captured in meta_assembly.db file.
- 20 • Modeling other characteristics of meta objects: This includes filling up other.db files for support of network element in question. This includes meta_instance.db, meta_component.db, meta_property.db, meta_attribute.db, meta_attr_map, meta_collapsed_naming_key and meta_eqpt_type_map.
- 25 • Implementing a data cache java class for fetching configuration information from network element during the process of Autodiscovery.
- Testing autodiscovery for the network element.
- 30 • Code review for the model.

Assumptions

Modeling of a new NE assembly assumes that the documentation for the network element is available (e.g. NMIS, PDS etc). Also, it is assumed for modeling of new

assemblies that access to network element is also available.

Data Model

5 This section defines the data model which is used to instantiate the meta model. The assemblies for all net-work element types supported by NETSMART will be stored in the database (Oracle). A specific NE meta model can be loaded into memory on demand or pre-loaded during the Application Server initialization. SQL queries are used to retrieve the assembly data and instantiate the meta model. The data model has been updated for the 2.i release. Changes for 2.i included (a) adding newer columns to existing tables (b) dropping columns which existed prior to 2.i and (c) introducing new tables. Table and column definitions which existed prior to 2.i are mentioned in italics. This is expected to serve as a reference for developers.

The following sections describe the data model and how the meta model uses it to instantiate a network element assembly:

- Schema definition
- 15 • Query model.

Schema definition

The following tables are used to define all network element assemblies which are managed by NETSMART. The meta model is built by querying the following tables:

- meta_component
- 20 • meta_instance
- meta_assembly
- meta_class
- meta_property
- meta_attribute
- 25 • meta_assembly_map
- meta_collapsed_naming_keys
- meta_attr_map
- meta_eqpt_type_map

The following tables have been eliminated in 2.i:

- 30 • meta_revision

meta_component

The Component table is the catalogue of all available part types for a network element. Each part for a given base network element (e.g. FACTR) is assigned an component identifier that is a unique primary key to the Component table. Following table

5 lists the different columns in the table and their descriptions:

	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
	META_COMP_ID	varchar2(32)	A unique component identifier.
10	APPL_CLASS	varchar2(75)	The name of the java class used to create application object during autodiscovery.
	META_CLASS_ID	varchar2(32)	An enumerated meta class identifier. This field references the meta_class table.
	APPLICATION_TYPE	varchar2(15)	The type value used by the application for this component. (e.g. EQPT, TP, etc.).
15	COMM_TYPE	varchar2(15)	The type value used by the communications layer for this component. (e.g. EQPT, TP, etc.) There is not a one to one mapping with the APPLICATION_TYPE.
20	NAMING_KEY	varchar2(15)	Some components have a naming key. It is analogous to the applications ComponentType in the Relative-ComponentID. (e.g. Shelf, Slot, Group, etc.). Any given instance of this component may provide a NAMING_VALUE which is used in combination with this naming
25			key.

Constraints:

- Primary key : NE_BASE, META_COMP_ID
- Foreign key: META_CLASS_ID references meta_class(meta_class_id)

meta_instance

30 The Instance table is the inventory of all available parts. An instance refers to the particular existence of a component (MetaObject) in relationship tree identified uniquely by META_INST_ID for a particular NE type.

	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
	META_INST_ID	varchar2(32)	A unique instance identifier for a specific component.
5	META_COMP_ID	varchar2(32)	This instance's component identifier.
	NAMING_VALUE	varchar2(32)	Specifies complete Component ID for the meta object.
	INSTANCE TYPE	varchar2(15)	Indicates if instance is a standard MetaObject, a collapsed MetaObject or an expandable collapsed MetaObject.
10	AUTO_CREATE a	varchar2(16)	Indicates when an instance gets created. case-1: when the configuration permits it case-2: always created automatically case-3: created by default if no data object exists
15	a.		This information is used by Autodiscovery service. Refer to Appendix I: for details.

Constraints:

- Primary key: NE_BASE, META_INST_ID
- NE_BASE, META_COMP_ID references meta_component(NE_BASE, META_COMP_ID)
- instance_type can be in ('single', 'expand', 'collapse')
- auto_create can be in ('normal', 'auto_create', 'default_create')

meta_assembly

The assembly table describes the complete hierarchical composition of a network element assembly. The composition is based on instance identifiers. The composition of an assembly uses named relationships (or edges) with possible conditional expressions.

25	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
	PARENT	varchar2(32)	A instance identifier for a specific assembly component. This instance of a component is the direct predecessor to the corresponding NODE identifier in the assembly hierarchy. NODE
30		varchar2(32)	A instance identifier for a specific

		assembly component. This NODE identifier is the successor to the PARENT identifier.
5	EDGE	varchar2(32)
10		The EDGE defines a named relationship between the PARENT and the NODE. The reasons and usage of relationships is dependent upon application usage. For instance the Autodiscovery application is primarily concerned with CONTAINMENT type relationships. Refer to appendix A for various relationships modeled in meta model.
	PRIORITY	integer
		This determines the order in which rows are returned from database at the time of loading meta model into application memory.
15	CONDITION	varchar2(1024)
	be attached	The condition is an optional expression which can be attached to an edge. The dynamic evaluation of the conditional expression must be evaluated to true in order for the relationship between the PARENT and the NODE to hold.
20	Constraints:	
	• Primary key:	NE_BASE, PARENT, NODE, EDGE
	• Foreign key:	(NE_BASE, PARENT) references meta_instance(NE_BASE, META_INST_ID)
	• Foreign key:	(NE_BASE, NODE) references meta_instance(NE_BASE, META_INST_ID)
25	• EDGE must be one of	(‘IS_A’, ‘IS_A_DEFAULT’, ‘CONTAINS’, ‘CONTAINS_ONE_OF’, ‘CONTAINS_ONE_OF_DEFAULT’, ‘CONTAINS_FOR_NAMING’, ‘CONTAINS_AS_WORKING’, ‘CONTAINS_AS_WORKING_DEFAULT’, ‘CONTAINS_FOR_PROTECTING’, ‘IS_NAMED_BY’, ‘SUPPORTS_PORT’, ‘SectionToEquipment’, ‘SectionEquipmentDefault’, ‘SectionToType’, ‘HAS_PROT_PARTICIPANT’, ‘HAS_PROTECTING_PARTICIPANT’, ‘HAS_WORKING_PARTICIPANT’, ‘IS_SUPPORTED_BY’, ‘IS_XCONNECTABLE_TO’, ‘IS_DEFAULT_XCONNECTABLE_TO’, ‘IS_DEFAULT_1WAY_XCONNECTABLE_TO’
30		

meta_class

The meta_class table provides the information needed to instantiate MetaObject(s). MetaObject(s) are the instantiated representation of a component instance. The MetaObject models static information about a component. The MetaObject(s) are sub-classed (e.g. MetaShelf, MetaFunctionalGroup, MetaEquipment, etc.) and provide a typed hierarchical representation of an assembly.

5

10

Table Column	Datatype	Description
META_CLASS_ID	varchar2(32)	An enumerated meta class identifier.
META_CLASS	varchar2(75)	The actual JAVA class name, including package information. These classes are implemented in the meta_model package and are instantiated using JAVA reflection.

meta_assembly_map

The meta_assembly_map defines the assemblies managed by FENICS. It also provides for the mapping of assembly id. That is, a particular assembly can be managed as another. In addition, this table provides the weight assigned to a particular assembly, the managed level and auto load flag.

15

20

25

Table Column	Datatype	Description.
TYPE	varchar2(32)	The network element type as retrieved from the NE (e.g. FACTR). The complete assembly id consists of the TYPE, CONF, MAJOR, and MINOR fields (e.g. FACTR UPSR 05 02).
TO_TYPE	varchar2(32)	Mapped network element type.
MINMAJOR	varchar2(5)	The major and minor network element revision number
AUTO_LOAD	varchar2(5)	Flag indicating whether the mapped assembly should be auto loaded during initialization.

The following are not available in 2.i:

30

<i>CONF</i>	<i>The network element configuration as retrieved from the NE (e.g. UPSR).</i>
<i>MAJOR</i>	<i>The network element major revision as retrieved from the NE (e.g. 05).</i>
<i>MINOR</i>	<i>The network element minor revision as retrieved</i>

		<i>from the NE (e.g. 02).</i>
	<i>TO_BASE</i>	<i>Map the above assembly to this base network element id. (e.g. FACTR). The mapped assembly id consists of the TO_BASE, TO_MAJOR and TO_MINOR fields (e.g. FACTR 05 02).</i>
5	<i>TO_MAJOR</i>	<i>Map the above assembly to this major network element revision. (e.g. 05)</i>
	<i>TO_MINOR</i>	<i>Map the above assembly to this minor network element revision. (e.g. 02)</i>
10	<i>WEIGHT</i>	<i>The weight assigned to the complete assembly id.</i>
	<i>MANAGE_LEVEL</i>	<i>The managed level of the mapped assembly id (e.g. 5S)</i>

Constraints:

- Primary key:
- 15 • AUTO_LOAD must be either 'true' or 'false'

meta_property

The meta_property table captures the properties² for a specific component. A property is a generic way of grouping attributes of a component. The grouping of attributes into properties is application dependent. For example, the attributes which are used to describe a components current state and configuration are grouped into the ATTR_LIST property.

20

	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
25	META_PROPERTY_ID	varchar2(32)	Unique identifier for the property.
	PROPERTY_NAME	varchar2(32)	The name assigned to this property. (e.g. ATTR_LIST)

² Properties can be visualized as category of attributes. There are various categories of attributes modeled in meta model e.g. TL1 related attributes, attributes required to control behavior of other components etc.

30

The following are not available in 2.i
META_COMP_ID

5

The component identifier which is associated with this property. This may also be a META_CLASS_ID. If it is a META_CLASS_ID, all instances of the particular META_CLASS receive this property.

PROPERTY_KEY

10

A unique identifier for a property name. Used to distinguish identical property names with conditions.

CONDITION

15

A condition expression which can optionally be attached to the property. The dynamic evaluation of the conditional expression must be evaluated to true in order for the component to access this property.

Constraints:

- Primary key: NE_BASE, META_PROPERTY_ID

meta_attribute

20

The meta_attribute table captures the attributes for a specific property. The meta_attribute table provides the capability of describing the characteristics of any given attribute. This table serves as inventory of different attributes applicable to NE types.

Table Column	Datatype	Description
NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
META_ATTRIBUTE_ID	varchar2(32)	Unique identifier for the attribute.
PROPERTY_ID	varchar2(32)	Prior to release 2.i, this column was called PROPERTY_NAME. Together with NE_BASE, references meta_property(ne_base,meta_property_id)
ATTR_NAME	varchar2(32)	The name assigned to this attribute.
TYPE	varchar2(10)	The application type of the attribute. For example, String, Integer, Boolean, Float,

25

30

			Enum.
5	VALUE	varchar2(256)	Although the data model, and meta model do not know the current state of any components attributes. Some attribute have a static value. This value is not expected to change.
	DEFLT	varchar2(20)	The default attribute value.
	VALID_VALUES	varray called	A list of valid values for this attribute. This
10	is	str_list_t	currently limited to 15 elements of maximum length 15.
	MIN	varchar2(20)	A minimum value for this attribute. Used for Integer and Float only.
15	MAX	varchar2(20)	A maximum value for this attribute. Used for Integer and Float only.
	INCR	varchar2(20)	A increment value for this attribute. Used for Integer and Float only.
	READ_ONLY	varchar2(5)	A boolean flag indicating whether this attribute may be changed or not.
20	REQUIRED	varchar2(5)	A boolean flag indicating that this attribute is required.
	<i>The following are not available in 2.i:</i>		
25	PROPERTYKEY		<i>A unique identifier for a property name. Used to distinguish identical property names with conditions.</i>
	ATTRKEY		<i>A unique identifier for an attribute name. Used to distinguish identical attribute name with conditions.</i>
30	META_COMP_ID		<i>The component identifier which is associated with this property. This may also be a META_CLASS_ID. If it is a META_CLASS_ID, all instances of the particular META_CLASS receive this property.</i>
35	CONDITION		<i>A condition expression which can optionally be attached to the attribute. The</i>

dynamic evaluation of the conditional expression must be evaluated to true in order for the component to access this attribute.

5 Constraints:

- Primary key: NE_BASE, META_ATTRIBUTE_ID
 - Foreign key: (NE_BASE, META_PROPERTY_ID) references meta_property(NE_BASE, META_PROPERTY_ID)
 - ATTRNAME is NOT NULL
- 10
- TYPE must be in ('String', 'Integer', 'Boolean', 'Float', 'Enum', 'Class')
 - READ_ONLY must be either in 'true' or 'false'
 - Valid values for REQUIRED must be either 'true' or 'false'

meta_attr_map

15 This table is new for the 2.i release. It links meta_attribute with either meta_component or meta_instance.

	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
20	META_ID	varchar2(32)	Identifies the meta_component or meta_instance to which the attribute is assigned,
25	META_ATTRIBUTE_ID	varchar2(32)	Unique identifier for the attribute.
	CONDITION		An optional condition expression. The dynamic evaluation of the conditional expression must be evaluated to true for the component instance to access this attribute.

Constraints:

- Primary key: NE_BASE, META_ID, META_ATTRIBUTE_ID
- 30
- Foreign key: (NE_BASE, META_ATTRIBUTE_ID) references meta_attribute(NE_BASE, META_ATTRIBUTE_ID)
 - Foreign key: (NE_BASE, META_ID) may reference either meta_instance(NE_BASE,

META_INST_ID) or meta_instance(NE_BASE, META_COMP_ID)

meta_eqpt_type_map

This table is new for release 2.i. contains a vendor ID/CLEI to equipment type mapping.

5	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
	VENDOR_ID	varchar2(32)	Vendor Id (or CLEI) that uniquely identifies an equipment type.
10	NE_EQPT_TYPE	varchar2(32)	Equipment type. This doesn't have to be unique since different vendor IDs/CLEI codes can map to the same equipment type.

Constraints:

- Primary key: NE_BASE, VENDOR_ID

meta_collapsed_naming_keys

15 This table is new for release 2.i. Specifies for a collapsed meta instance what are its naming keys that must be resolved. E.g. the collapsed object representing an ATM VC on the SONET ring, the unresolved naming key would be vci.

	Table Column	Datatype	Description
	NE_BASE	varchar2(32)	The base network element identifier (e.g. FACTR).
20	META_INST_ID	varchar2(32)	Specifies a given instance. Together with NE_BASE, references meta_instance(ne_base, meta_inst_id)
	NAMING_KEY	varchar2(15)	This is similar to the application ComponentType in the RelativeComponentID (e.g. Shelf, Slot, Group etc.).
25	MIN	integer	The minimum valid value for the RelativeComponentID.
	MAX	integer	The maximum value for the RelativeComponentID.
30	INC	integer	Incremental value for the RelativeComponentID

	PREFIX	varchar2(32)	String that may have to be prepended to the Relative-ComponentID.
	POSTFIX	varchar2(32)	String that may have to be appended to the Relative-ComponentID.
5	PRIORITY	integer	A collapsed meta object may have multiple naming keys. This specifies the relative priority.
	INHERITED	varchar2(5)	Specifies whether value for RelativeComponentID is inherited from ancestor.

Constraints

- 10
- Foreign key: (NE_BASE, META_INST_ID) references meta_instance(NE_NBASE, META_INST_ID)
 - INC should not be < 0 or > MAX
 - INHERITED must be either 'true' or 'false'
 - MAX should not be less than MIN

15 meta_tmp

This is a temporary table. It is used by Meta Model awhile populating its tables with data

	Table Column	Datatype	Description
20	NAME	varchar2(256)	Used as a temporary work space during data load pro-cess.

meta_strings

Another temporary table.

	Table Column	Datatype	Description
25	NAME	varchar2(700)	Temporary
	ID	integer	Used to identify NAME

Constraints:

- Primary key: NAME

meta_revision

This table has been eliminated in release 2.i.

The meta_revision table captures the possible revisions of components. Since network elements have revisions this table allows for the definition of the components which comprise a particular network element revision. Each network element revision must define a list of valid components which are used to define the assembly.

5	Table Column	Description
	<i>NE_BASE</i>	<i>The base network element identifier (e.g. FACTR).</i>
	<i>META_COMP_ID</i>	<i>The component identifier.</i>
	<i>MJ_REV</i>	<i>The network element major revision which requires this component. (e.g. FACTR 05). This field is used in conjunction with the</i>
10		<i>MN_REV.</i>
	<i>MN_REV</i>	<i>The network element minor revision which requires this component. (e.g. FACTR 05 02). This field is used in conjunction with the</i>
		<i>MJ_REV.</i>

Query Model

15 This section describes database queries performed by Meta Model to instantiate a network element assembly. The following sections describe how the meta model is built:

- Retrieving the Assembly Data
- Retrieving an Assembly Base
- Retrieving the Assembly Root Node
- 20 • Retrieving the Assembly Hierarchy

Each SQL statement and its corresponding result set are discussed below.

Retrieving the Assembly Data

SQL:

```
SELECT * from meta_assembly_map;
```

25 Results:

The result is a collection of MetaAssemblyData objects. This collection of MetaAssemblyData define the network element assemblies which are managed by FENICS. This collection also provides a way to map a particular assembly to another. That is, to manage a particular assembly as if it was another. For example, FACTR 05 02 may be managed as a FACTR 05 01. Each MetaAssemblyData assigns a weight to a particular assembly. In addition, the managed level and auto load flag is provided in the

MetaAssemblyData.

Retrieving an Assembly Base

SQL:

```
5  SELECT  mi.meta_inst_id,  mi.meta_comp_id,  mi.naming_value,  mc.appl_class,
      mc.meta_class_id, mc.application_type, mc.comm_type, mc.naming_key, mc.auto_create,
      ml.meta_class
      FROM meta_instance mi, meta_component mc, meta_class ml
      WHERE mi.ne_base = :1 AND
      mc.ne_base = mi.ne_base AND mc.meta_comp_id = mi.meta_comp_id AND
10  ml.meta_class_id = mc.meta_class_id;
```

Results:

The result of this query is all of the components for a specified base assembly. This becomes a cache of Met-aNode(s) which is used by the individual assemblies under the base.

15 Retrieving the Assembly Root Node

SQL:

```
      SELECT  mi.meta_inst_id,  mi.meta_comp_id,  mi.naming_value,  mc.appl_class,
      mc.meta_class_id, mc.application_type, mc.comm_type, mc.naming_key, mc.inherited_nk,
      mc.auto_create, ml.meta_class
20  FROM meta_instance mi, meta_component mc, meta_revision mr, meta_class ml
      WHERE mi.meta_inst_id =:1
      AND mc.meta_comp_id = mi.meta_comp_id
      AND mc.ne_base = mi.meta_inst_id
      AND mr.meta_comp_id = mi.meta_comp_id
25  AND mr.ne_base = mi.meta_inst_id
      AND mr.mj_rev = :2
      AND mr.mn_rev = :3
      AND ml.meta_class_id = mc.meta_class_id;
```

Results:

30 The result of this query is a particular revision of a network element assembly. This is expected to return the single result set associated with a particular base, major and minor revision of an assembly. This result set is used to create the MetaNe root node in the

assembly hierarchy.

Retrieving the Assembly Hierarchy

SQL:

```
SELECT ma.ne_base, ma.parent, ma.node, ma.edge, ma.condition
```

```
5 FROM meta_assembly ma, meta_instance mi, meta_revision mr
WHERE ma.ne_base =:1 AND
ma.parent =:2 AND
ma.ne_base = ma.ne_base AND
mi.meta_inst_id = ma.node AND
10 mr.ne_base = ma.ne_base AND
mr.meta_comp_id = mi.meta_comp_id AND
mr.mj_rev =:3 AND
mr.mn_rev =:4;
```

Results:

15 The result of this query are the successors to the specified parent and ne_base parameters. This SQL is recursively called in order to build the assembly hierarchy. It is started at the root MetaNe node and traverses depth first until it reaches leaf nodes and the entire tree is instantiated. NOTE: This is the most expensive, time consuming, part of building the meta model.

20 Retrieving object-attribute assignment

SQL:

Please refer to LOAD_ALL_OBJECTS_ATTR_MAP inside MetaObjectLoader.java

```
SELECT mi.meta_inst_id, mam.meta_attribute_id, mam.condition, ma.meta_property_id
FROM meta_instance mi, meta_attr_map mam, meta_attribute ma
25 WHERE mi.ne_base = :1 AND
((mi.meta_inst_id = mam.meta_id) OR (mi.meta_comp_id = mam.meta_id)) AND
mam.ne_base = mi.ne_base AND
mam.meta_attribute_id = ma.meta_attribute_id AND
ma.ne_base = mi.ne_base
```

30 Results:

Loads all attribute_id values for every component inside an assembly.

Retrieve a specific object in an assembly

SQL:

Please refer to LOAD_INSTANCE in MetaObjectLoader.java

```
5  SELECT  mi.meta_inst_id,  mc.meta_comp_id,  mi.naming_value,  mc.appl_class,
      mc.meta_class_id, mc.application_type, mc.comm_type, mc.naming_key, mi.auto_create,
      mcl.meta_class, mi.instance_type
FROM meta_instance mi, meta_component mc, meta_class mcl
WHERE mi.ne_base = :1 AND
10  mi.meta_inst_id = :2 AND
      mi.meta_comp_id = mc.meta_comp_id AND
      mc.ne_base = mi.ne_base AND
      mc.meta_class_id = mcl.meta_class_id
```

Results:

15 Loads a specific object in an assembly.

Loading an Attribute for an assembly component

SQL:

Please refer to LOAD_OBJECT_ATTRIBUTES in MetaObjectLoader.java

```
20  SELECT ma.ne_base, ma.meta_attribute_id, ma.meta_property_id, ma.attrName, ma.type,
      ma.value, ma.deflt, ma.valid_values, ma.min, ma.max, ma.inc, ma.read_only, ma.required,
      mam.condition
```

```
FROM meta_instance mi, meta_attr_map mam, meta_attribute ma
WHERE mi.ne_base = :1 AND mi.meta_inst_id = :2 AND ((mi.meta_inst_id =
25  mam.meta_id) OR (mi.meta_comp_id = mam.meta_id)) AND mam.ne_base = mi.ne_base
AND mam.meta_attribute_id = ma.meta_attribute_id AND ma.ne_base = mi.ne_base
```

Results:

Loads all meta_attributes of a specified object in a given assembly for a particular network element.

Loading specific object in an assembly

SQL:

Please refer to LOAD_INSTANCE inside MetaObjectLoader.java

5 SELECT mi.meta_inst_id, mc.meta_comp_id, mi.naming_value, mc.appl_class,
 mc.meta_class_id, mc.application_type, mc.comm_type, mc.naming_key, mi.auto_create,
 mcl.meta_class, mi.instance_type
 FROM meta_instance mi, meta_component mc, meta_class mcl
 WHERE mi.ne_base = :1 AND
 mi.meta_inst_id = :2 AND
10 mi.meta_comp_id = mc.meta_comp_id AND
 mc.ne_base = mi.ne_base AND
 mc.meta_class_id = mcl.meta_class_id

Results:

15 Loads a specific meta_instance object by relating the meta_instance with meta_class and
 meta_component.

Retrieve assembly for a network element

SQL:

Please refer to LOAD_ASSEMBLY in MetaObjectLoader.java

20 SELECT parent, node, edge, condition, priority from meta_assembly WHERE ne_base =
 :1 ORDER BY parent, priority, node

Results:

Loads the ordered assembly data for a specific network element.

Retrieving meta_collapsed_naming_keys

SQL:

25 Please refer to LOAD_ALL_COLLAPSED_NAMING_KEYS in MetaObjectLoader.java.

SELECT * from meta_collapsed_naming_keys where ne_base = :1 ORDER by priority;

Results:

Loads information that will help to resolve naming_keys for a collapsed meta instance.

Meta Model

The **MetaModelFactory** is a singleton object which requires initialization in each process space that requires meta model access. The **MetaModelFactory** creates a **MetaBaseAssembly** for each base network element supported by the system (e.g. FACTR, FLM150, etc.). In addition, the **MetaModelFactory** assigns **MetaAssembly(s)** to each **MetaBaseAssembly** reflecting the network element revisions that are supported by NETSMART (e.g. FACTR 05 01, FACTR 05 02, FLM150 11 02, FLM150 12 02, etc.). Each **MetaAssembly** evaluates its auto load flag. If it is True, the **MetaAssembly** will initiate the instantiation of the assembly. The instantiation of the assembly starts at the **MetaNe** root node and instantiates a tree of **MetaNode(s)**. The tree of **MetaNode(s)** include named relationships between nodes called **MetaEdge(s)**.

Each **MetaEdge** may have a condition expression which must be evaluated to true in order for the relationship to be valid. The instantiated assembly provides an application information base for a network element. It is static network element data that is used for autodiscovery, configuration management and various other application components. The assembly tree may be traversed generically or via a typed interface.

If the auto load flag is False, the **MetaNe** root node is the only node that is instantiated. The rest of the assembly tree is instantiated on demand by the **Application**. The **Application** which requires access to an assembly obtains it via a **MetaNeFactory**. The **Application** provides the necessary data to identify an assembly and acquires a **MetaNe** reference. If the assembly was not auto loaded it is loaded at this time. **Figure 38** shows the MetaModel class diagram for this process.

Meta Base Assembly

The **MetaBaseAssembly** represents a base network element (e.g. FACTR). The **MetaBaseAssembly** is multithreaded and synchronized and is created during process initialization. **MetaBaseAssembly** has state which is represented by **MBA_State**. At the time of initialization, the state is set to **MBA_Inactive**. If **Meta-BaseAssembly** is auto load, a **MetaBaseAssemblyLoader** is created and the state gets transitioned to **MBA_Loading**. If it is not a case of auto load, then it is loaded on demand. The **MetaBaseAssembly** is only loaded once in the process space. If there is a second request to load a **MetaBaseAssembly** in **MBA_Loading** state, the invoker is blocked until loading is complete. **MBA_NotFound** represents absence of **MetaBaseAssembly** in database. When the load is successful, the state is transitioned to **MBA_Loaded**. If load fails due to some reason, the state is transitioned to **MBA_Not_Loaded**. **Figure 39** shows the MetaBase Assembly class diagram. **Figure 40** shows the Meta Base Assembly

state transition diagram.

Meta Object

5 The **MetaNode** is an abstraction which allows for generic/hierarchical traversal of a network element assembly. The **MetaNe** is the root **MetaNode**. The typed specific behavior is defined by the **MetaObject** subclasses. A **MetaObject** is a generalization of the things that comprise a network element. The **MetaObject** may contain properties, or lists of attributes, called **MetaProperty(s)**. The **MetaProperty** contains **MetaAttribute(s)**. The **MetaProperty** and **MetaAttribute** may contain a **Condition**. The **Condition** must be evaluated at run time with context. Only if the **Condition** is true does the **MetaObject** recognize that **MetaProperty** or **MetaAttribute**. A **MetaObject** is created by the **MetaReflector** using Java reflection. The **MetaObject** is a abstract class used to define generic behavior for typed network element objects. The network element assembly is a generic tree pattern implemented by the **MetaNode** and **MetaEdge** relationships. The network element assembly is also typed. Each **MetaNode** is implemented as a **MetaObject** and subclass. **Figure 41** shows the **MetaNode** class diagram.

Loading a meta assembly

20 The network element assembly is a generic tree pattern implemented by the **MetaNode** and **MetaEdge** relationships. The network element assembly is also typed. Each **MetaNode** is implemented as a **MetaObject** and subclass. At the time of meta assembly loading, objects and relationships are retrieved from the **meta_assembly** database table and a relationship tree is constructed in application address space.

25 **Figure 42** depicts a small portion of a **FACTR** assembly. Starting at the root **MetaNode** (e.g. **FACTR_5_2**), the meta model is hierarchically built depth first. The root node contains a **PHYSICAL_SIDE** and a **LOGICAL_SIDE**. From the **PHYSICAL_SIDE**, the hierarchy continues by working its way down through the shelves, sections and equipments, etc.

The hierarchy of the assembly is totally driven by the data model. The loading of the meta model is strictly a reflection of what has been modelled in the **meta_assembly** table.

30 Note the relationships between any predecessor and its successors are named and may optionally have a conditional expression on them. The condition expression is evaluated dynamically at run time. The condition must be evaluated to true in order for the relationship to exist.

Objects & Relationships Modelled in Meta Model

This section provides list of various objects and relationships modelled in meta model. The list of objects and relationships provided here covers most of the common scenarios which apply to most of network assemblies. It is important to understand that need for modelling new objects and relationships may arise in future depending on the assembly and the kind of support required in NETSMART for that assembly. Depending on the kind of support provided for an assembly, every relationships object may not be applicable. Following is the list of commonly modelled objects in meta model:

- 5
- 10
 - Shelves
 - Equipment
 - Facilities³
 - Equipment Protection Groups
 - Facility Fibre Protection Groups
 - Functional Groups
- 15
 - Clocks
 - CPU

In addition to that, there are some pseudo objects which can be modelled to organize the hierarchy better. These objects are Sections and Groups. Sections are primarily used to group related equipment together and Group is a more general notion to group set of related meta objects together in meta_assembly. Following is list of relationships modelled in meta model:

CONTAINS Used to model containment between two objects.

CONTAINS_ONE_OF If a parent object in the containment hierarchy can have only one of possible children (in dynamic view) then this relationship is used between parent object and individual children objects.

CONTAINS_ONE_OF_DEFAULT Used to relate a parent object to the child object which will be default child in case when multiple children objects are related to the parent by **CONTAINS_ONE_OF** relationship.

IS_SUPPORTED_BY Used to capture relationship between functional groups and slots supporting those groups.

HAS_WORKING_PARTICIPANT Used to capture relationship between a protection

³ This includes all different types of facilities (e.g. ports, termination points etc) which are required to be supported for the particular network element assembly.

group (equipment or facility) and working object in that group.
HAS_PROTECTING_PARTICIPANT Used to capture relationship between a protection
 group (equipment or facility) and protecting object in that group.

SUPPORTS_PORT Used to capture relationship between port and equipment supporting
 that port.

IS_XCONNECTABLE_TO Used to model the relationship between two time slot groups
 which can have cross connects between them. Used in case of FLASH192 only at
 present.

IS_DEFAULT_XCONNECTABLE_TO Used to model the relationship between two time
 slot groups which can have cross connects between them by default. Used in case
 of FLASH192 only at present.

IS_DEFAULT_1WAY_XCONNECTABLE_TO Used to model the relationship between
 two time slot groups which can have one way cross connects between them by
 default. Used in case of FLASH192 only at present.

CONTAINS_AS_WORKING Used to model relationship between line termination point
 and working time slot groups contained in it.

CONTAINS_AS_WORKING_DEFAULT Used to model relationship between line
 termination point and default working time slot groups (if any) contained in it.

CONTAINS_FOR_PROTECTING Used to model relationship between line termination
 point and protecting time slot groups contained in it.

Modelling Tips

Following are some tips and guidelines for modelling of network elements:

- MetaObjects to represent CPUs have to be named as <string1>-<string2> While <string1>
 can be anything (usually "Cpu" or "CPU"), <string2> has to be the AID of the
 CPU. Because this is the logic used to get the CPU aid during a SWDL/RMBU!
 The existing metamodels follow this rule.
- There are MetaObjects for which we will not create any application object in the dynamic
 tree. Exam-ples are PHYSICAL_SIDE, LOGICAL_SIDE, CPUs etc. You can give
 'none' as their naming_value in meta_instance.db Also make sure that you leave
 the naming_key of the corresponding meta_component entry as empty.
- Any MetaObject contained by another MetaObject that has been marked as 'expand' (ie,
 instance_type is 'expand' in meta_instance.db) should itself be given the
 instance_type 'expand'.
- Any MetaObject contained by another MetaObject that has been marked as 'collapse' (ie,
 instance_type is 'collapse' in meta_instance.db) should itself be given the

instance_type 'collapse'.

- Make sure that CID+Type will be a unique key to identify a MetaObject. CID is the naming_value col-umn in meta_instance. And Type is the comm_type column in meta_component. In other words, there should not be more than one MetaObject with the same CID and the same Type.
- While assigning the meta attribute LINKABLE to MetaObjects, do NOT use any conditions. This is because when Topology queries CM for all linkable facilities, CM does a direct DB query by joining pnecomponent table with metamodel tables. Conditions cannot be evaluated during this. Again, existing metamodel does not use conditions for LINKABLE attr; so we can keep it that way.
- Now we can assign meta attributes to meta_component_id's or meta_instance_id's. So it is better to keep these two ids distinct.
- Use comments generously in the db files. It would be useful later on, if we can put the schema of the corresponding table at the beginning of each db file.
- Try to organize the db files into different logical blocks. Use blank comment lines to visually separate diff blocks. Give useful comments for each block. For examples, pl see FLM600/*.db files.

Conditions and their evaluation

While modelling a network element assembly, conditions can be used where ever some concept is applicable based on condition. In current design following things can be qualified with conditions:

- Relationship between two meta objects could be conditional. While meta model relationship tree tra-versal, relationships qualified with conditions are only traversed if the condition is met. Traversal logic does not reach a node, if there was a condition on its predecessor edge (i.e. relationship to parent) which is evaluated to 'false'. Similar logic applies to traversal from a child to parent object as well. This kind of conditional relationships are covered in meta_assembly.
- Applicability of an attribute to a Meta Component or Meta Instance could be conditional. An attribute and all its characteristics (e.g. vaild values, read only etc) will apply to a Meta Component or Meta Instance only if the associated condition (if any) evaluates to true. The conditions in meta model look like DataObject.getAttributeValueString("CONF5")=="D1" This implies that if the value of attribute 'CONF5' is equal to 'D1' in an object of class DataObject then this will evaluate to 'true'. In order to evaluate conditions, meta model needs 'context'. A component which invokes an interface on meta model, needs to provide context

as well so that meta model can evaluate any related conditions. 'Context' is a generic concept and is a vector of objects. In the example of condition above, the 'context' is expected to be a vector of DataObject⁴ objects. The framework component responsible for evaluation of conditions, will invoke 'getAttributeValueString("CONF5")' method on each object in context and compare the return value with 'D1'. If there was any object in the context for which this comparison succeeds the condition will be evaluated to true.

Autodiscovery Overview

This section presents overview of the autodiscovery process and involvement of meta model in this process. When user adds a network element and performs 'login' from NETSMART GUI, ACT-USER TL1 command is sent by NETSMART to log into the network element. Autodiscovery process is triggered, once successful login and some basic initialization is achieved. Autodiscovery process can be divided into three major phases as described below:

- 1. Retrieving configuration information from the NE being autodiscovered - During this phase all configuration information is retrieved from network element by sending appropriate TL1 commands for retrieval (e.g. RTRV-EQPT etc.). Communication Server provides interfaces to the application server for these TL1 commands. As a result of invocation of these interfaces on COMMS, Application Server gets collection of dataobjects. COMMS returns one dataobject for each aid fetched from the network element. These dataobjects are created by COMMS after parsing the TL1 responses. Each KEYWORD-DOMAIN pair in TL1 response is translated to a Attribute-Value pair. Each dataobject contains collection of such Attribute-Value pairs. In addition to collection of Attribute-Value pairs, dataobject also contains aid and ComponentID⁵. During this phase information about all entities (i.e. equipment, facilities, EPGs etc) is retrieved from network element. This information retrieval is driven by DataCache. Their are subclasses of DataCache for

⁴ DataObject is a java class in NETSMART.

⁵ ComponentID is internal to NETSMART and can be treated as a unique identifier for a dataobject for a given TID. AddressTranslator in COMMS translates the aid in TL1 response to corresponding ComponentID by following some predefined rules.

each NE type supported by NETSMART. For example, there is FACTRDataCache which drives this information retrieval for FACTR NEs during Autodiscovery. It is responsibility of the meta model person who is modelling a new NE type to imple-ment a subclass of DataCache for that NE type. From the dataobjects received from COMMS, the DataCache build a hashmap of these dataobjects with CompinentID being the key. DataCache also supports interface to obtain a dataobject based on its ComponentID, which is used by Autodiscovery in second phase.

2. Traversing the meta model relationship tree and creating application objects 2 - Once the DataCache has retrieved all the information and built a hashmap of dataobjects, Autodiscovery traverses the meta model relationship tree and creates application objects. These application objects are passed to Configuration Manager, which holds and manages them. The traversal starts from the root node and for every node following steps are taken to create application objects:

- If the meta object is marked as auto_create (i.e. auto_create column in meta_instance is set to 'auto_create' for the meta object) then a default application 3 object is created for that meta object.
- If the meta object is marked as normal (i.e. auto_create column in meta_instance is set to 'normal' for the meta object) then ComponentID for that meta object is obtained. If there is a dataobject for this ComponentID in the DataCache then an application object is created for the meta object using
 1. ComponentID is internal to NETSMART and can be treated as a unique identifier for a dataobject for a given TID. AddressTranslator in COMMS translates the aid in TL1 response to corresponding COmponen-tID by following some predefined rules.
 2. Application objects are held by Configuration Manager. Each application object hold reference to corre-sponding meta object and data object.
 3. In default creation a dummy data object is created in order. the dataobject otherwise no application object is created corresponding to the meta object.
- If the meta object is marked default_create (i.e. auto_create column in meta_instance is set to 'default_create' for the meta object) then ComponentID for that meta object is obtained. If there is a dataobject for this ComponentID in the DataCache then an application object is created for the meta object using the dataobject otherwise a default application

object is created.

- 5 3. Configuration Manager builds a containment tree of application objects created by Autodiscovery. The containment relations in this tree of application objects (also called as dynamic tree or dynamic view of the NE) are same as modelled in meta model. When autodiscovery passes an application object to configuration manager, it also passes reference of parent application object.

Collapsed Meta Objects

10 Collapsed Meta Objects are specialized Meta Objects which represent multiple objects of the same type. The behavior of a collapsed MetaObject similar to a standard MetaObject with one major difference. A standard MetaObject has a fully qualified ComponentID, invoking **getCID()** will return a complete ComponentID (e.g shelf=NBS-1:slot=CH-1:port=3). However, a collapsed MetaObject can not return a fully qualified ComponentID because it represents multiple objects. For those RelativeComponentIDs that cannot be resolved, a wildcard value (*), is returned (e.g. group=1:sts=1:vtg=*:vt=*, group=4:sts=1:vpi=0:vci=*).

15 However, any ComponentID will always resolve to a MetaObject. For example, ComponentID group=1:sts=1:vtg=2:vt=4 will resolve to the MetaObject with ComponentID group=1:sts=1:vtg=*:vt=*. Note that ComponentID group=1:sts=1:vtg=3:vt=2 would also resolve to the same MetaObject.

20 To determine if a MetaObject is a collapsed object, a new interface has been provided on MetaObject: **isCollapsedObject()**.

25 A collapsed MetaObject can be designated as “expandable”. Unlike the previous version of the MetaModel, expansion in this case does not mean replicating the MetaObject ntimes. Instead, the collapsed MetaObject will fully expand all possible ComponentIDs and that list of expanded CIDs can be retrieved via a new MetaObject interface **getAllInstances()**. For collapsed MetaObjects not designated as “expandable”, an attempt to retrieve all possible ComponentIDs will return an empty list. To determine if a collapsed MetaObject is expandable an application can invoke the MetaObject interface: **isExpandedObject()**.

30 Summary of the interfaces changed or added on MetaObject.java to support collapsed objects:

- **ComponentID getCID()**

In the case of a normal MetaObject **getCID()** will return the fully resolved ComponentID. If it is a col-lapsed MetaObject, whether that MetaObject is expandable or

not, the ComponentID returned will not be fully resolved. Wild card values will appear for those RelativeComponentIDs that could not be resolved.

- **boolean isCollapsedObject()**

Return true if the MetaObject is a collapsed object; false otherwise.

5 • **boolean isExpandedObject()**

Returns true if the MetaObject is a collapsed object and its ComponentID can be fully expanded to all possible ComponentIDs.

- **Vector getAllInstances()**

10 If the MetaObject is a collapsed object and it can be expanded, then a list containing the fully expanded list of ComponentIDs is returned. Otherwise an empty list is returned. In most cases applications will not care about whether the MetaObject is collapsed or not since all other interfaces remain unchanged. Applications that are most likely to be affected are those that create and main-tain the NE configuration (e.g. autodiscovery, configuration or provisioning changes).

15 **Figure 34** shows architecture components for an embodiment of the disclosed innovations. Oracle databases are used for persistent storage, accessed via SQL (Structured Query Language). Lower applications interface to the databases through FDBC (Fujitsu DataBase Connectivity) and use FORA (Fujitsu Object Relational Adaptor) for mapping objects to the database.

20 The network manager applications include topology (used to manage groups, NEs, and links), a software repository, a fault manager that manages fault for the network, raw TL1 and TL1 batch that provide raw TL1 interfaces and batch capability, and software download and remote backup manager.

25 The element manager applications include a meta model that describes an NE for a given release, autodiscovery that identifies and discovers NEs, configuration manager for the NEs, crossconnect manager that manages the NE crossconnects, a fault manager, and software download and remote backup manager for the NEs.

30 The framework components include event service, query and client persistency which provides object query service and column query service to the client, transaction and concurrency which provides transaction services, security, thread which provides threading policy and CORBA request dispatching, connection (Life Cycle Service) which provides services for server activation, log and trace, directory naming service (used to locate server object), and cluster agent framework which provides HA services and process management.

35 The communication subsystem includes a session manager that manages the TL1 sessions to NEs, a session which provide TL1 sessions to NEs and performs CORBA IDL to TL1

command/response and autonomous message mediation, a raw session, an address manager that provides TID to network address mapping (source can be TARP or NETSMART database), and an OSI.

Process Architecture

5 **Figure 35** shows an overview of the process architecture for NETSMART. NETSMART process architecture is divided into CORBA services, Framework, Process Activation and Monitoring, Application, and Communications.

10 The CORBA services include Naming Service (provides name resolution service for NETSMART CORBA objects), Event Service (provides COS event channels for autonomous communication in NETSMART), and orbixd (orbix demon provides CORBA client/server connection management for the object request broker).

15 The Framework core includes Framework and Security. Framework consists of a LogManager (provides high speed logging service to NETSMART application components), Broker (provides CORBA object location and activation services to application components), Client Persistency (provides remote persistency services to GUI client) and Client Query (provides remote Query service to GUI Clients). Security consists of a User Manager (provides management of NETSMART users), Access Control Manager (provides management of user security profiles to control access to NETSMART functionality), and User Session Manager (manages all active NETSMART sessions).

20 Process Activation and Monitoring consists of the fenicsd and daemon monitor. NETSMART daemon processes monitor the health of all NETSMART processes, and identify process failure and restart them. The fenicsd and daemon monitor also monitor each other and relaunch of one of them dies.

25 Optional application services include UPS manager (listens to trap notifications from the UPS for power down events, and manages the shutdown of NETSMART under power failure conditions), emlnml server (provides an interface to NETSMART for NML systems), and performance management (collects performance data from the NES and persists them into Oracle database for later analysis).

30 Core application services include the topology server (provides interfaces to manage NEs, groups, and links; provides services to establish raw TL1 sessions to the NEs, and provides integrated network level fault query, management, and count service), the application server (various components of which perform the following: model the physical NE; manage NE configuration in databases; maintain the metadata for each type of NE managed by NETSMART; use static metamodel definition to instantiate NE specific objects
35 by fetching information from the physical NE; identify discrepancies and reconcile the differences between the physical NE and the NETSMART view of the NE; manage

crossconnects in database and the physical NE; and store the NEs faults in databases), and the software manager server (which provides services to manage software generics, provides NE level services to download and activate software generic, and back-up/restore of NE database; these interfaces are provided at the network level).

5 Core communication services include the communication server (provides command/response/event and raw TL1 sessions to the NEs, and provides IDL to TL1 and vice-versa mediation), the session manager (manages communication sessions to NEs and provides a lookup service from TID to NSAP/IP). Communication may be provided via
10 TARP (Target Address Resolution Protocol), FTAM (File Transfer and Access Management), and OSI standards.

15 **Figure 36** shows a hardware architecture for an embodiment of the presently disclosed innovations. The Enterprise-5500/6500 configuration shows one example of hardware implementation for the server. The server networks with individual NEs by a 100 base-T NE communication network, and with client machines via a client communication network, using OSI and IP LAN cards respectively. The server also has an uninterruptable power supply (UPS) and an L280 Autoloader backup system connected by a small computer system interface (SCSI). This figure shows the framework, applications, and communications blocks of the server. Oracle database using redundant array of inexpensive disks (RAID) serves as persistent backup.

20 **Figure 37** depicts the server architecture for a given NETSMART application component. An application component (for example, topology server, communication server, etc.) interfaces with the Oracle database through FDBC and uses FORA for mapping objects to the database. FDBC uses JNI (Java Native Interface) to call OCI (Oracle Call Interface) functions. OCI functions are written in C and allow database manipulation and
25 management.

 The thread filters define the threading semantics for a given application. Thread filters are used to deliver CORBA requests to CORBA objects.

30 The utilities are available for various tasks. They include asyncworker (the worker thread pattern that executes user commands entered through the GUI), object pool (a pattern for optimal performance containing a pool of objects which can be reused), inventory (lists of related objects), licensing service (restricts usage of installation based on the NETSMART licensing purchased by the user), task management (pattern for multi-thread programming), and collection (extension and Java collection, generates collection objects to transmit over CORBA).

35 The helpers include DNSHelper (Directory Naming Service, used to look up CORBA objects in NETSMART), authenticator (provides authentication services when

users request restricted privileges), eventservice (asynchronous communication between various components in NETSMART), registry (lookup service for CORBA for objects in NETSMART), and log/trace (logging and tracing to NETSMART application components).

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

Definitions:

Following are short definitions of the usual meanings of some of the technical terms which are used in the present application. (However, those of ordinary skill will recognize whether the context requires a different meaning.) Additional definitions can be found in the standard technical dictionaries and journals.

- The NETSMART terminology may have meanings that are slightly different from standard telephony terms. The terms used are defined below.
- Access identifier (AID)**—AIDs are address information identifying a specific equipment slot or facility (traffic or overhead channel).
- 10 **Bidirectional line-switched ring (BLSR)**—A BLSR is a ring that provides working and protection fibers between nodes. If the working fiber between nodes is cut, traffic is automatically routed onto the protection fiber.
- Common Language Equipment Identifier (CLEI®)**—CLEI is a standard code used by suppliers to identify equipment parts and system configurations.
- 15 **Correlation tag (CTAG)**—CTAGs are required by TL1 and are used to correlate the input TL1 and response messages.
- Equipment protection group (EPG)**—The EPG is used to establish the working/protection relationship between two cards.
- Equipment**—Equipment consists of the NEs and related hardware within the telecommunications network.
- 20 **Facility**—The facility is the fiber or copper transmission media used between NEs to transport telecommunications signals.
- Fiber facility protection (FFP)**—FFP is used to establish a working/ protection relationship between two or more facilities.
- 25 **Fujitsu minimum support NE**—A Fujitsu NE that is not on the officially supported list but conforms to a basic set of TL1 commands will be managed as a minimally supported Fujitsu NE. Support consists of logging on, adding links, displaying as an icon on the topology map, and displaying alarms.
- Group**—Groups are logical associations of NEs to facilitate NE management. For example, NEs can be placed in a group based on location or type of NE.
- 30 **Tool Action/Function** Previous Select *Previous* to return to the previous displayed topic. Next Select *Next* to reverse direction and return to the topic where you first used Previous, one topic at a time. Print Displays the Print dialog and allows you to print the on-line help.

Link—A link is a communications channel or circuit that carries a telecommunications signal between two NEs.

5 **Logical link**—The line displayed on the Topology window that depicts one or more physical connections between NEs and/or groups of NEs is referred to as a logical link. The line only represents the actual network and can be removed without affecting the network. Logical link names can be edited to conform to the customer's particular naming convention.

10 **NE**—The term NE refers to hardware only or a combination hardware and software system that is primarily designed to directly perform a telecommunications service function. For example, an NE is the part of the network equipment where a transport entity (such as a line, path, or section) is terminated and monitored.

Path—A path at a given rate is a logical connection between the points at which a standard frame format for the signal at the given rate is assembled and disassembled.

15 **Physical link**—The line displayed on the Display Link window that depicts a physical connection between the ports of two different NEs is referred to as a physical link. The line only represents the actual network and can be removed without affecting the network. Physical link names, which are in the format <TID>:<port>::<TID>:<port>, are not editable.

20 **Port**—In transmission control/Internet protocol (TCP/IP) and user data protocol (UDP) networks, this is an end point to a logical connection. The port number identifies what type of port it is. For example, port 80 is used for HTTP traffic.

Synchronous Transport Signal Level 1 (STS-1)—The STS-1 signal is the basic logical building block of the SONET signal structure. It consists of lower-order signals, payload, and transport overhead for a combined signal rate of 51.84 Mb/s.

25 **Target identifier (TID)**—TIDs uniquely identify NEs. Fujitsu NEs require from 7 to 20 alphanumeric characters. NETSMART allows from 1 to 20 alphanumeric characters to address non-Fujitsu NEs.

30 **Time-slot assignment (TSA)**—TSA allows STS-1 level traffic to be added, dropped, or passed through a selected SONET NE. Time slots are assigned on a dedicated basis. Service (i.e., DS1s and/or DS3s) is mapped into these dedicated time slots in the high-speed multiplexed signal.

35 **Unidirectional path-switched ring (UPSR)**—A UPSR consists of a 2- fiber ring. The input signal is bridged in both directions to provide redundant bandwidth. If a fiber is cut or a disruption affects one direction, the signal is available from the other direction.

Virtual tributaries (VTs)—VTs are structures designed to transport and switch sub-STS-1

payloads. There are currently four VT sizes: VT1.5 (VT container for a DS1 in SONET), VT2, VT3, and VT6.

5 The preferred embodiment described above (Netsmart™) does not delimit the claimed inventions, but does provide a good indication of their advantages, and of the capabilities which can be included in a system implementing the claimed inventions. Netsmart™ combines features of both network management and element management layers of TMN model to provide comprehensive management capabilities. Netsmart™ can manage very large deployments (thousands of network elements, including both Fujitsu and non-Fujitsu elements) while supporting many active users. Netsmart™ provides a hierarchical view of the network from large scale configuration down to the shelf and card level, all with a GUI that displays the different scales. Several different views make it easier for managers to monitor and control what is going on in the system. Netsmart™ also provides graphical control over surveillance, provisioning, software download (SWDL), remote memory backup (RMBU), and remote memory restore (RMR). Netsmart™ also features a rich graphical user interface which allows user to perform operational tasks without entering data or TL1 Commands.

Modifications and Variations

20 As will be recognized by those skilled in the art, the innovative concepts described in the present application can be modified and varied over a tremendous range of applications, and accordingly the scope of patented subject matter is not limited by any of the specific exemplary teachings given.

25 Although the presently preferred embodiment has been implemented as an EMS which is designed to interface to an NMS, the disclosed innovations can be implemented with other choices as to the software hierarchy. For example, it is quite possible to combine an NMS with EMS functionality, and the dividing line between EMS and NMS is not a sharp divide. Similarly numerous other functions (such as fault, configuration, account, performance, and/or security management) can be combined if desired with the primary functions of element management functions, and the disclosed inventions can be applied to such expanded architectures in various ways.

30 The TMN standard describes an overall software architecture concept which interrelates the various components of telecommunications system management. In addition to element management and network management layers, layers are also reserved for business management and service management. Other functions can also be combined into this hierarchy. The disclosed innovations are not limited to a system which is solely an

Element Manager System, but can also be applied to other systems which include element management functionality, even though such systems may not be EMS systems strictly speaking.

- 5 None of the description in the present application should be read as implying that any particular element, step, or function is an essential element which must be included in the claim scope: THE SCOPE OF PATENTED SUBJECT MATTER IS DEFINED ONLY BY THE ALLOWED CLAIMS. Moreover, none of these claims are intended to invoke paragraph six of 35 USC section 112 unless the exact words "means for" are followed by a participle.

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

CLAIMS

What is claimed is:

1. A computer/software system for managing telecommunication network elements, comprising:
one or more operator-driven processes which monitor and manage network elements
in real time, using at least one telecommunications network control channel;
5 and
automatically initiated background processes which remotely backup information which
has been locally stored in ones of said network elements.
2. The system of Claim 1, wherein said backup routines launch automatically on a
programmed schedule.
3. The system of Claim 1, wherein said backup routines also can remotely restore
information which had been locally stored on ones of said network elements.

ABSTRACT

- 5 An element management system that can itself be used to perform automatic remote backup of the network elements. A backup procedure is launched on a programmed schedule, to maintain a centrally located copy of the local data stored in the network elements (or their subcomponents).

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

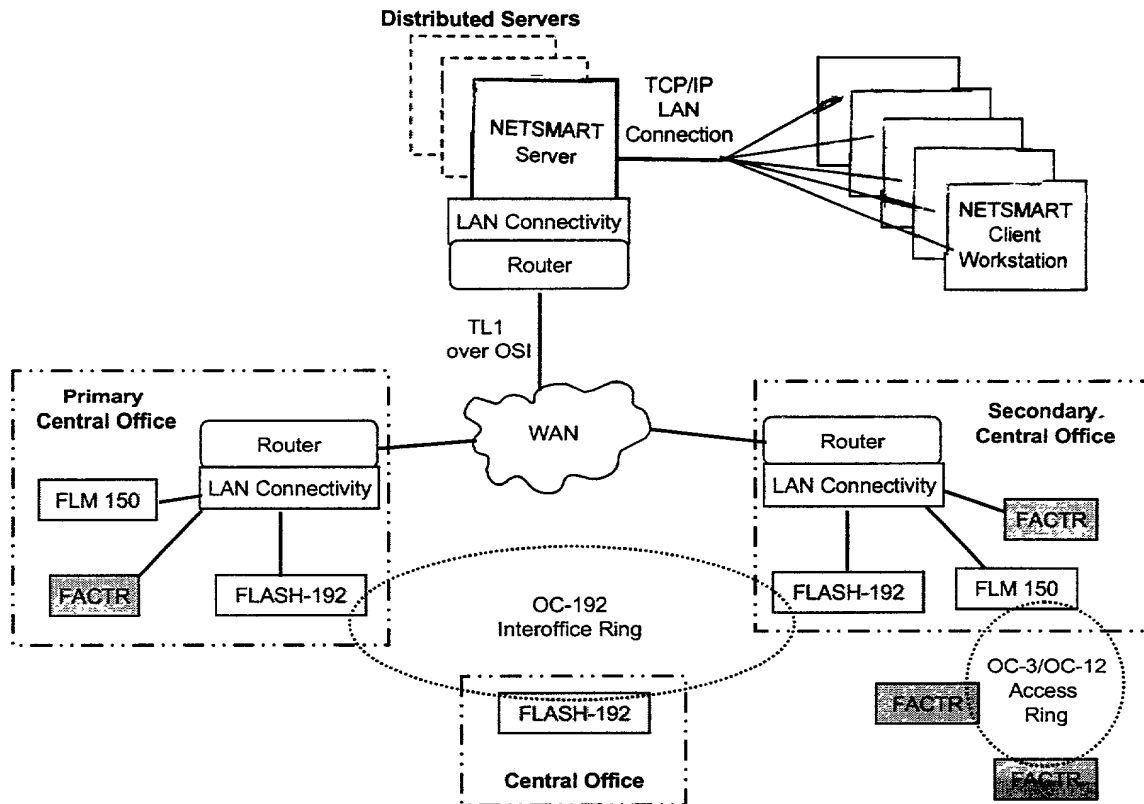


Figure 1

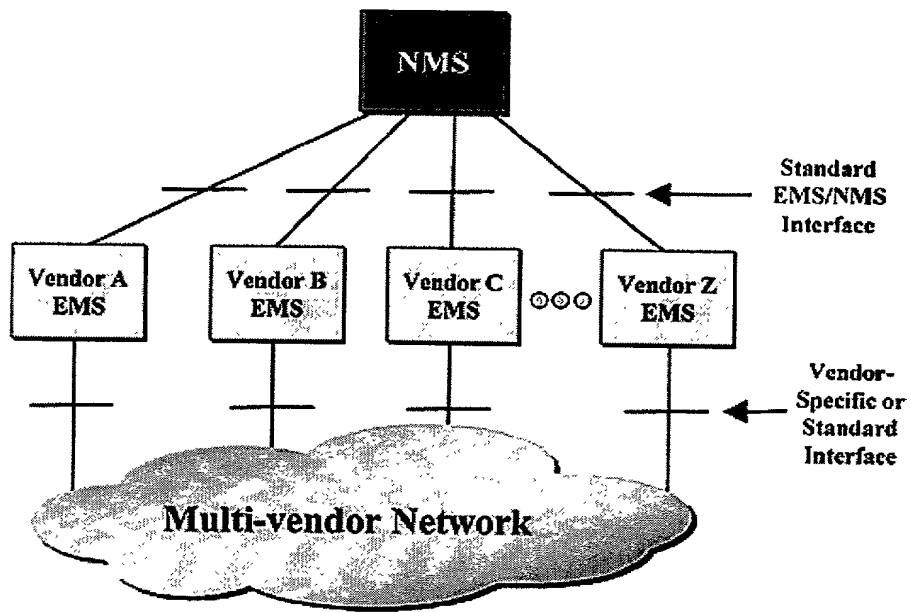


Figure 1A
Prior Art

BML- Manage the overall business,
e.g., achieving return on investment, market
share, employee satisfaction, community
and governmental goals.

SML- Manage the services offered to customers.
e.g., meeting customer service levels,
service quality, cost and
time-to-market objectives.

NML- Manage the network and systems that
deliver those services, e.g., capacity,
diversity, and congestion.

EML- Manage the elements comprising
the networks and systems.

NEL- Switches, transmission,
distribution systems, etc...

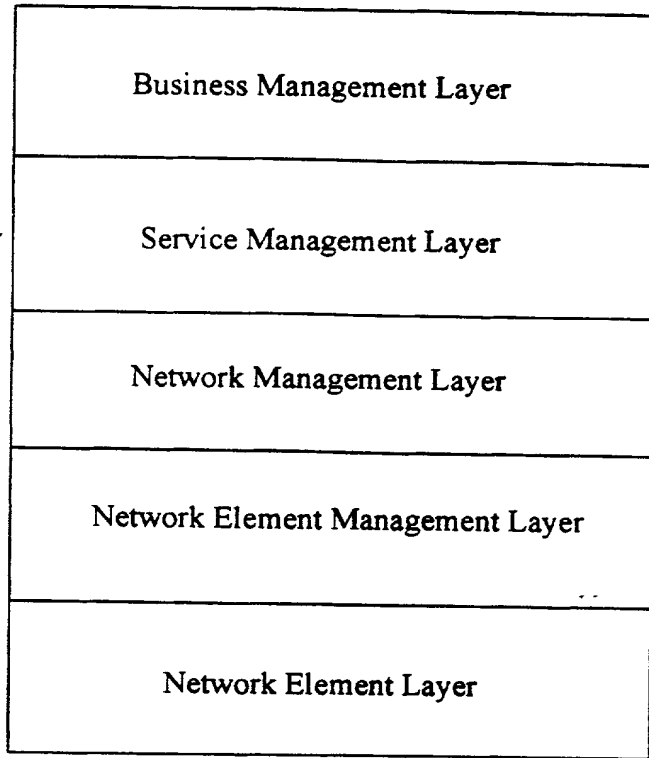


Figure 1B
Prior Art

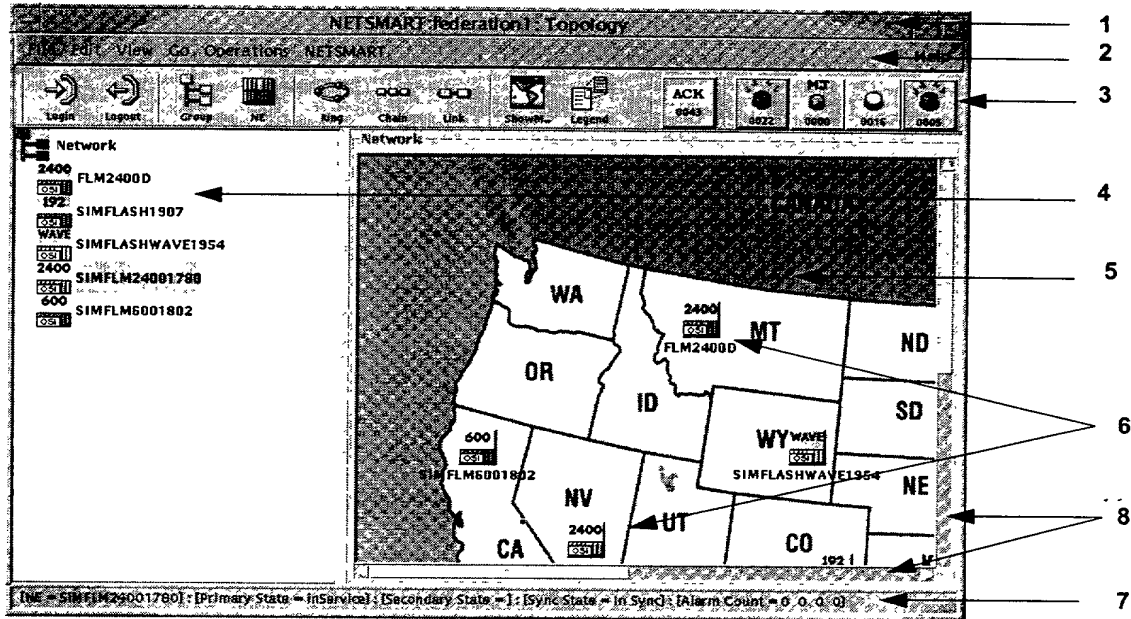


Figure 2

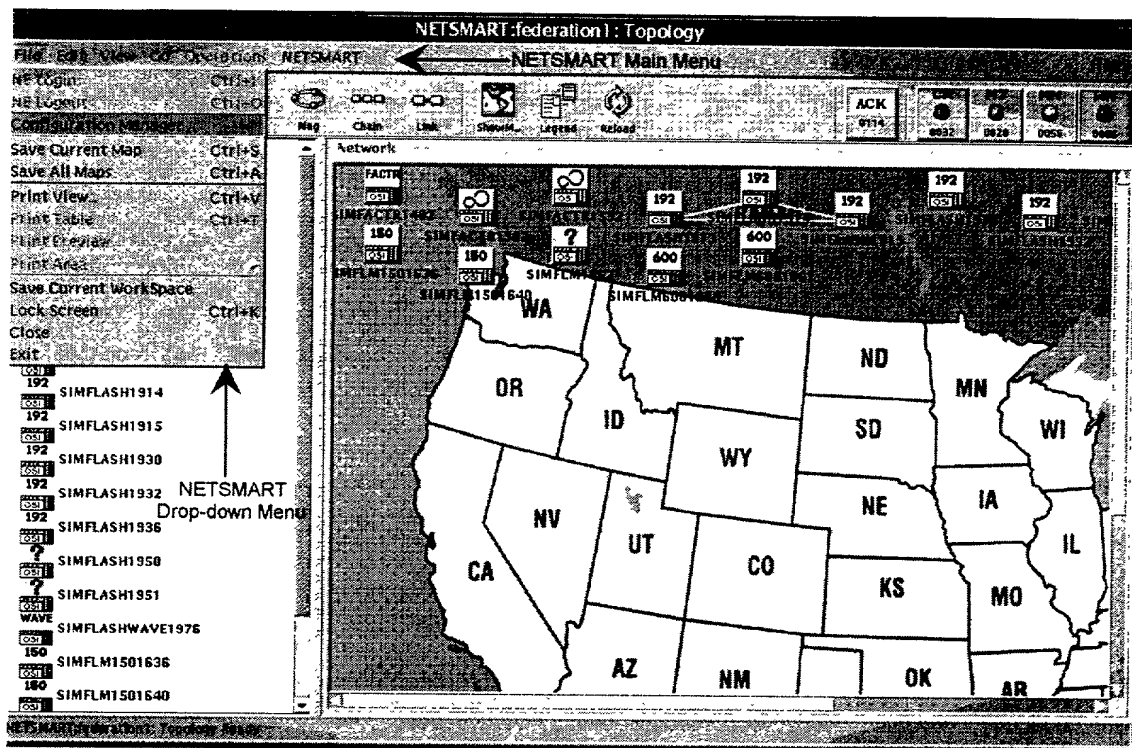


Figure 3

Filter			
Field	Test	Value	Logic
(none)	(none)	Text/Data Entry Field	AND
(none)	(none)		AND
Wavelength (nm)	(none)		AND
Frequency (THz)	(none)		AND
Transponder or TOG Part #	(none)		AND
AID	(none)		AND
Status	(none)		AND
OCN WLR (nm)	(none)		AND
OCN OPR (dBm)	(none)		AND
WCH OPT (dBm)	(none)		AND
WDM OPR (dBm)	(none)		AND
WDM OPT (dBm)	(none)		AND
(none)	(none)		AND
(none)	(none)		AND
(none)	(none)		AND

Drop-Down List

Ok Cancel Clear Help

Command Button

Figure 4

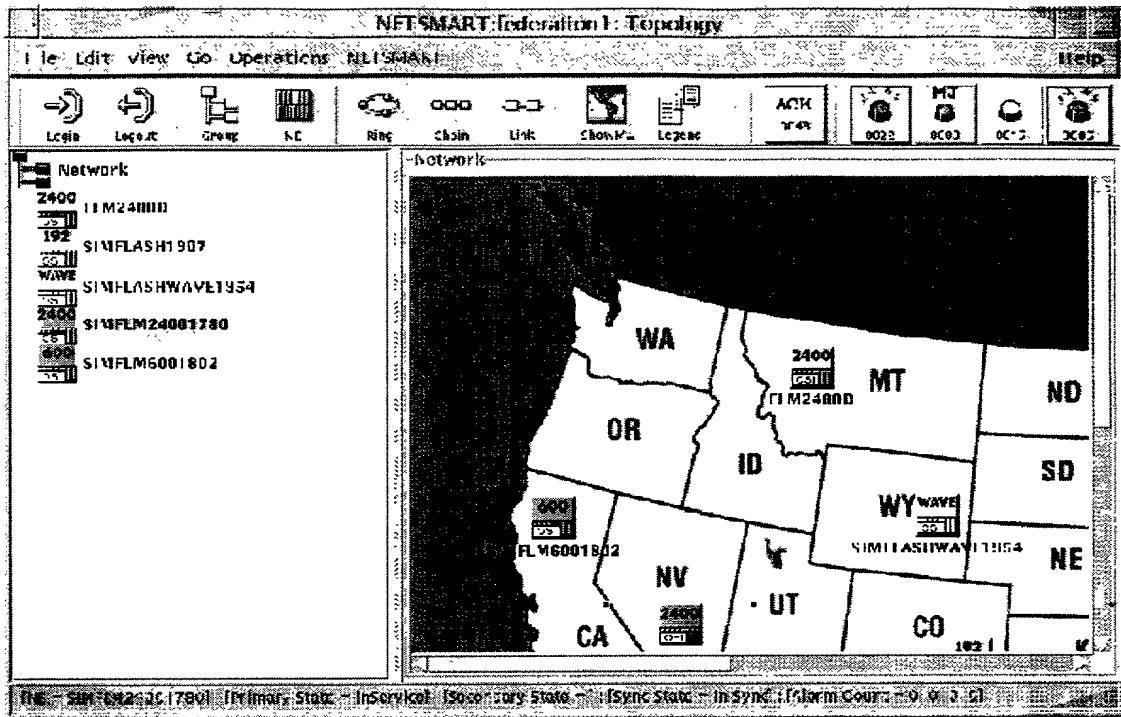


Figure 5

Search NE

Search NE Search

☐ Case sensitive Starts with ▼

NE List
FLM150-OSI1
FLM150-OSI3
FLM600-OSI1

Ok Cancel Help

Figure 6

Add Link

Group 1: West Search NE1: SIMFLASHWAVE1951 Search

Group 2: West Search NE2: SIMFLASHWAVE1957 Search

Linkable Termination Ports

SIMFLASHWAVE1951

OCN	OS1-OCN-1	Rx
OCN	OS1-OCN-11	Tx
OCN	OS1-OCN-14	Rx
OCN	OS1-OCN-15	Tx
OCN	OS1-OCN-16	Rx
OCN	OS1-OCN-2	Tx

SIMFLASHWAVE1957

Rx	OS1-OCN-1	OCN
Rx	OS1-OCN-11	OCN
Rx	OS1-OCN-14	OCN
Rx	OS1-OCN-15	OCN
Rx	OS1-OCN-16	OCN
Rx	OS1-OCN-2	OCN

Undo Clear All

OK Apply Cancel Help

Figure 7

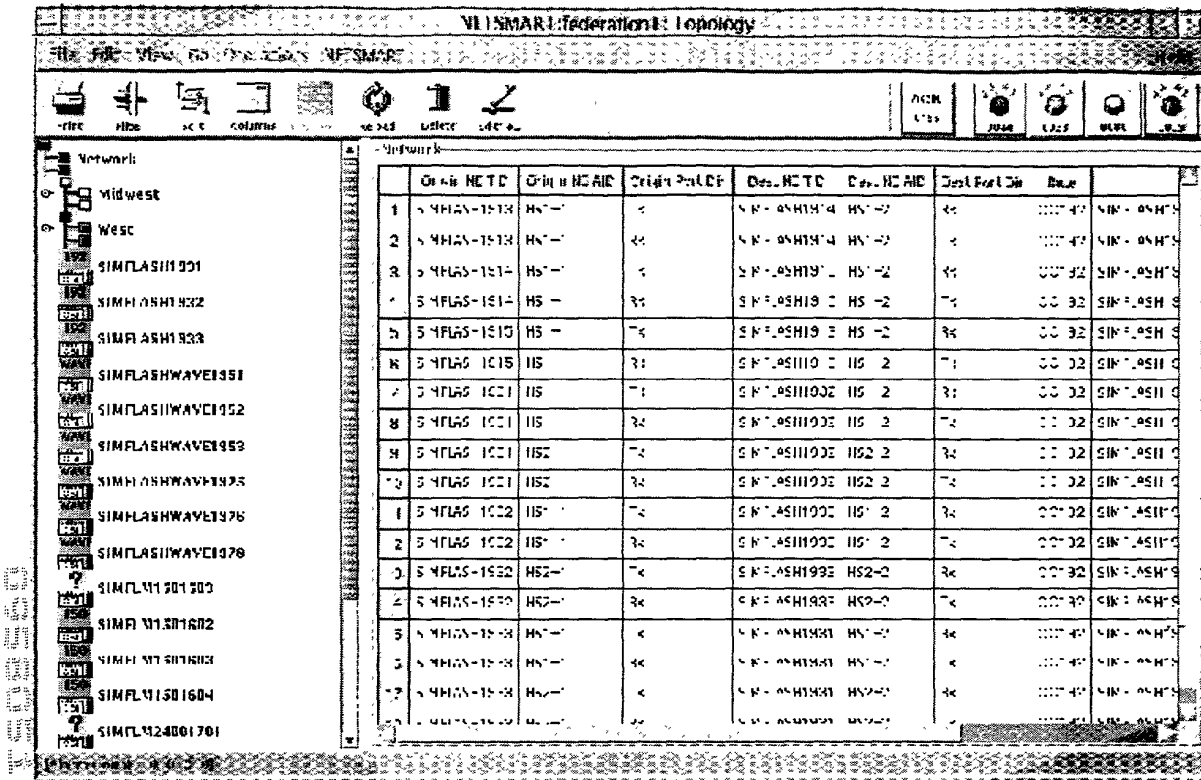


Figure 8

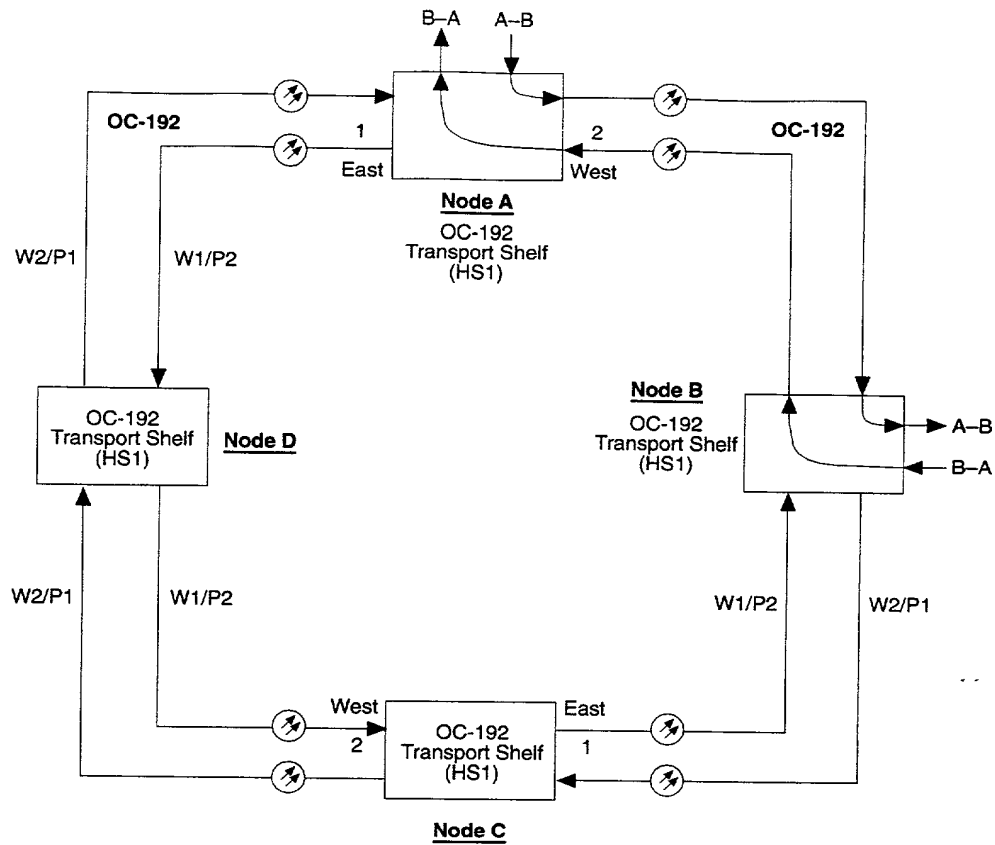


Figure 9

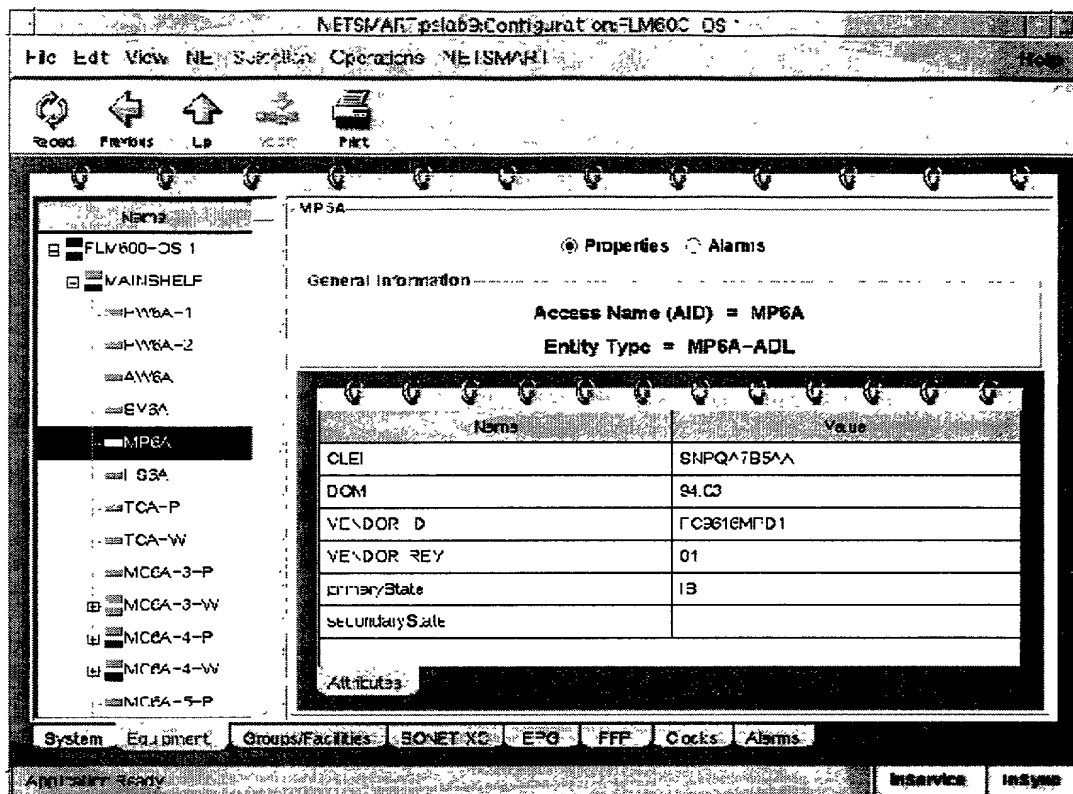


Figure 11

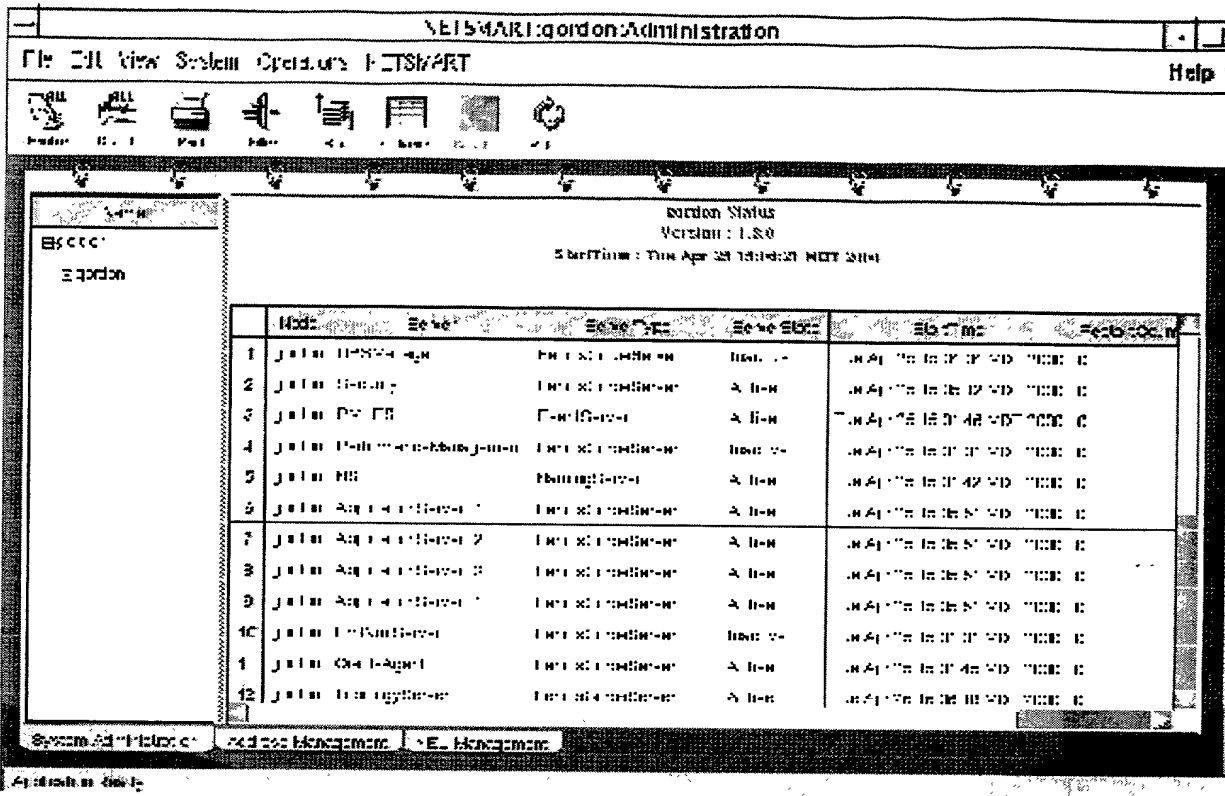


Figure 12

NITS/SMART Federation Management Administration			
File Edit View System Operations Help/DB/AN			
Address List - All			
	TID	PROTOCOL	C & G YGTD
1	SIHF-V-1011	CS	7/2
2	SIHF-V-1011	CS	7/2
3	SIHF-V-1011	CS	7/2
4	SIHF-V-1011	CS	7/2
5	SIHF-V-1011	CS	7/2
6	SIHF-V-1011	CS	7/2
7	SIHF-V-1011	CS	7/2
8	SIHF-V-1011	CS	7/2
9	SIHF-V-1011	CS	7/2
10	SIHF-V-1011	CS	7/2
11	SIHF-V-1011	CS	7/2
12	SIHF-V-1011	CS	7/2
13	SIHF-V-1011	CS	7/2
14	SIHF-V-1011	CS	7/2
15	SIHF-V-1011	CS	7/2

Figure 13

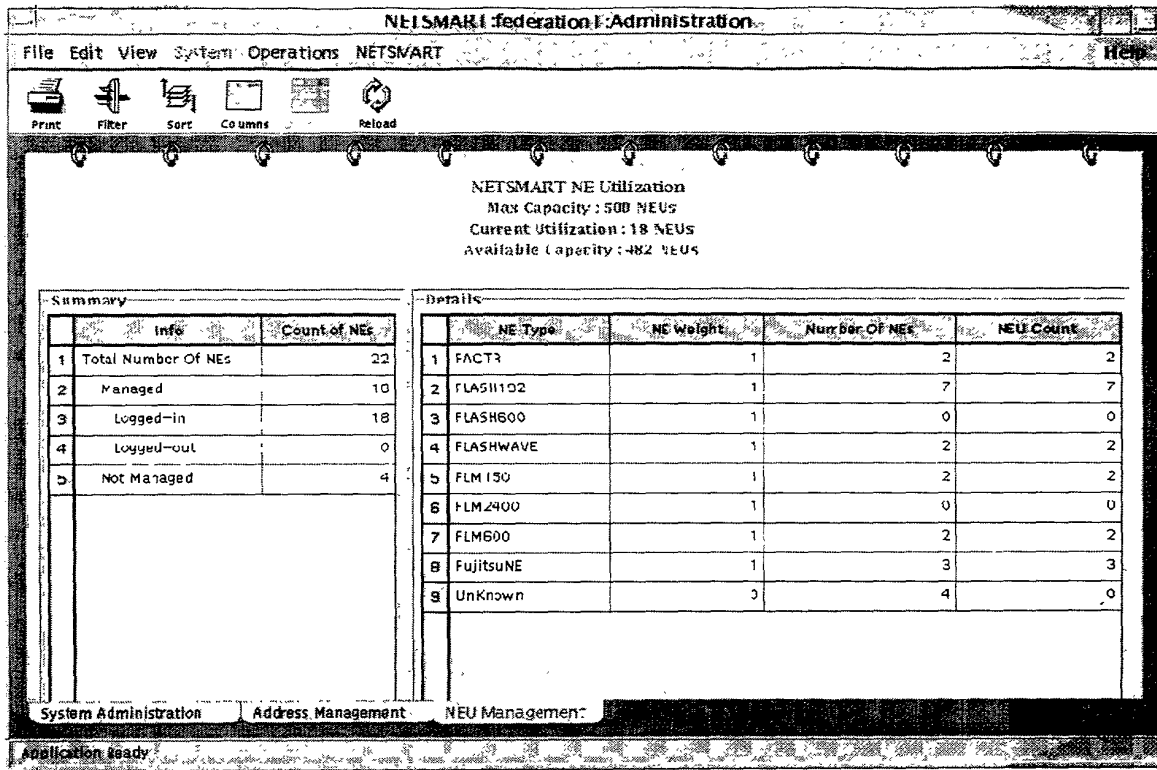


Figure 15

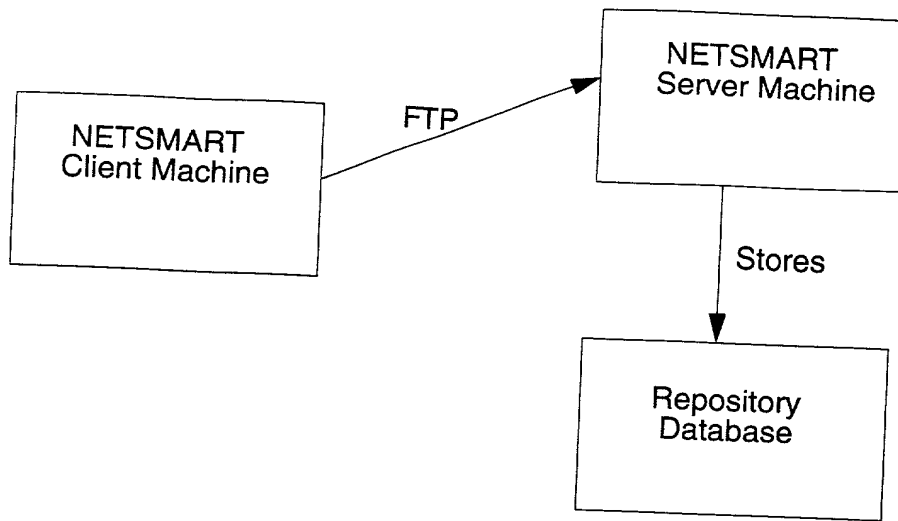


Figure 16

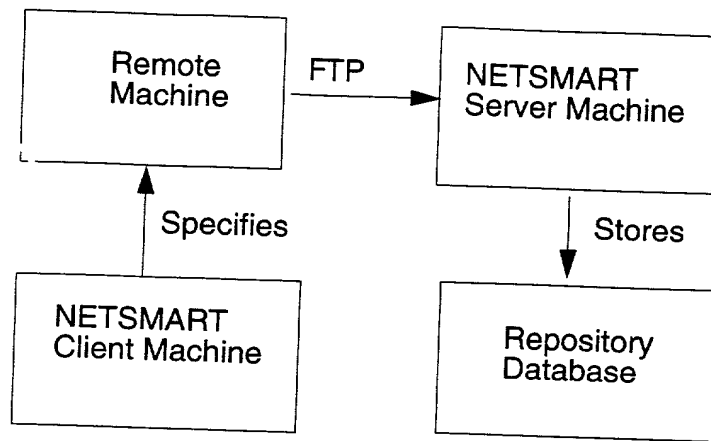


Figure 17

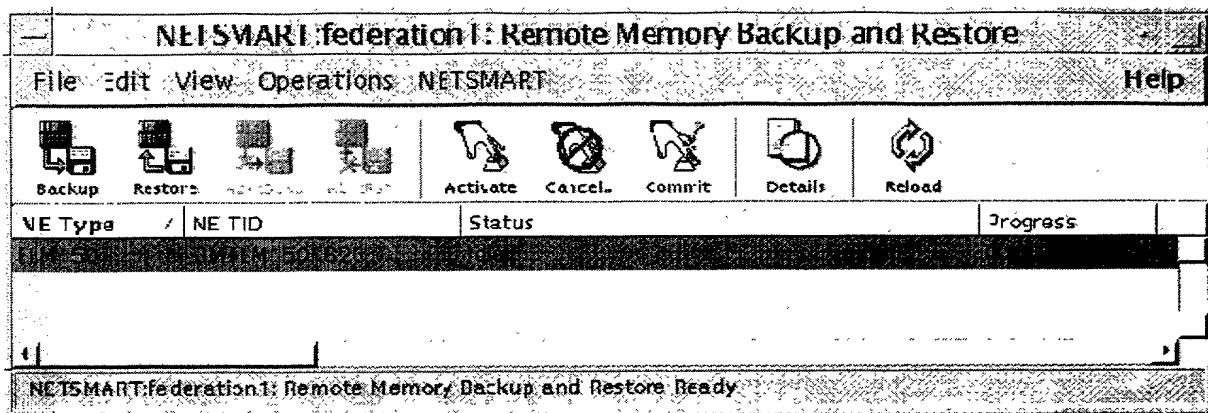


Figure 18

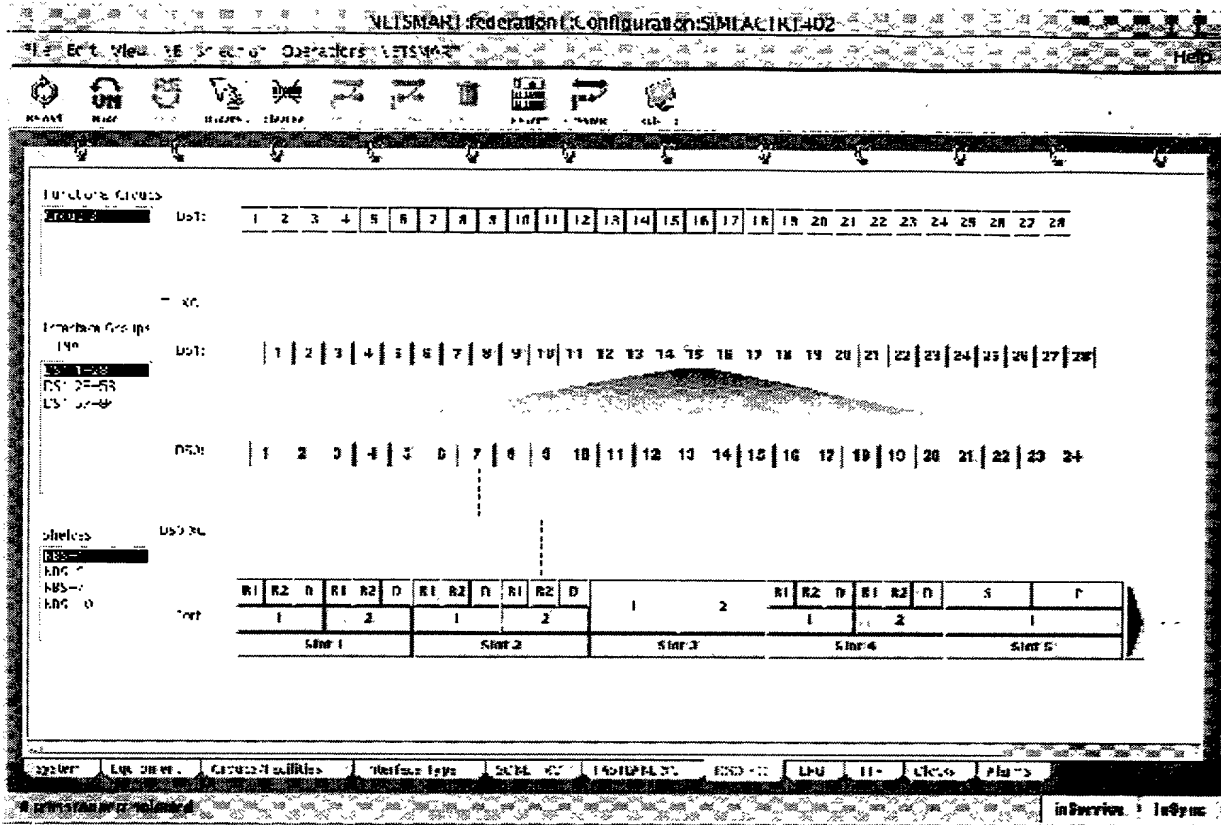


Figure 19

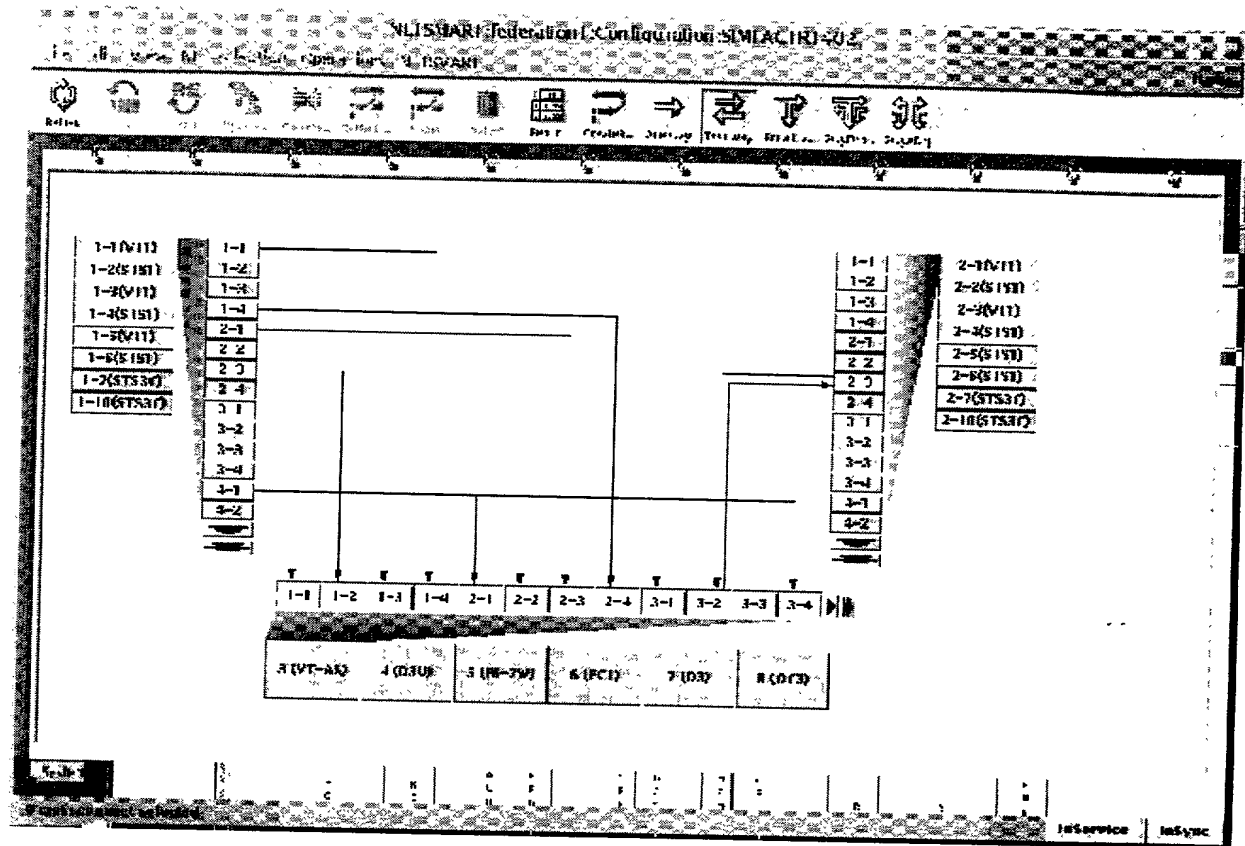


Figure 21

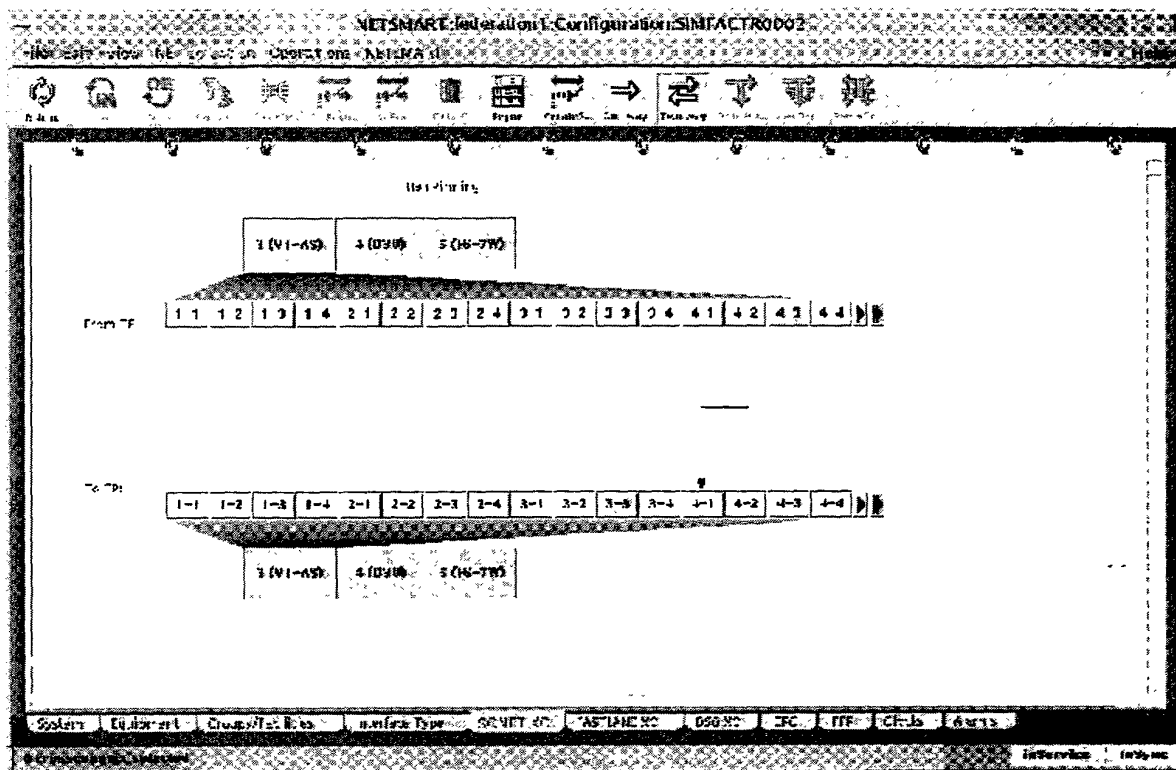


Figure 22

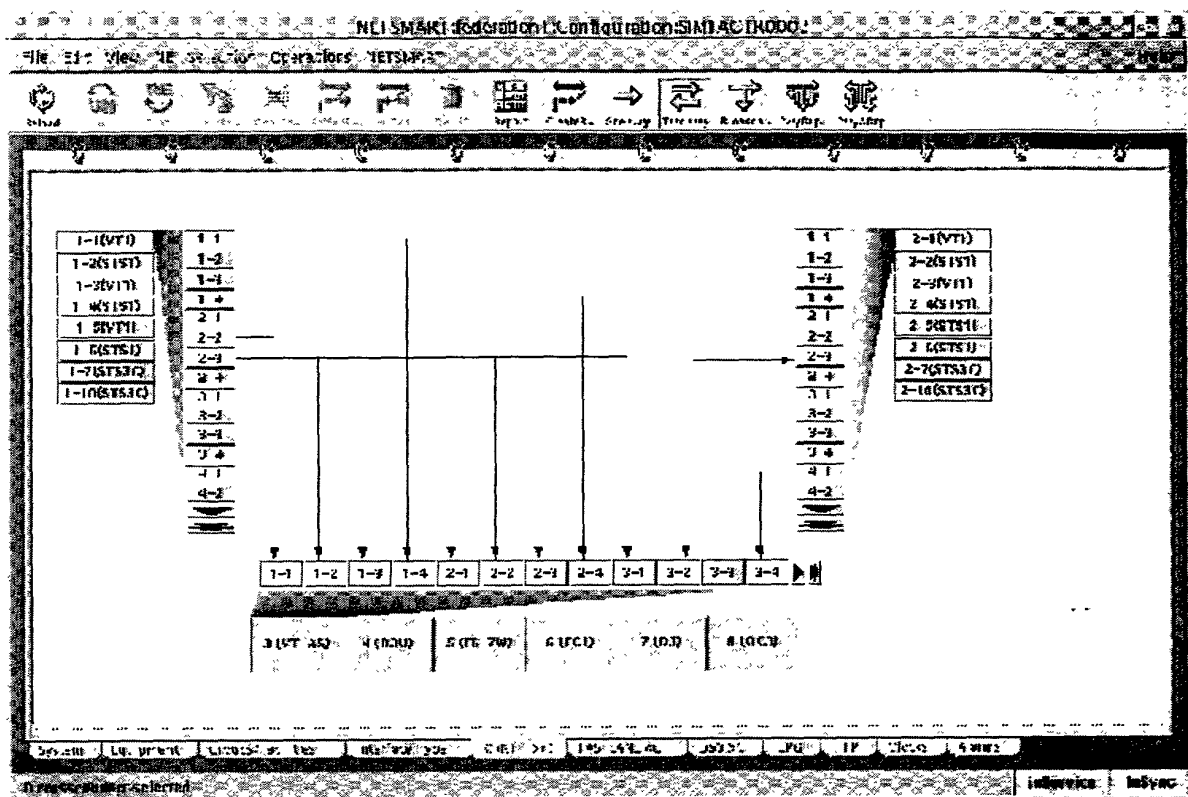


Figure 23







Crossconnect Report							
<div>       </div>							
	From	To	Rate	Redline	Bridge	Crossconnect Name	Crossconnect Type
1	2-3-2-4	1-3-2-4	VT1	No			1WAY
2	1-3-1-1	2-3-1-1	VT1	No			1WAY
3	1-3-1-3	2-3-1-3	VT1	No			1WAY
4	1 3 2 4	2 3 2 4	VT1	No			1WAY
5	2-3-1-1	1-3-1-1	VT1	No			1WAY
6	2-3-1-3	1-3-1-3	VT1	No			1WAY
7	1-2	2-2	STS1	No			1WAY
8	2-2	1-2	STS1	No			1WAY
<div>Close Help</div>							

Figure 24

Close

Delete

Reload

Rate: OCN Shelf: OS1

Existing Facilities	Non-existing Facilities
OS1-OCN-1	OS1-OCN-4
OS1-OCN-2	OS1-OCN-7
OS1-OCN-3	OS1-OCN-10
OS1-OCN-5	OS1-OCN-12
OS1-OCN-6	OS1-OCN-13
OS1-OCN-8	OS1-OCN-17
OS1-OCN-9	OS1-OCN-18
OS1-OCN-11	OS1-OCN-19
OS1-OCN-14	OS1-OCN-20
OS1-OCN-15	OS1-OCN-21
OS1-OCN-16	OS1-OCN-22

Access Name (AID) - OS1-OCN-1
Entity Type - OCN

Name	Value
OPTADJ	+0.0
RATE	10G
primaryState	IS-NR
secondaryState	

Attributes

Figure 26

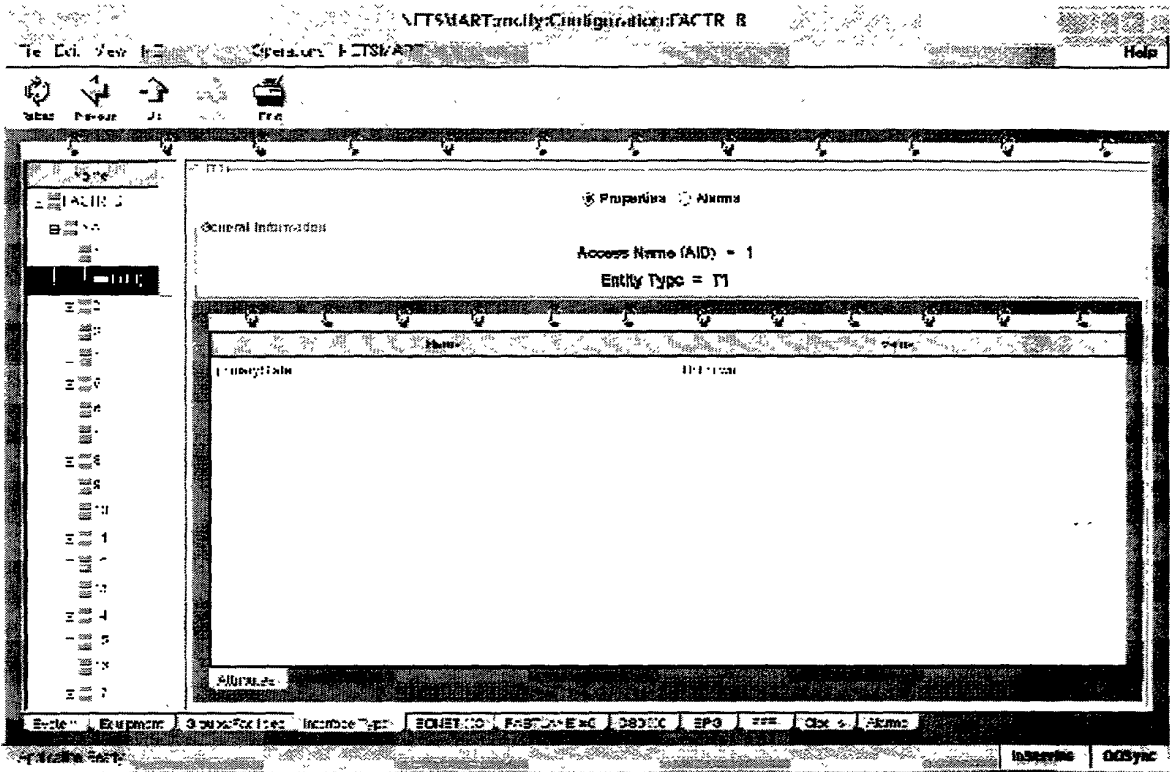


Figure 27

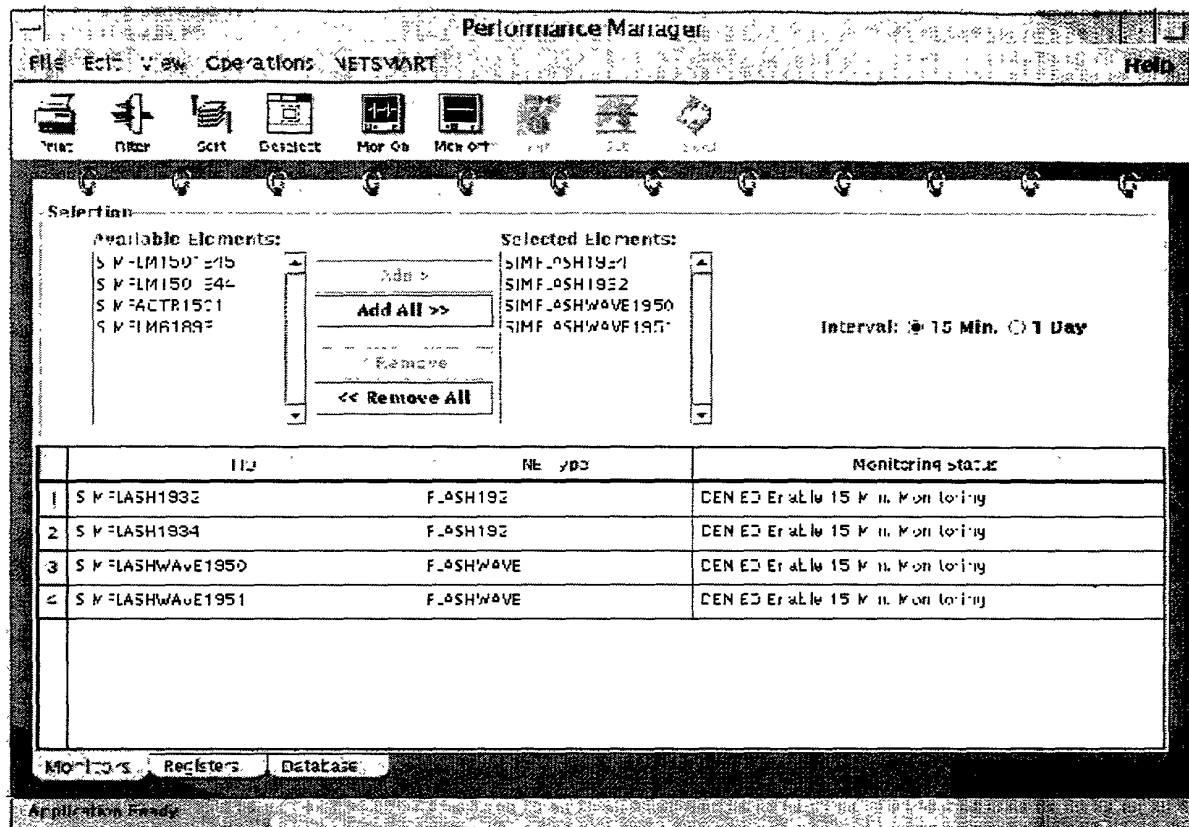


Figure 28

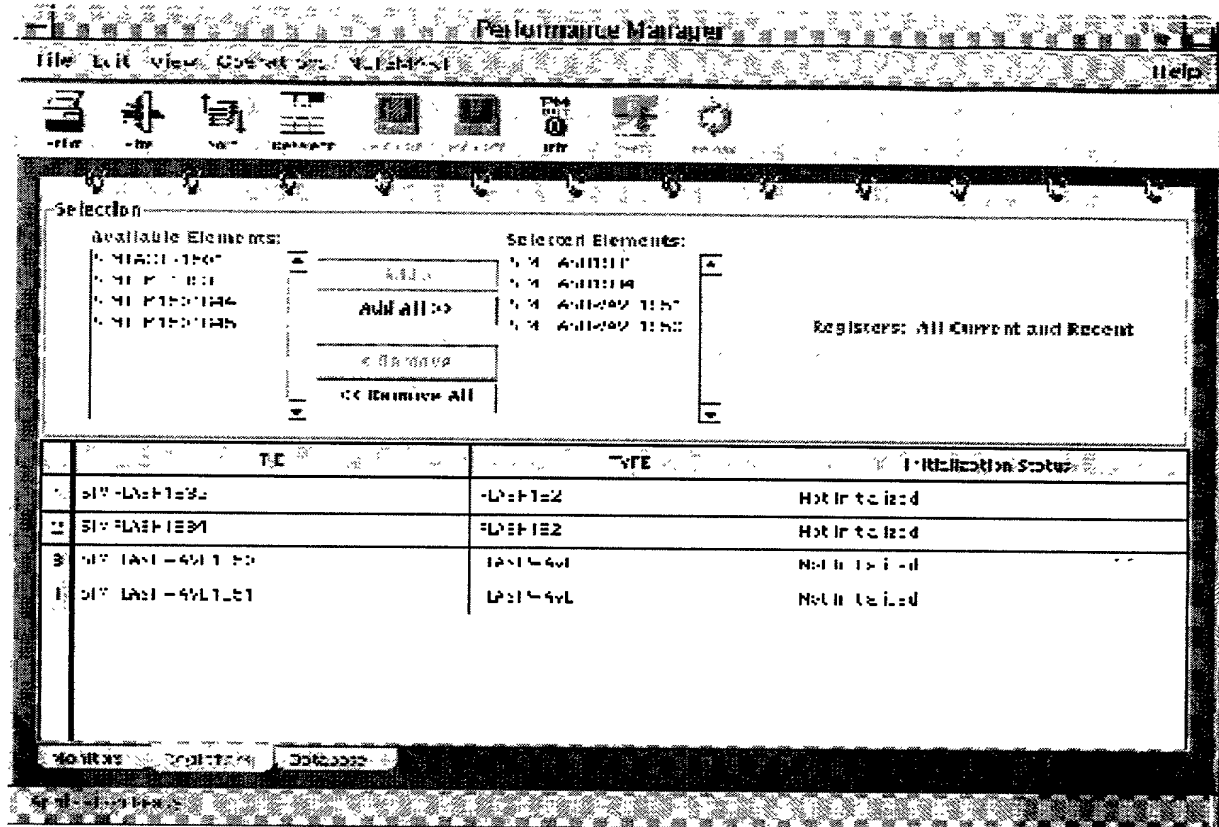


Figure 29

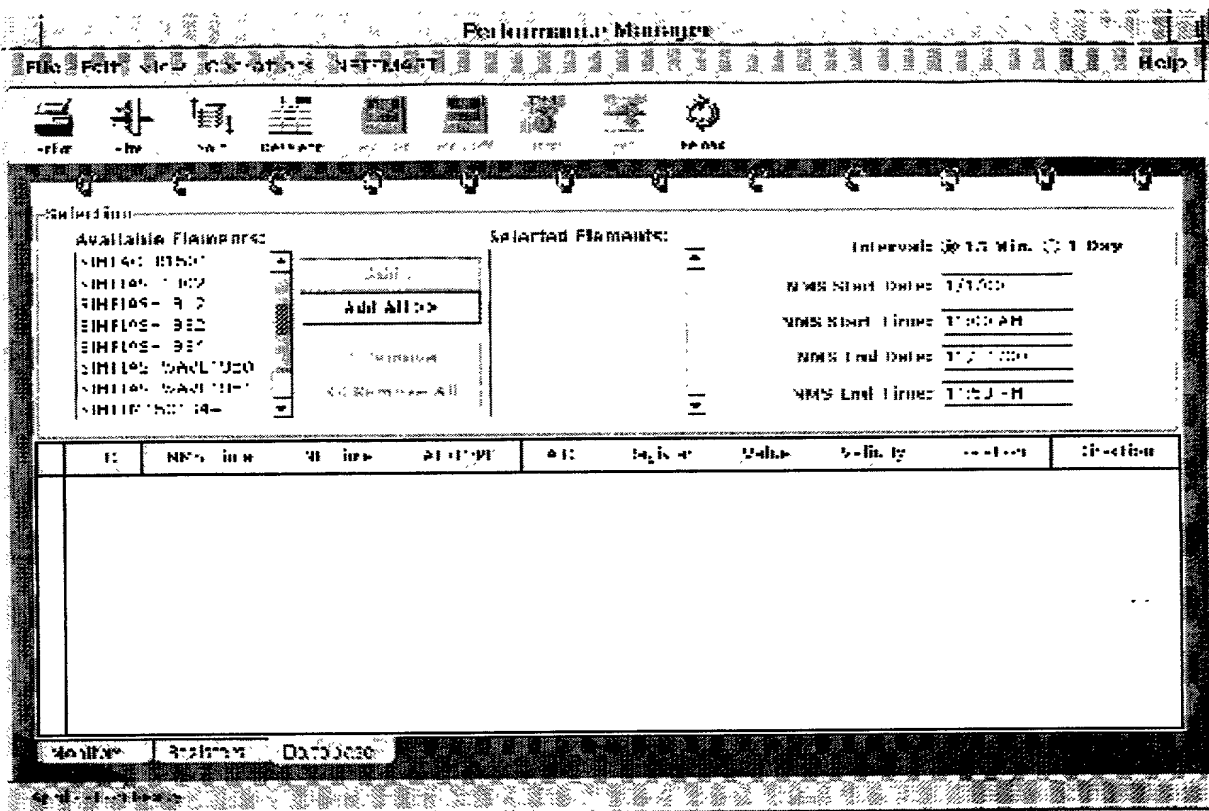


Figure 30

HS1-HT2H-2

Close
Print
Help
Sort
Display
View
Zoom
Find
Set
Refresh

Selection

Available Equipment:

Add
Add A
Remove
Remove All

Selected Equipment:

	NYS Time	NE Time	A DTYPE	AID	Register	Value	Range	Threshold
1	Fri Feb 11 14:58:35 EST 2000	Fri Feb 11 14:58:03 PST 2000	EQF	HS1-HT2H-2	IRCN	1.0	1.2-1.8	1.7
2	Fri Feb 11 14:58:35 EST 2000	Fri Feb 11 14:58:03 PST 2000	EQF	HS1-HT2H-2	IPTN	1.0	0.2-0.8	0.5

Monitors
Registers
Database

Figure 31

HSI 2 (OC192)

HSI-2 (OC192)

Selection

Available Facilities:

Selected Facilities:

Location: ☒ NEAD ☐ FEND ☐ NEND&FEND

Direction: ☒ Reverse ☐ NA

Interval: ☒ 15 Min. ☐ 1 Day

Start Index:

End Index:

NNS Time	NE Time	AIDTYPE	AID	Register	Value	Range	Threshold	Default Threshold	Validity	Location	Direction

View Data
Registers
Parameters

Figure 32






Crossconnect Report							
<div>      </div> <div> Print Filter Sort Columns Reload </div>							
	From	To	Rate	Redline	Bridge	Crossconnect Name	Crossconnect Type
1	2-3-2-4	1-3-2-4	VT1	No			1WAY
2	1-3-1-1	2-3-1-1	VT1	No			1WAY
3	1-3-1-3	2-3-1-3	VT1	No			1WAY
4	1-3-2-4	2-3-2-4	VT1	No			1WAY
5	2-3-1-1	1-3-1-1	VT1	No			1WAY
6	2-3-1-3	1-3-1-3	VT1	No			1WAY
7	1-2	2-2	STS1	No			1WAY
8	2-2	1-2	STS1	No			1WAY
<div>Close</div> <div>Help</div>							

Figure 33

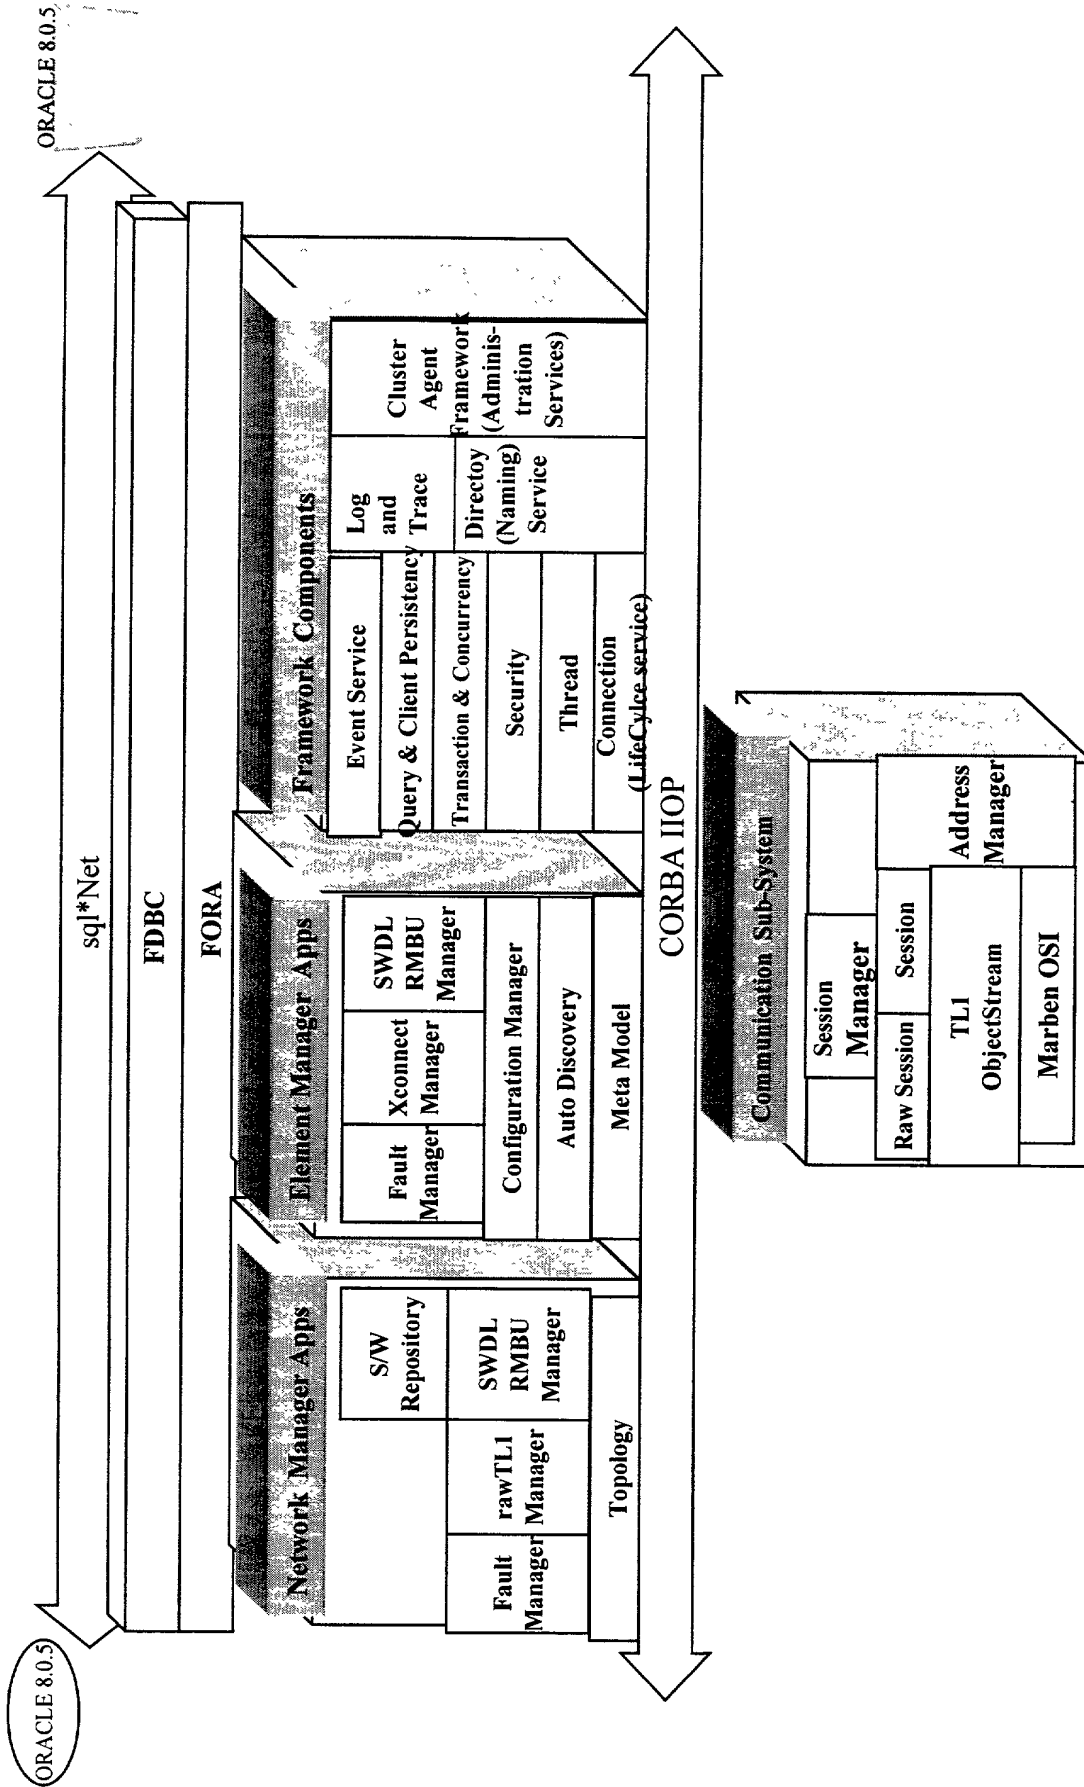


Figure 34

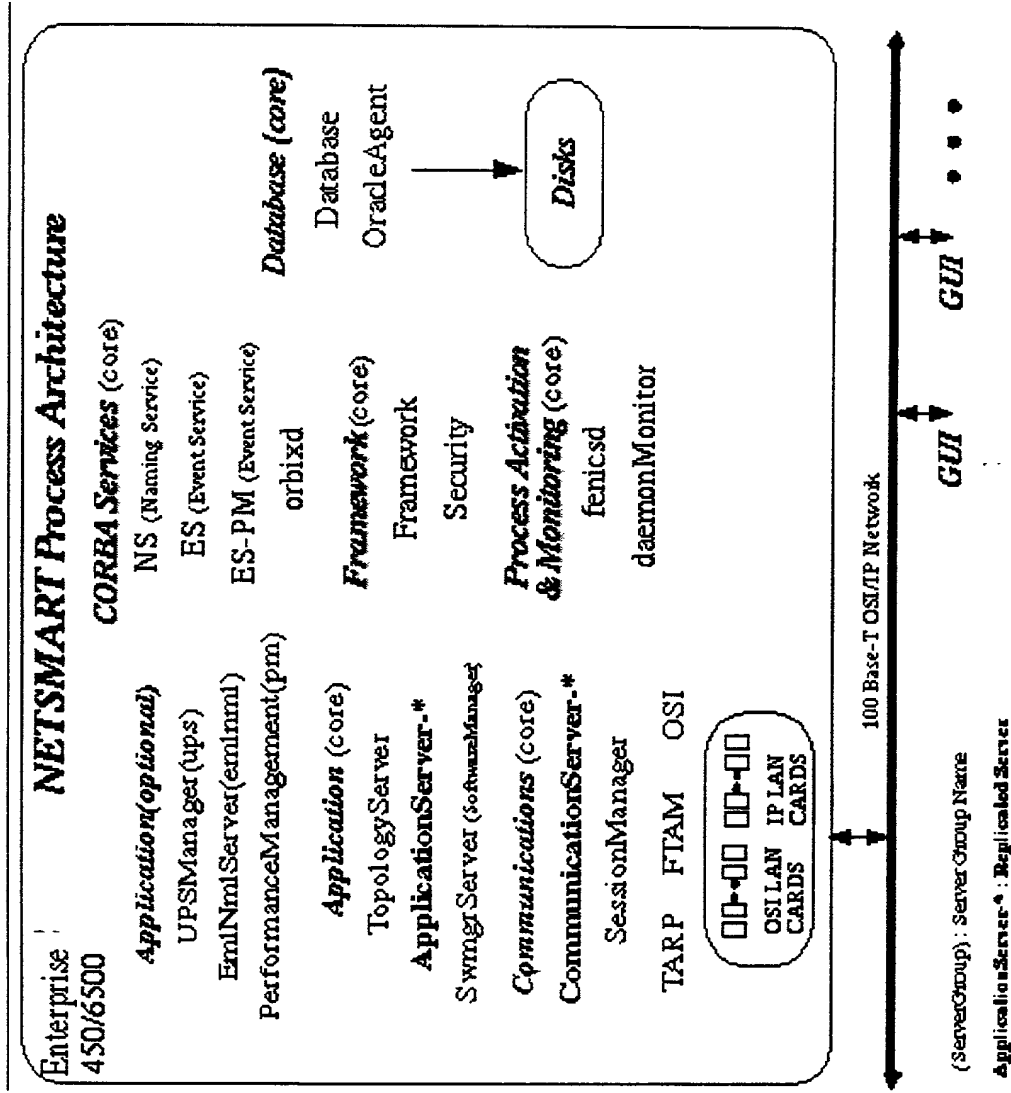


Figure 35

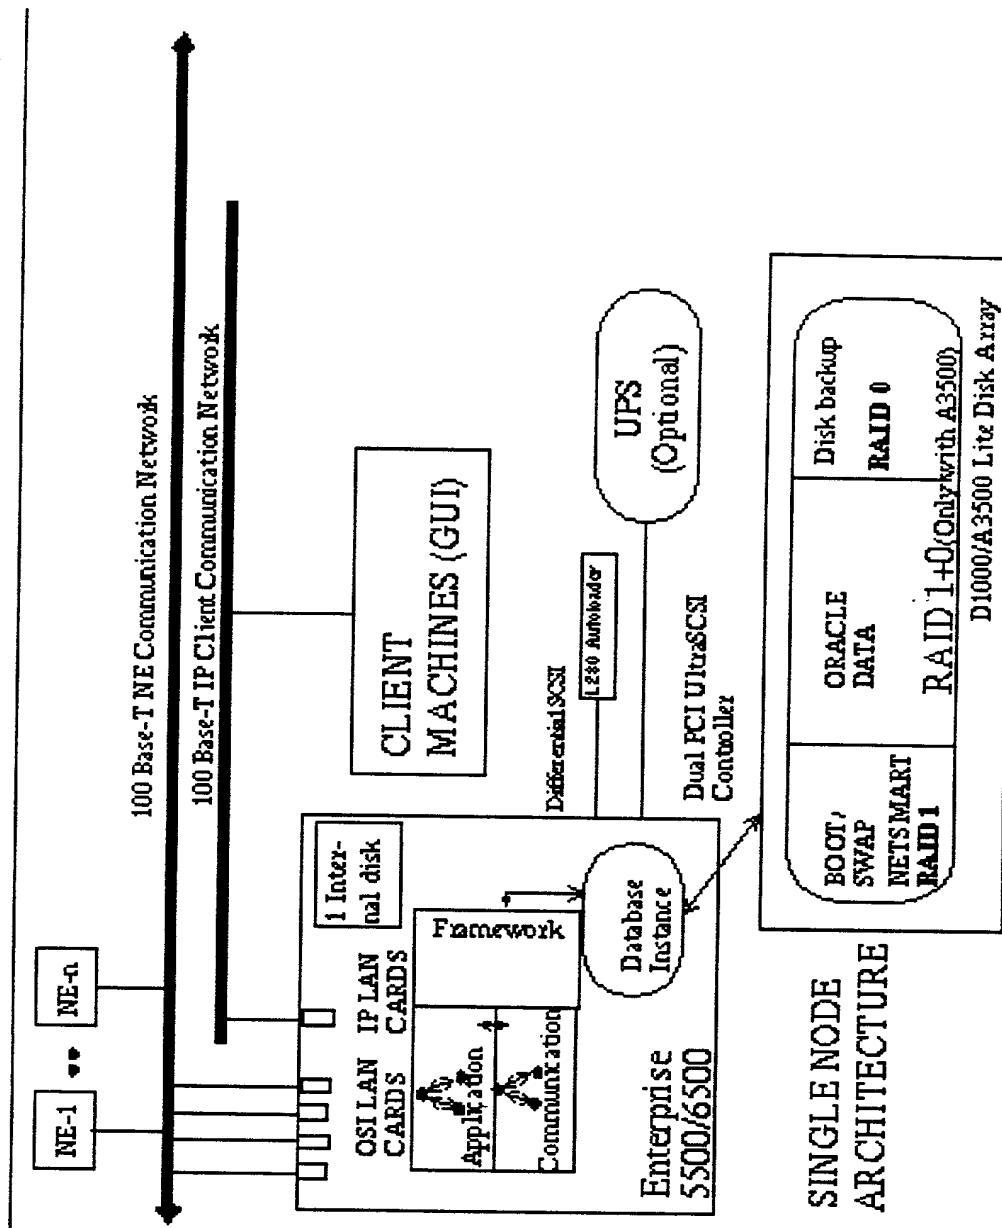


Figure 36

NETSMART Server Architecture

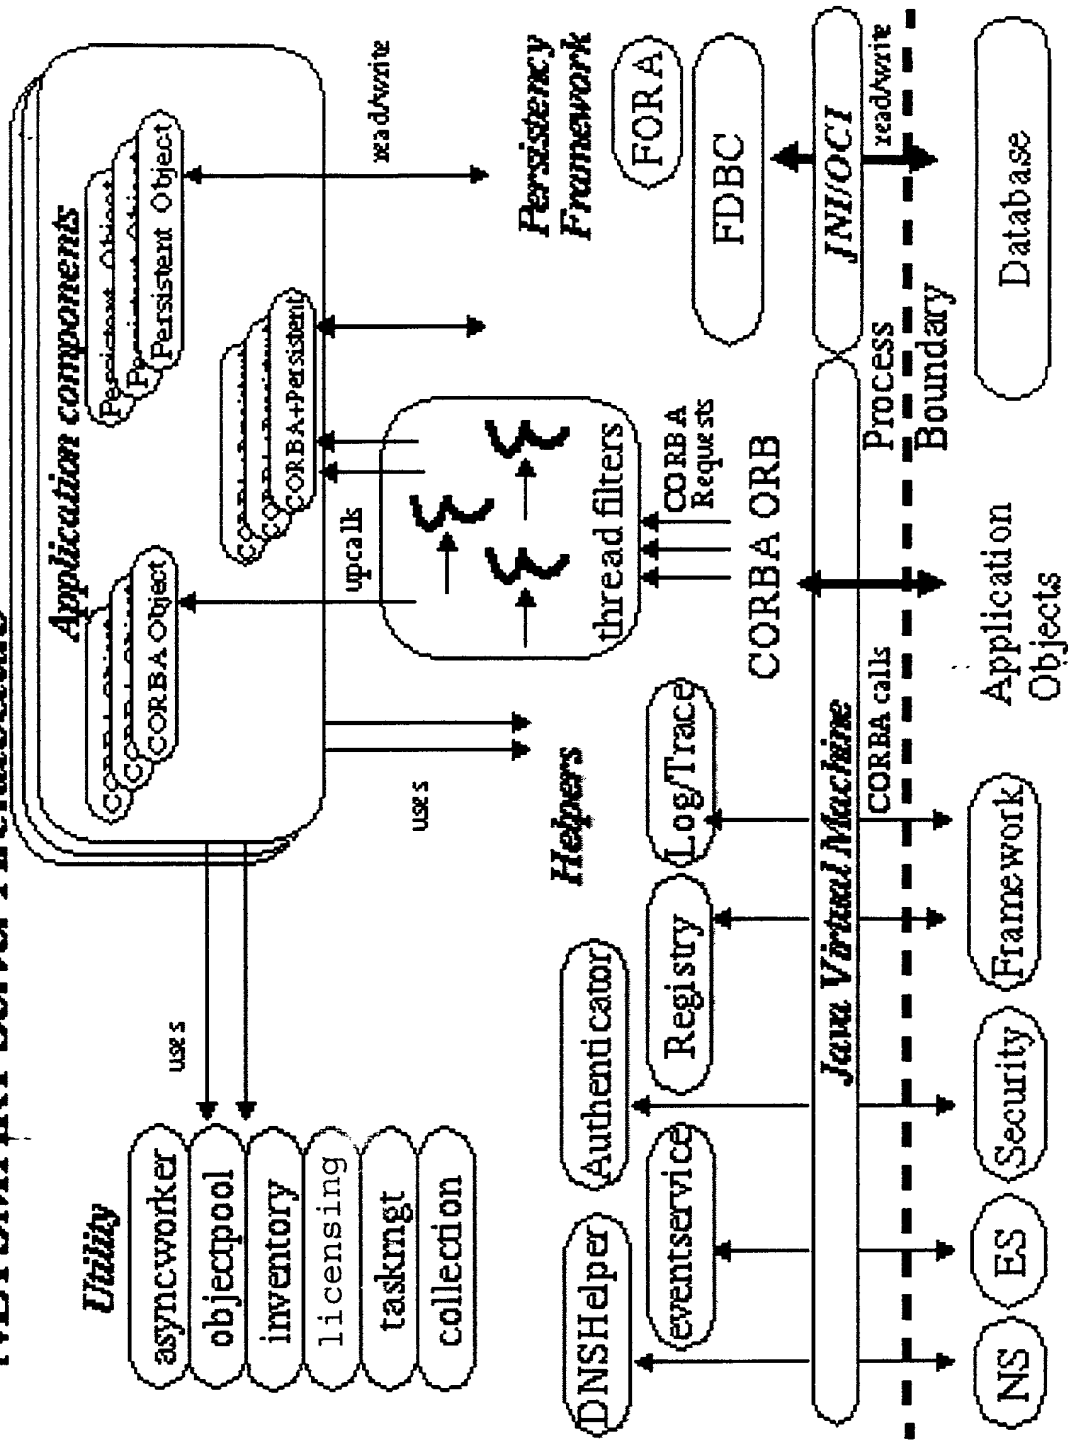


Figure 37

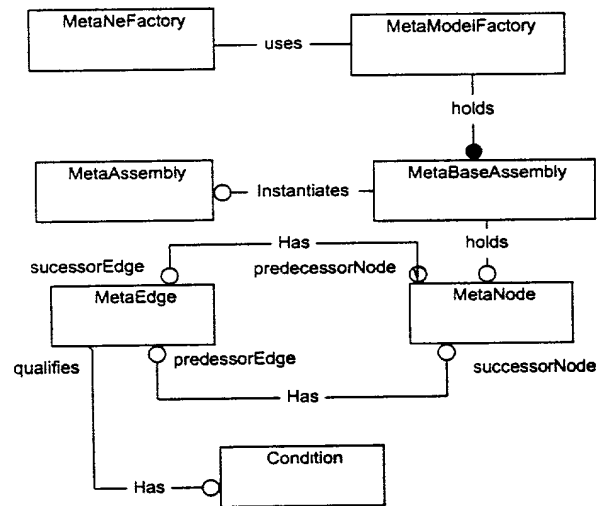


Figure 38

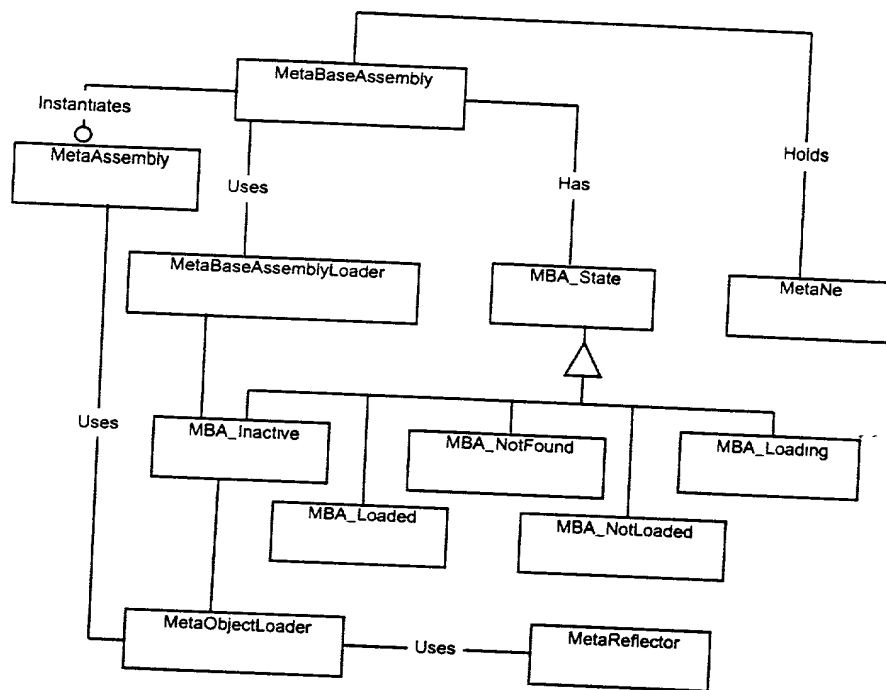


Figure 39

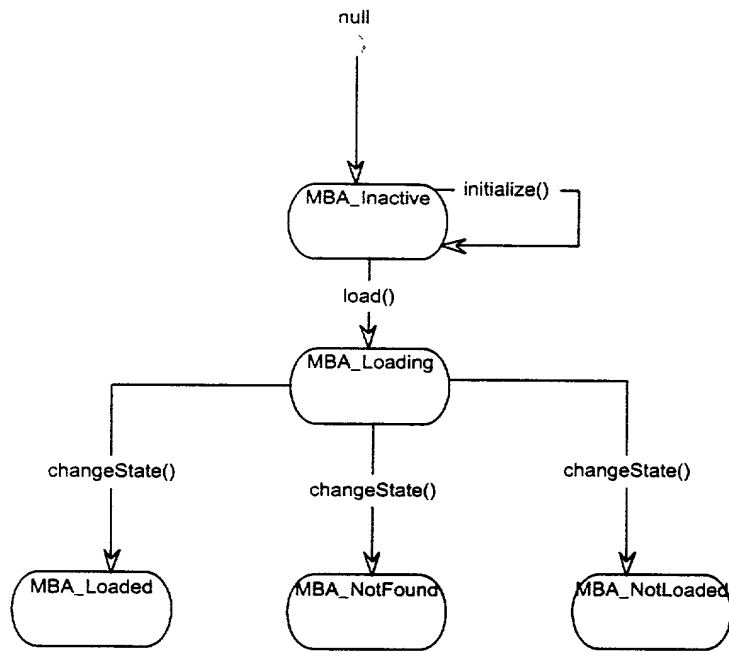


Figure 40

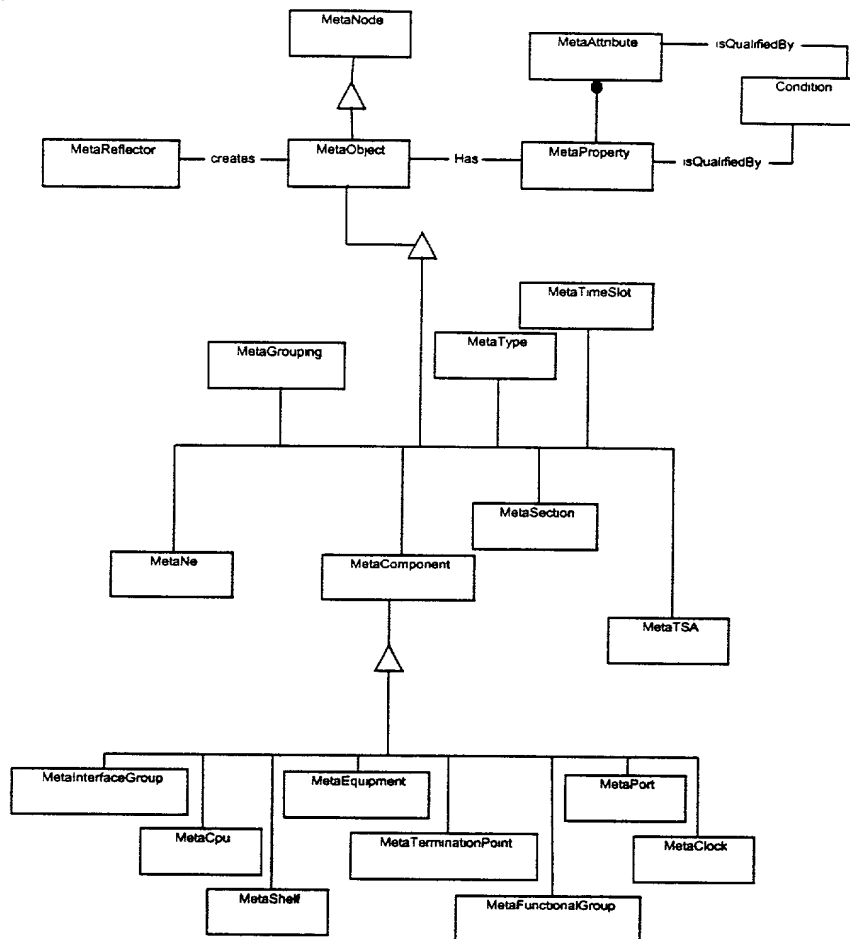


Figure 41

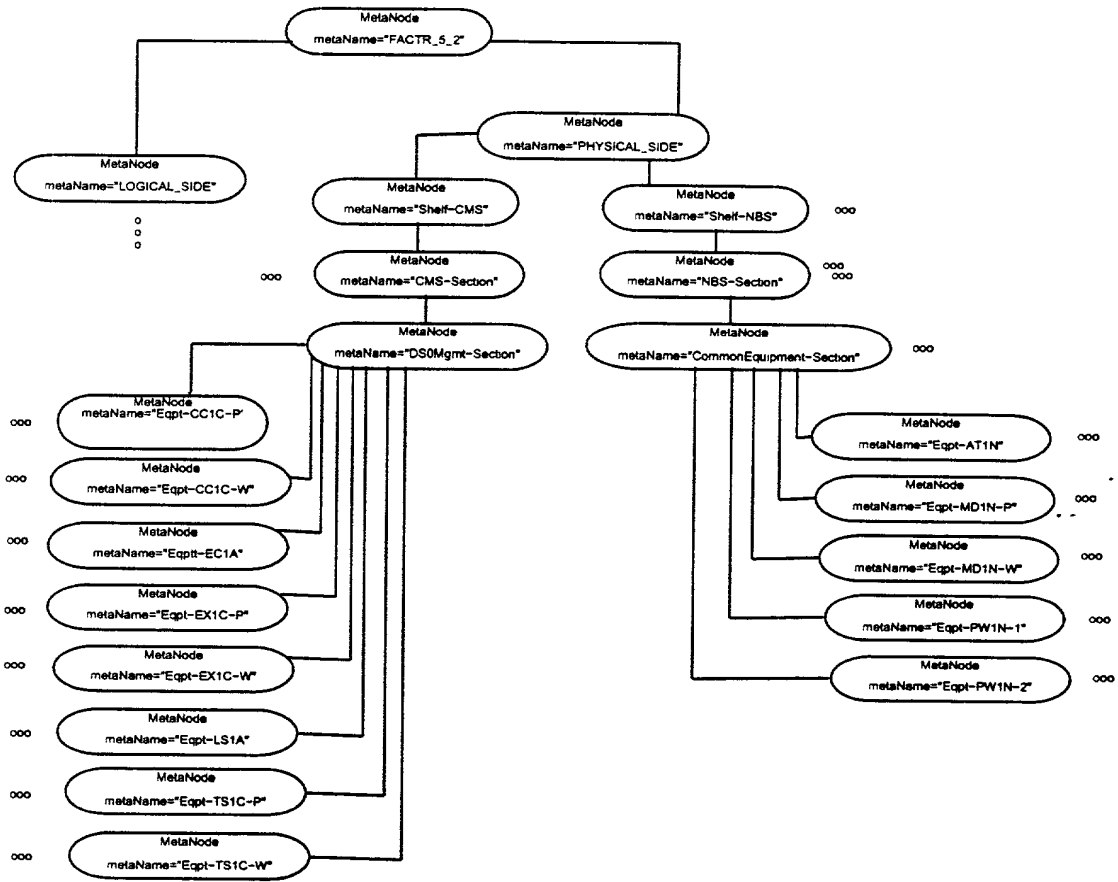


Figure 42